












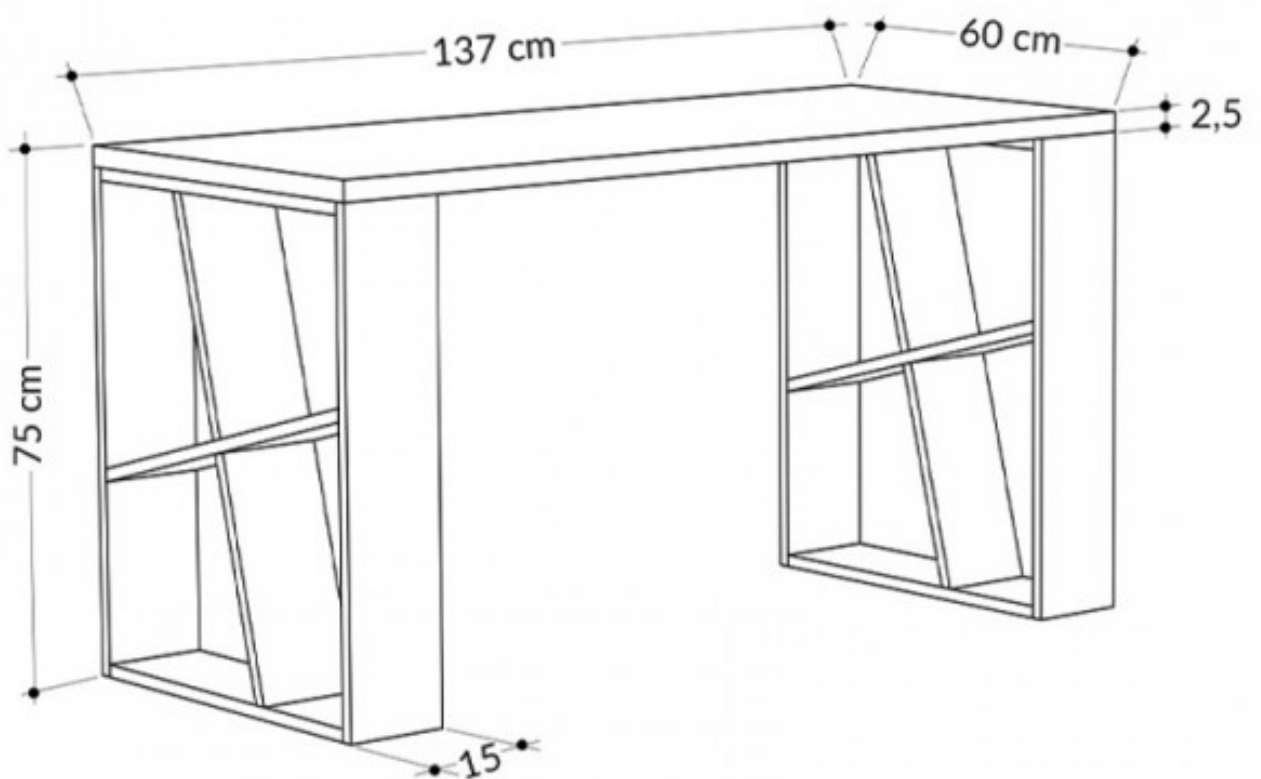



GP037-0019,1






A22 Minifix k18  24x	A23 Minifix M10  16x	A05 Minifix M6  8x	A04  16x	B03  25 mm 8x
A12 Allen  1x	A08 5mm  C2-8x	A06 18mm  C2-32x	A69 P.D.  16x	

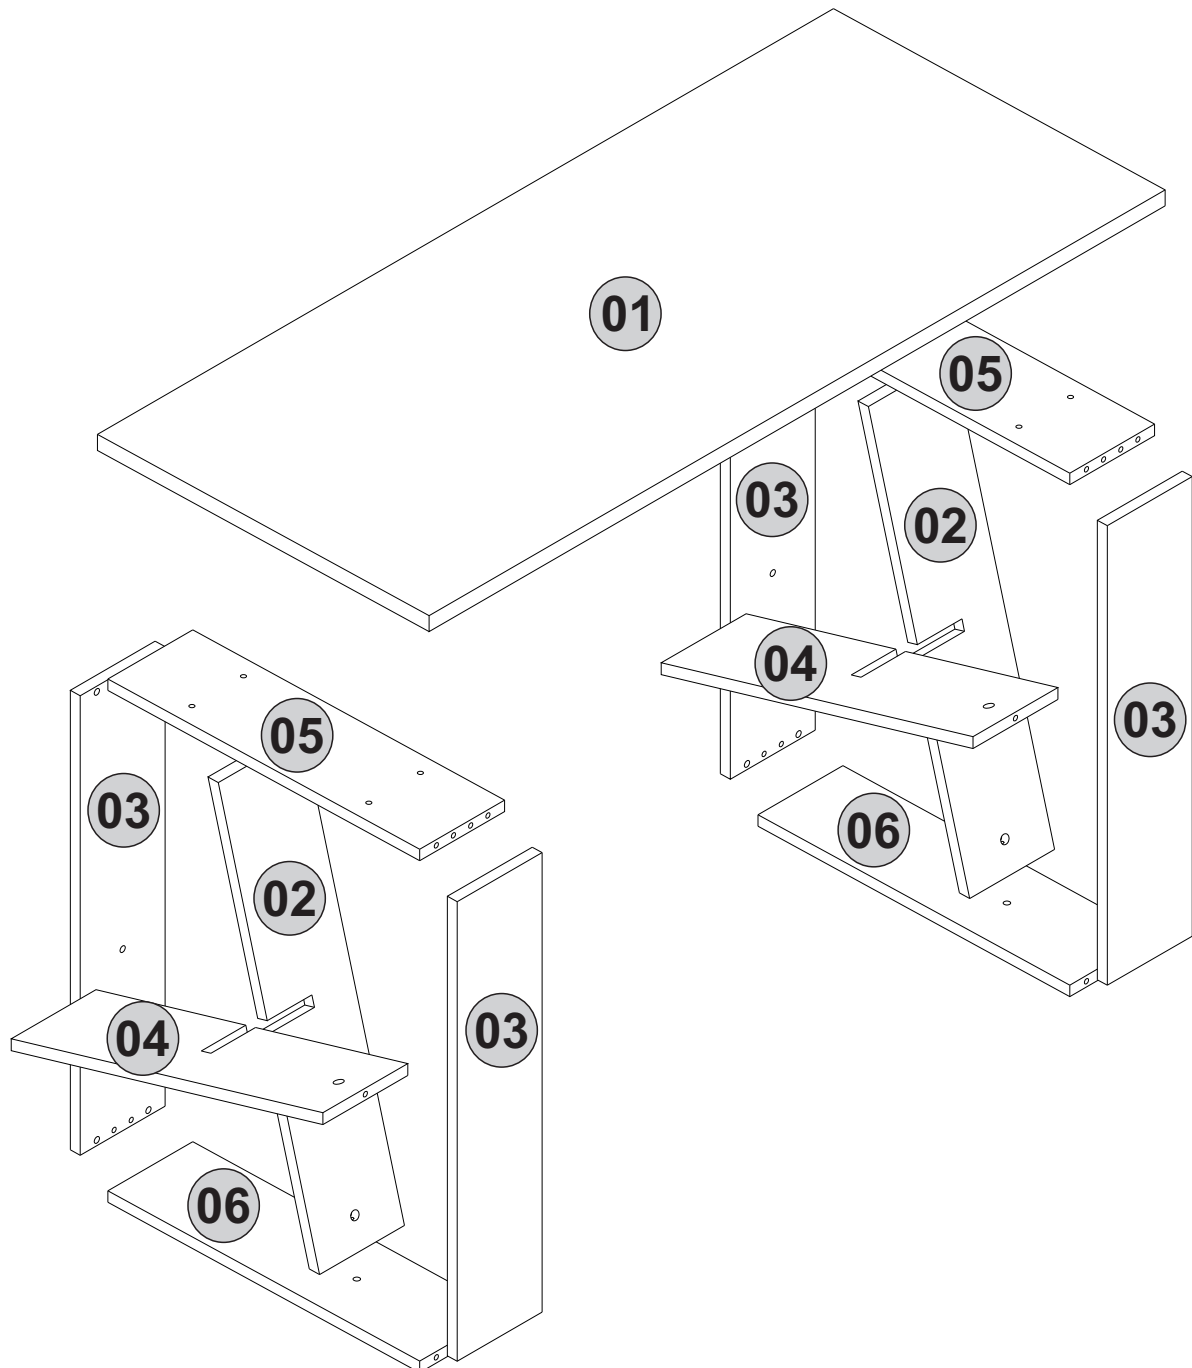


1. step

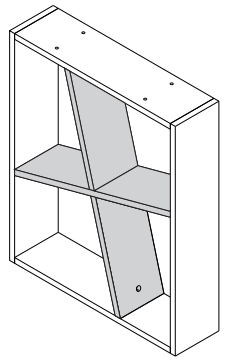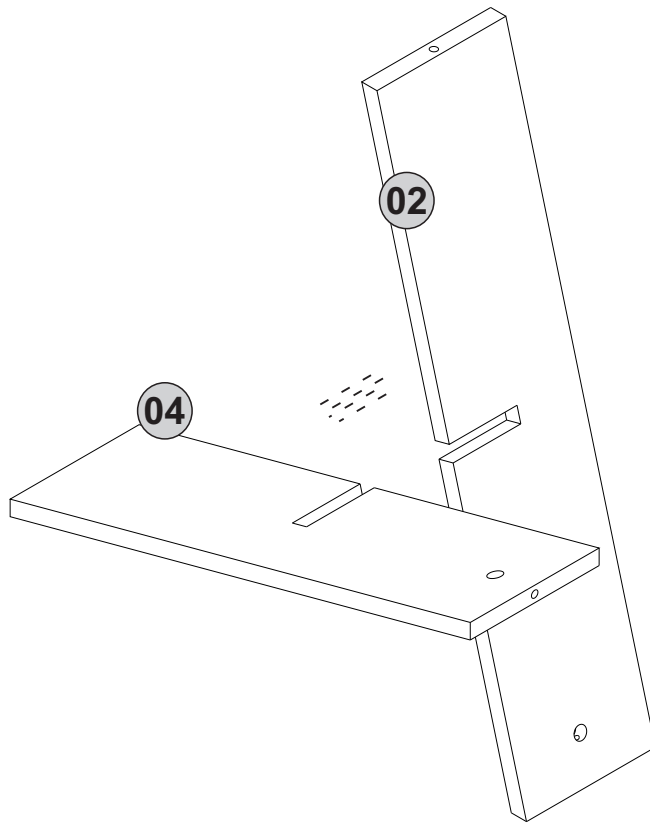


2. step

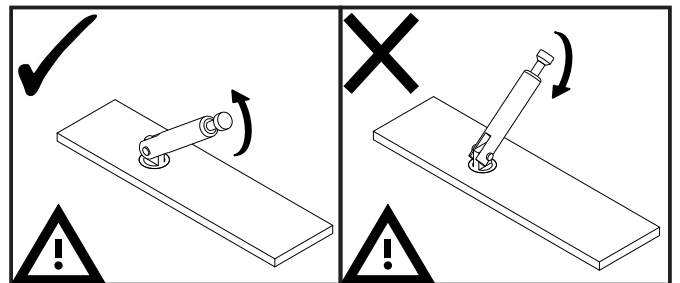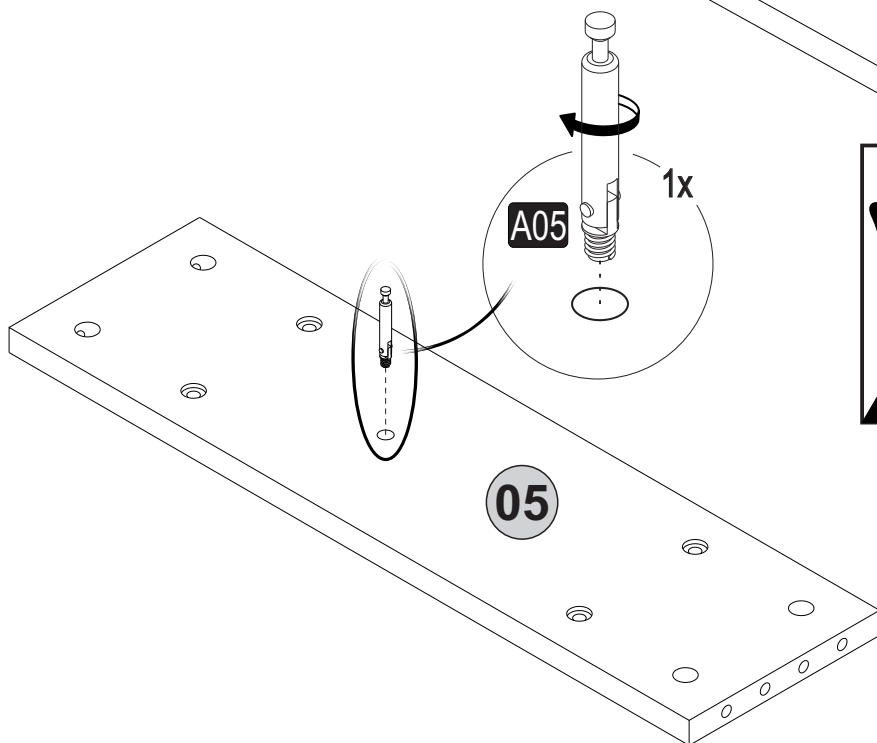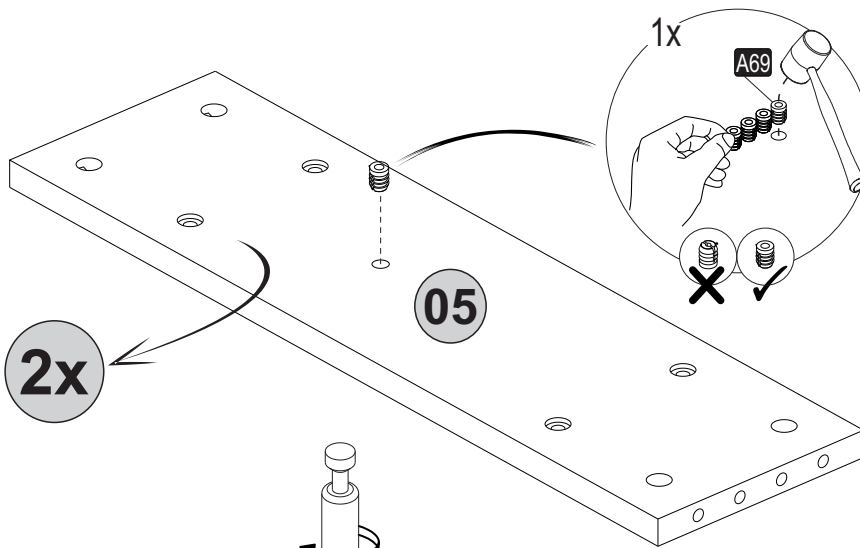


3. step

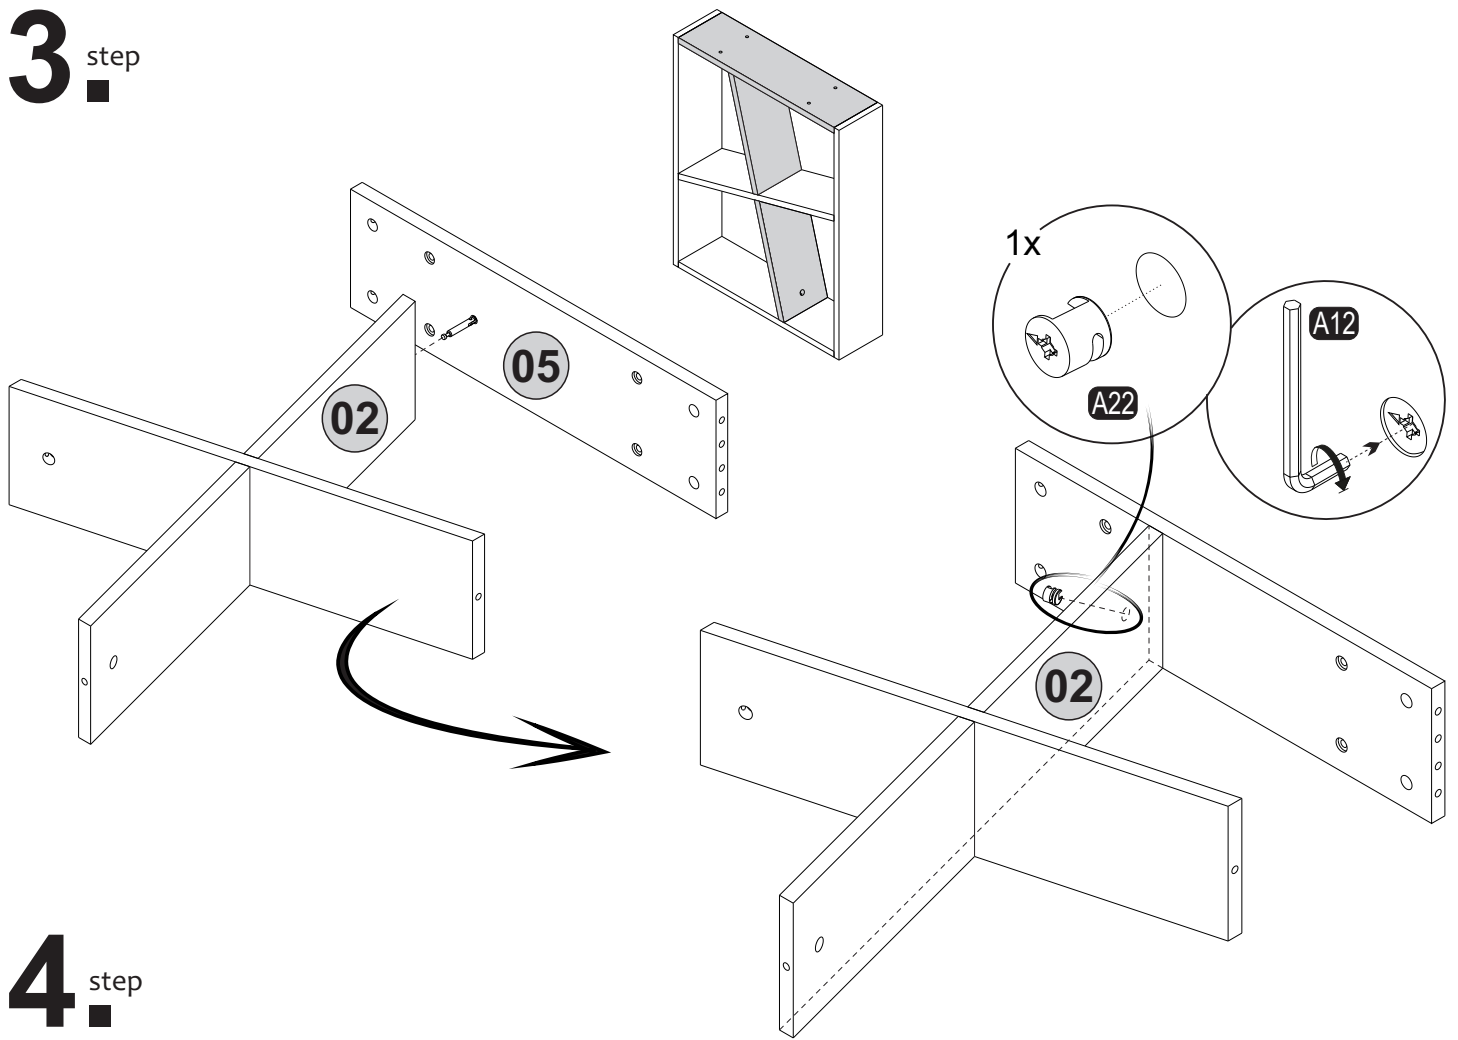


4. step

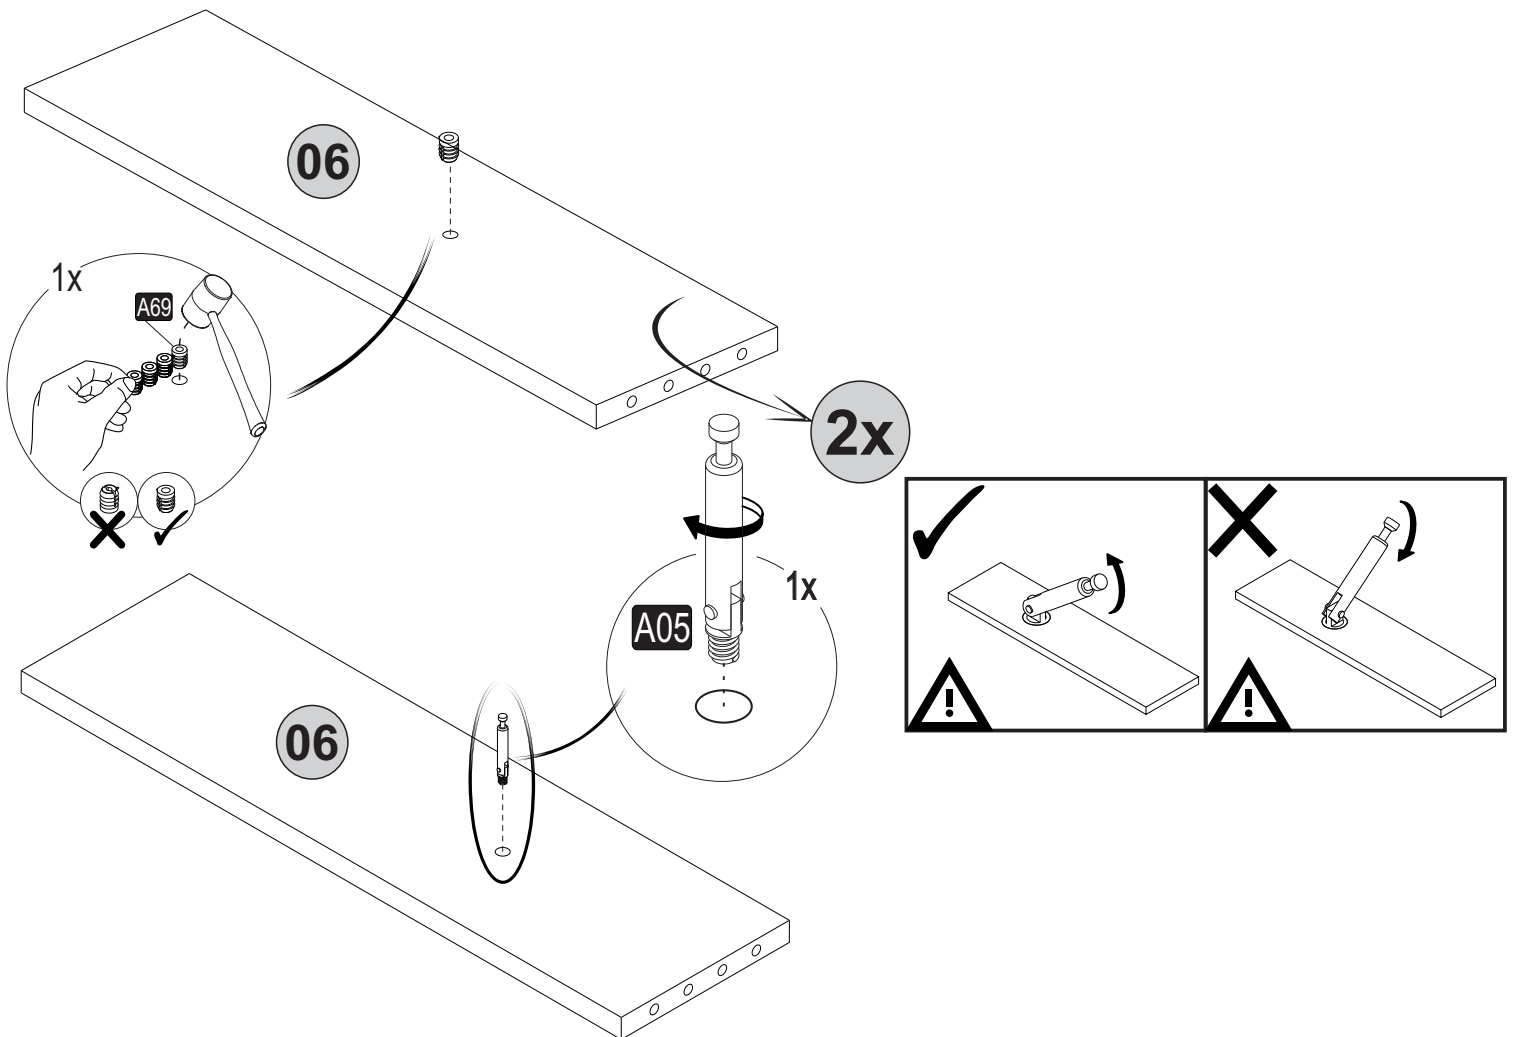



5^{step}

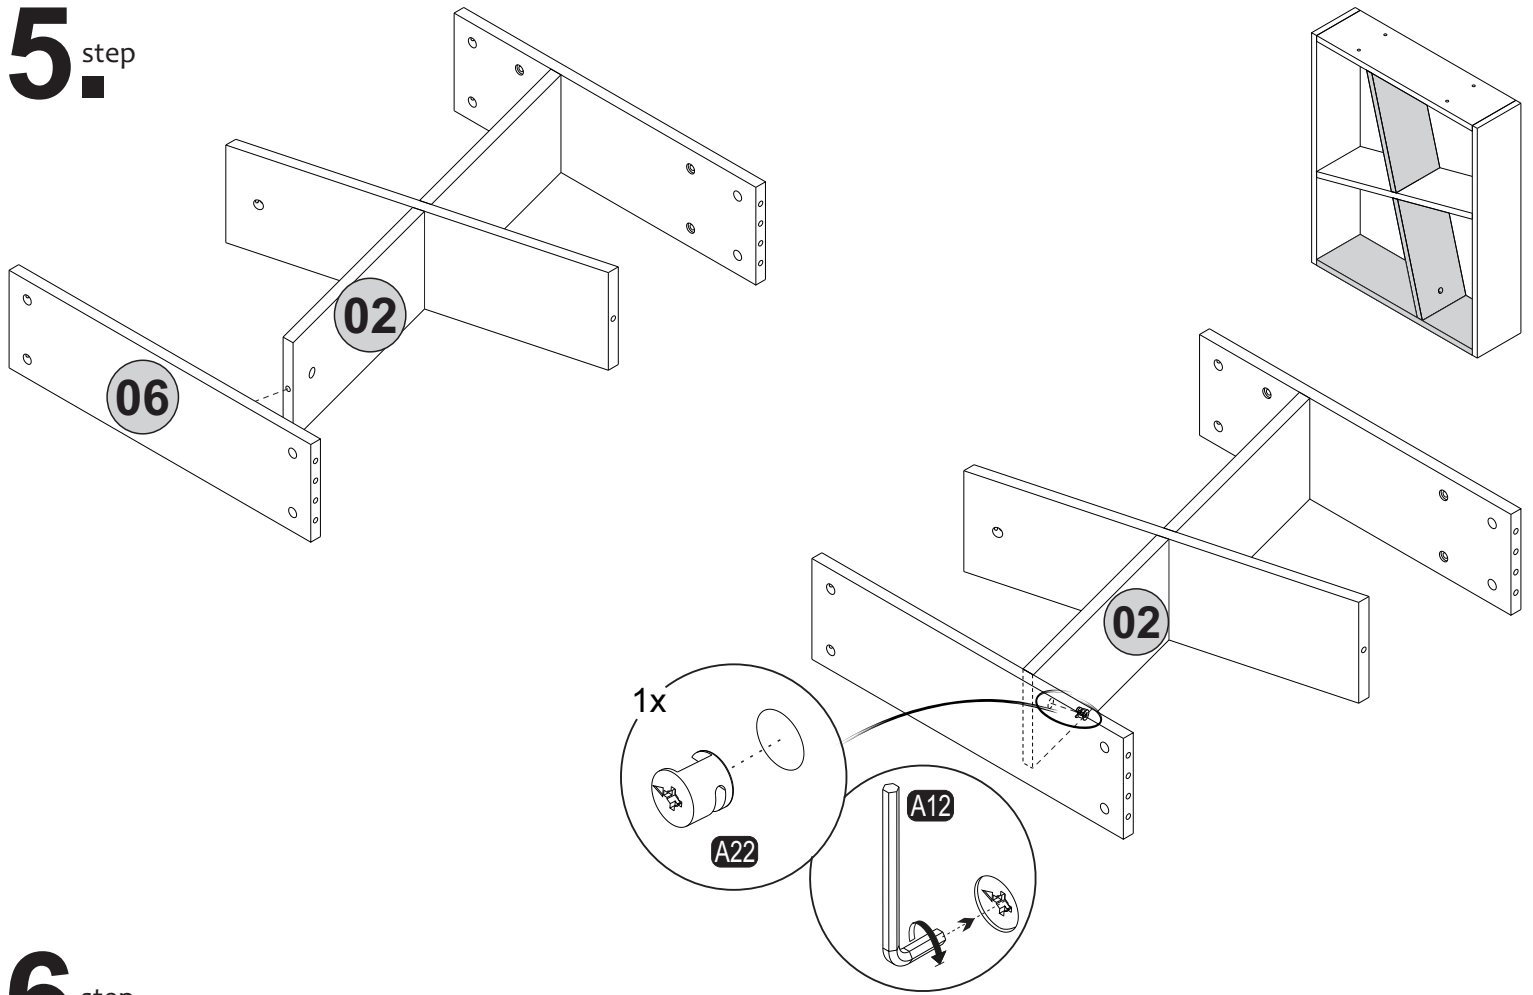


6^{step}

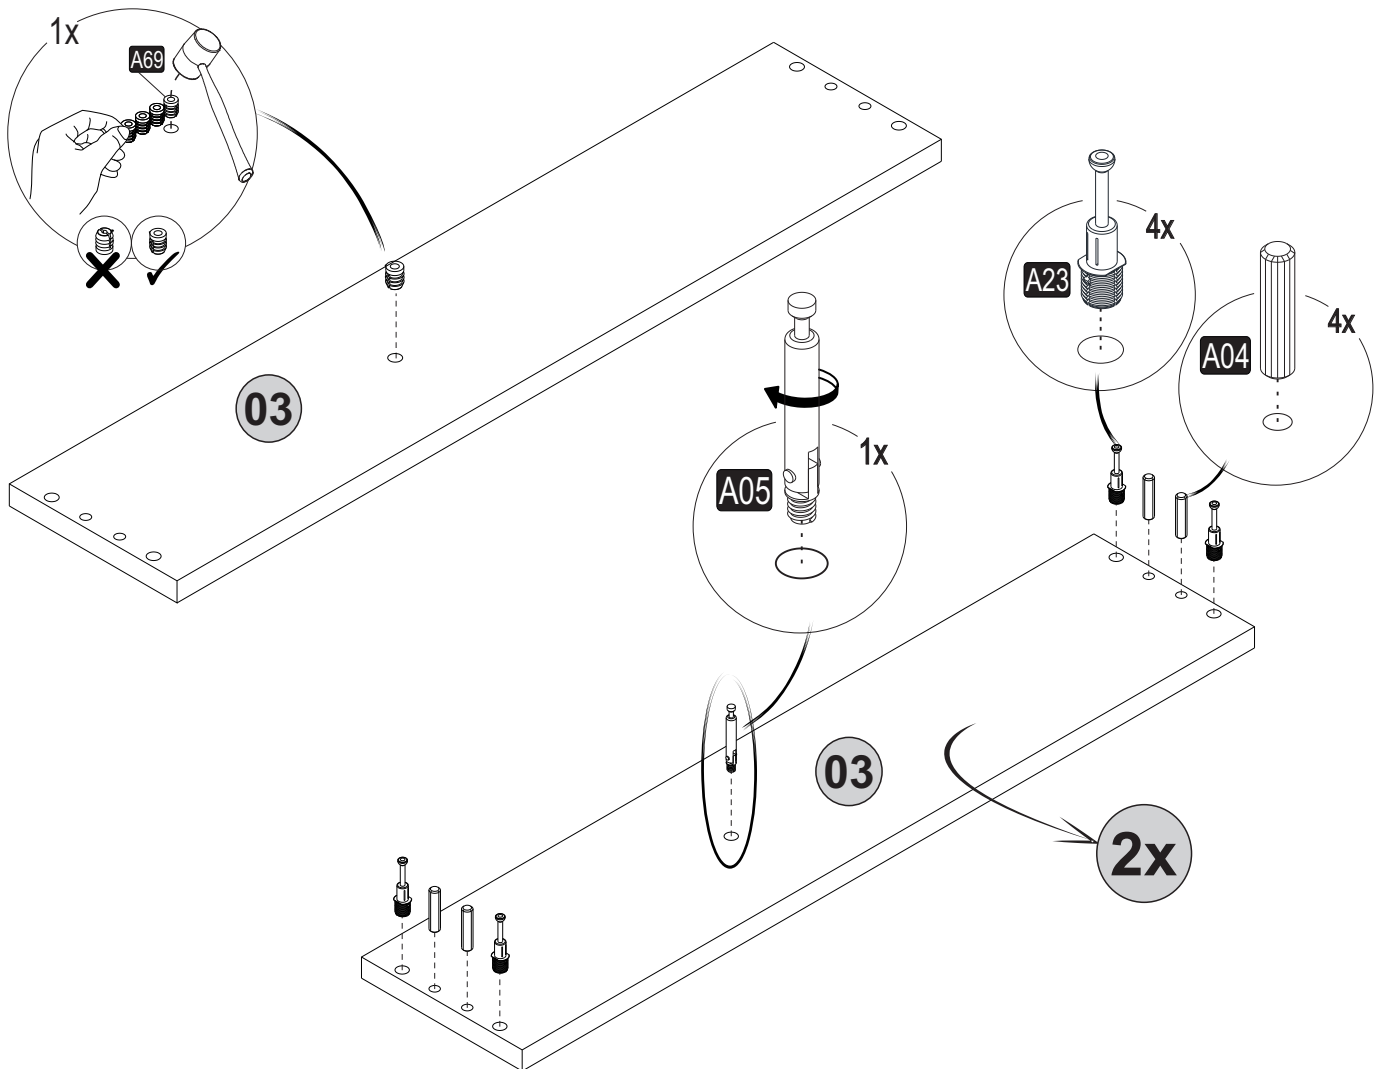


7 step

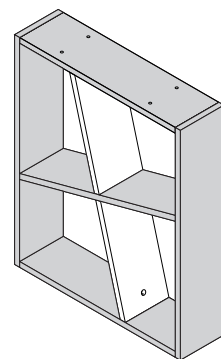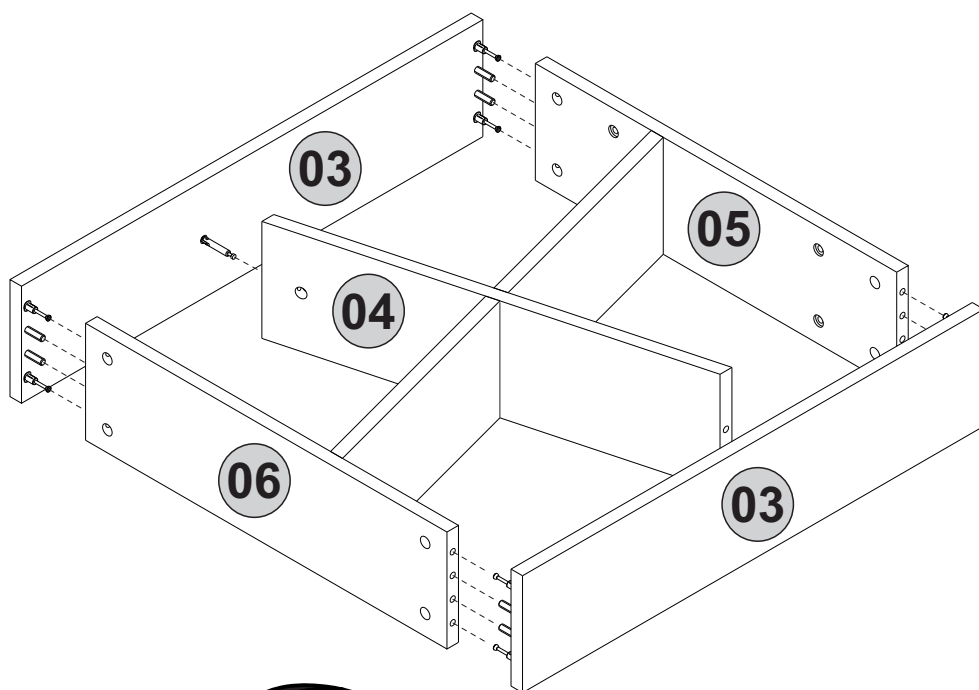

8 step

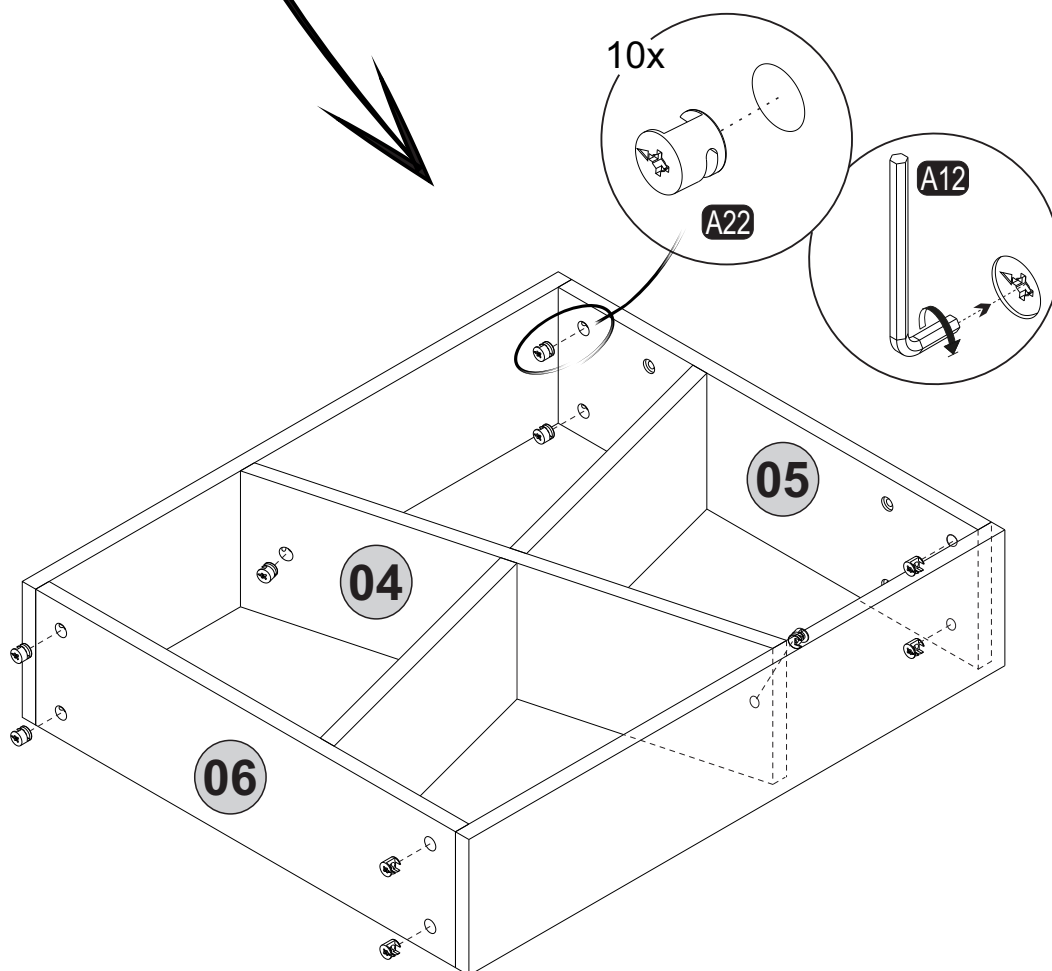

9. step

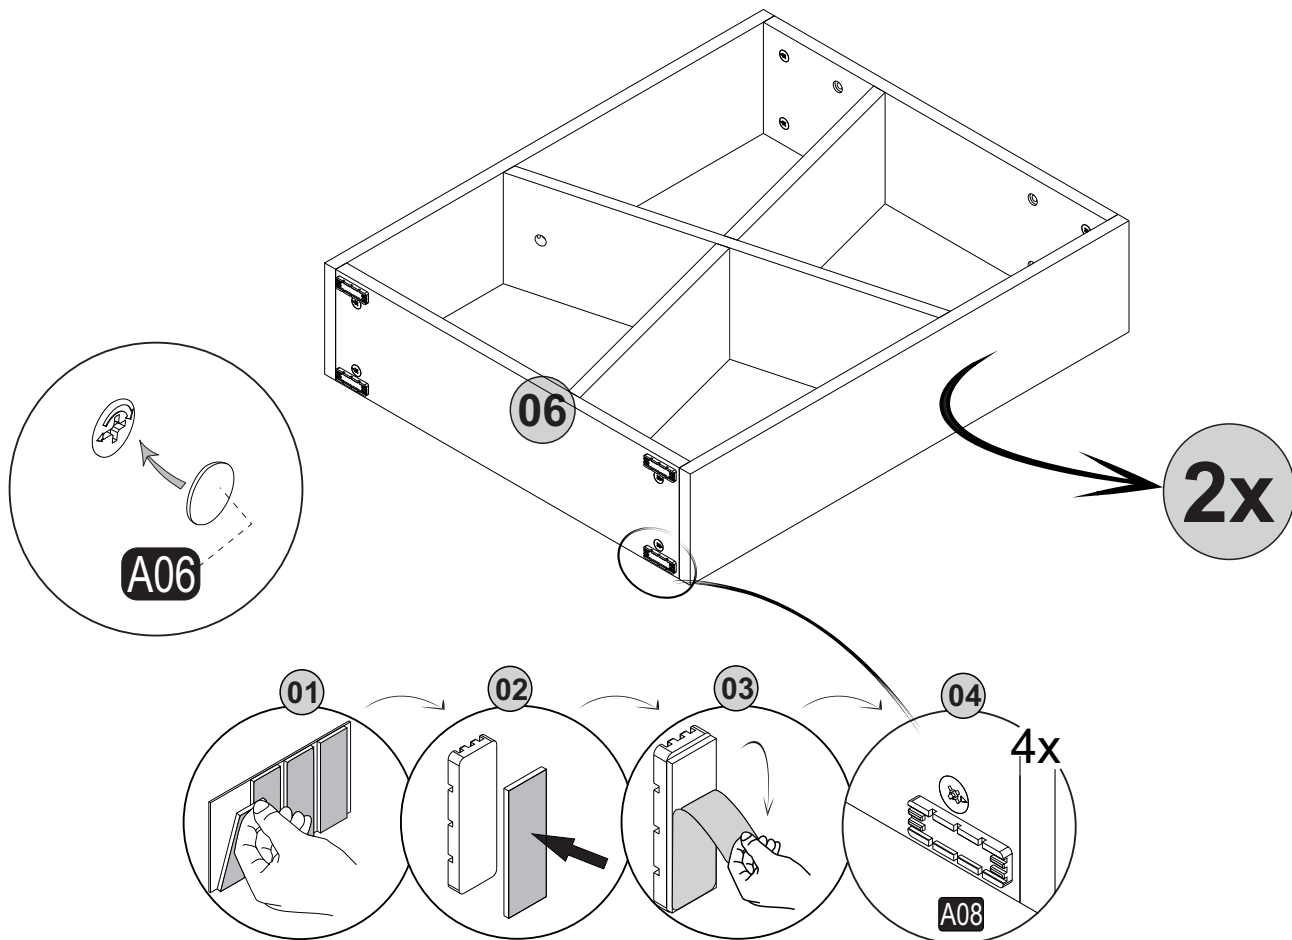

10. step

