






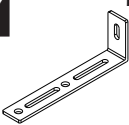


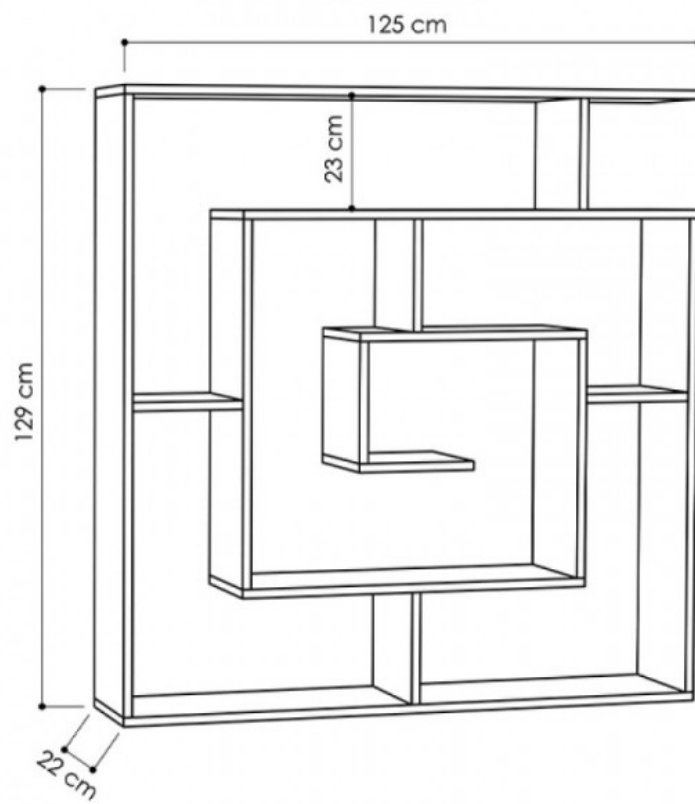

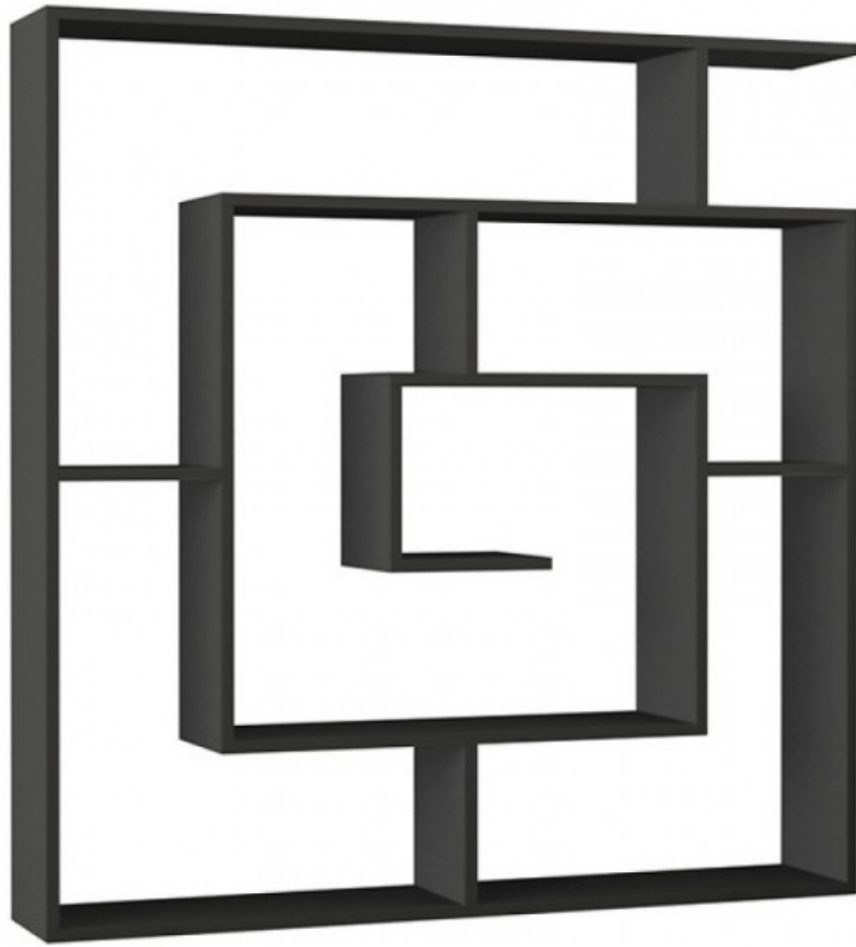





GP037-0022,3




A13 50mm 	A12 4 sw 	A26 Allen 	A08 Pabuç 	Y03 Ctpb 
A87 40x 15x90x30 	A17 1x 4X50 	A16 1x DbØ8 	A18 2x 3,5x18 	A06 18mm 40x 

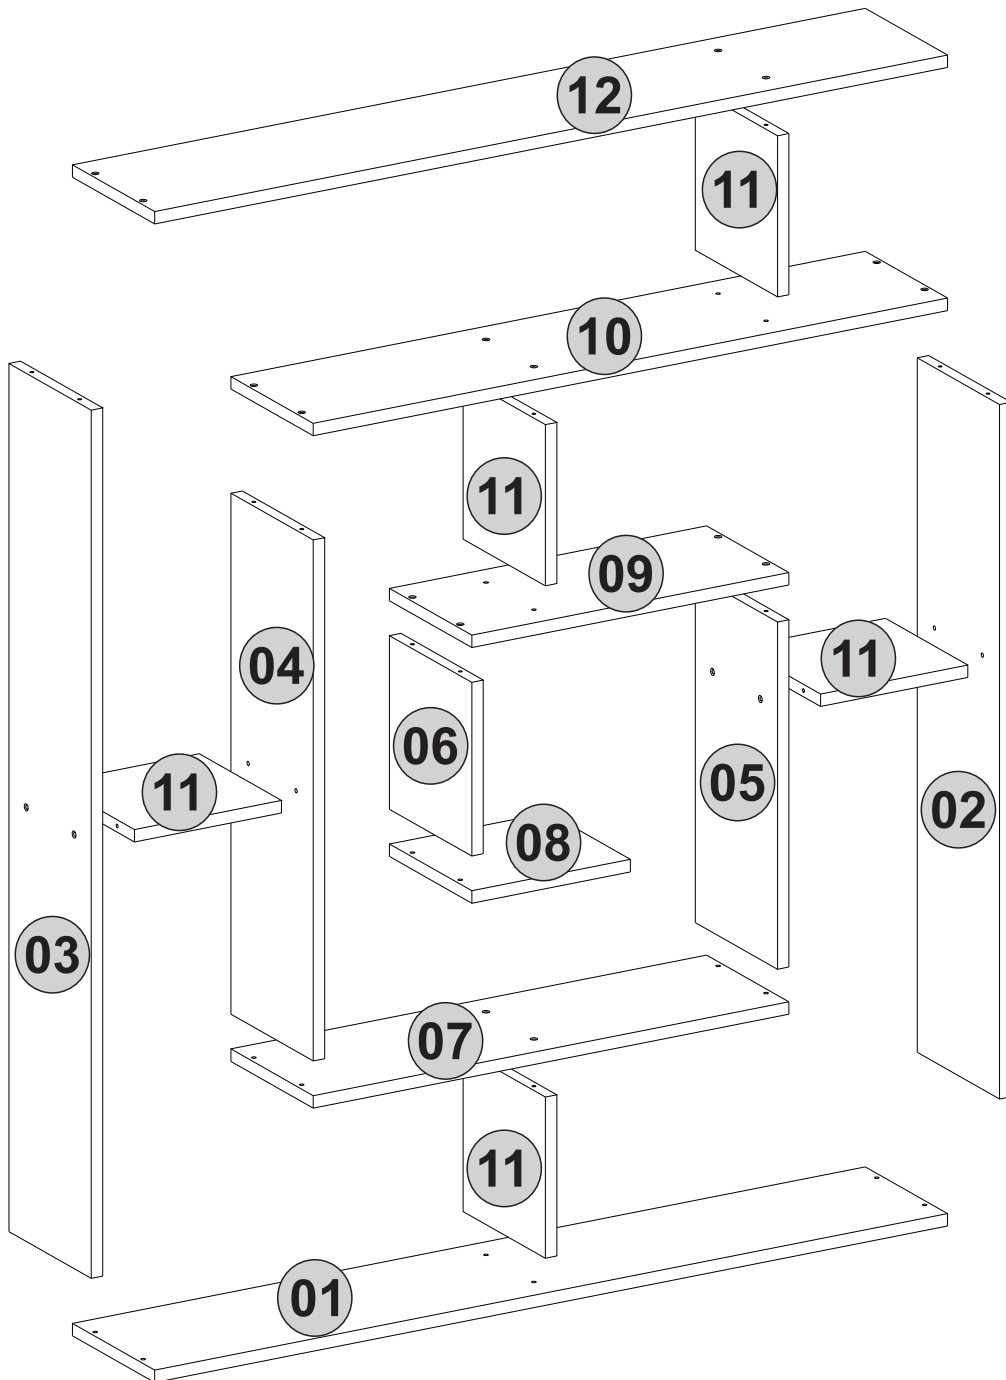


1. step

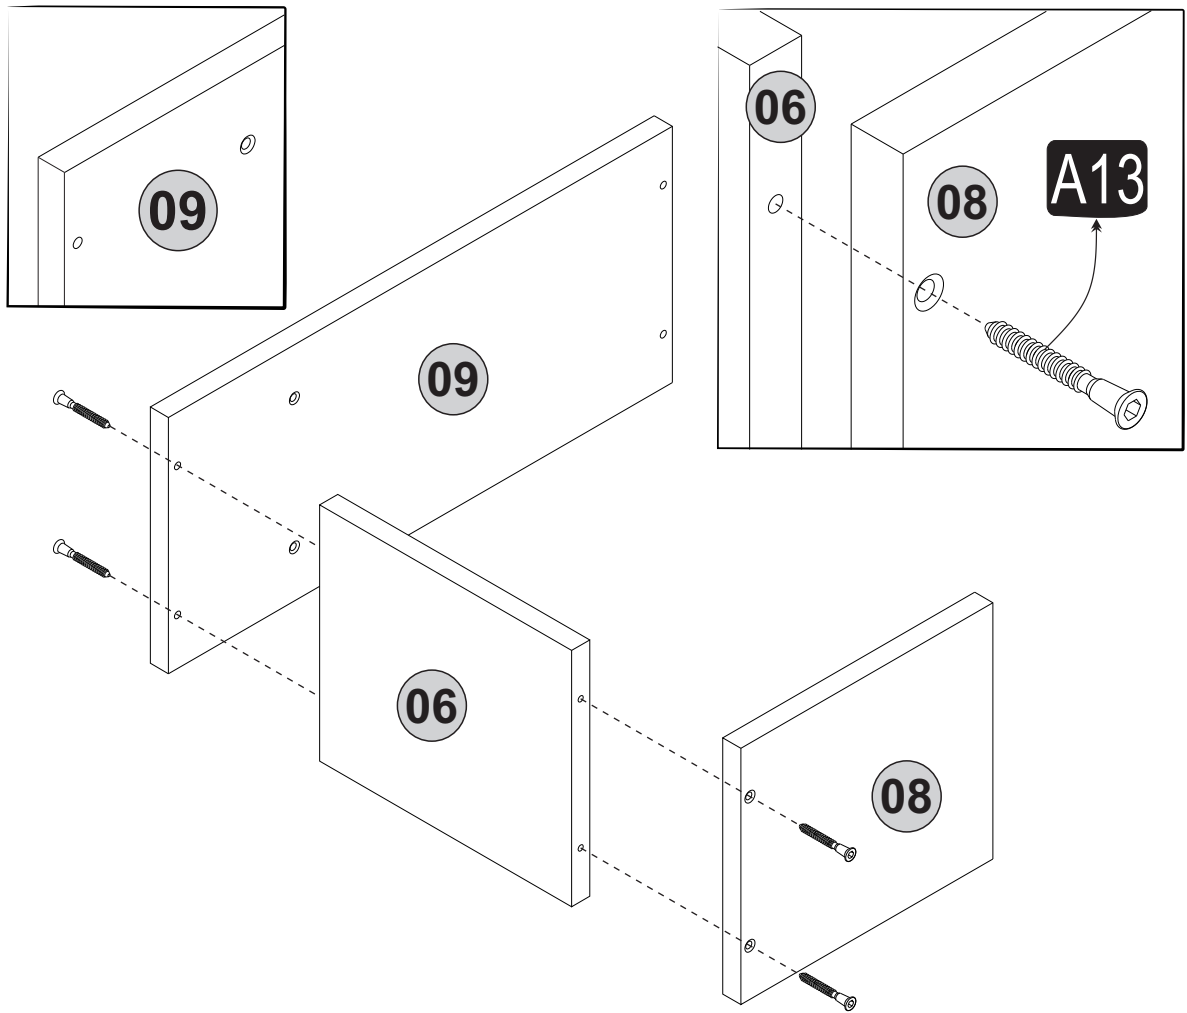


2. step

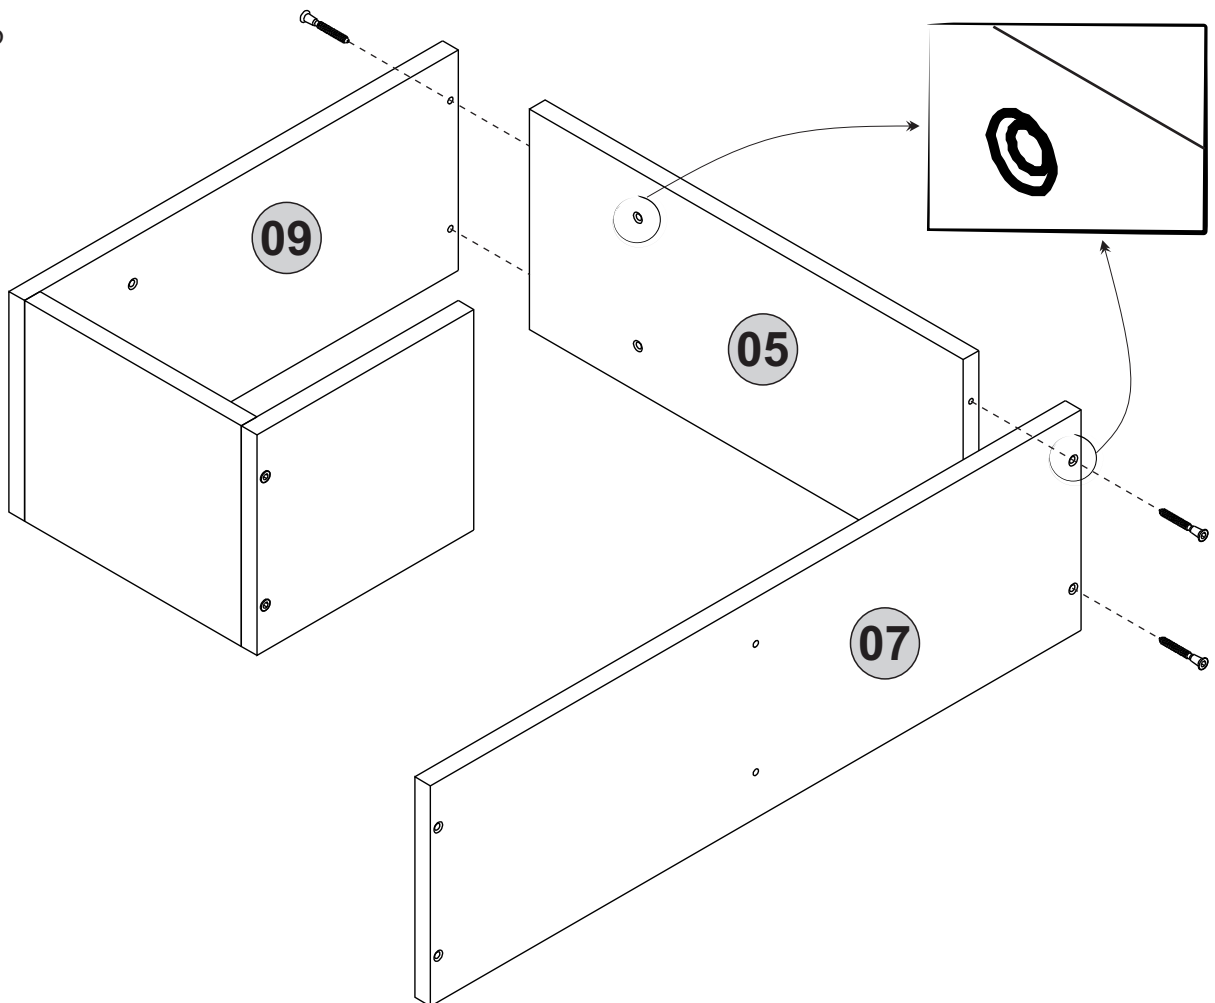


3 step

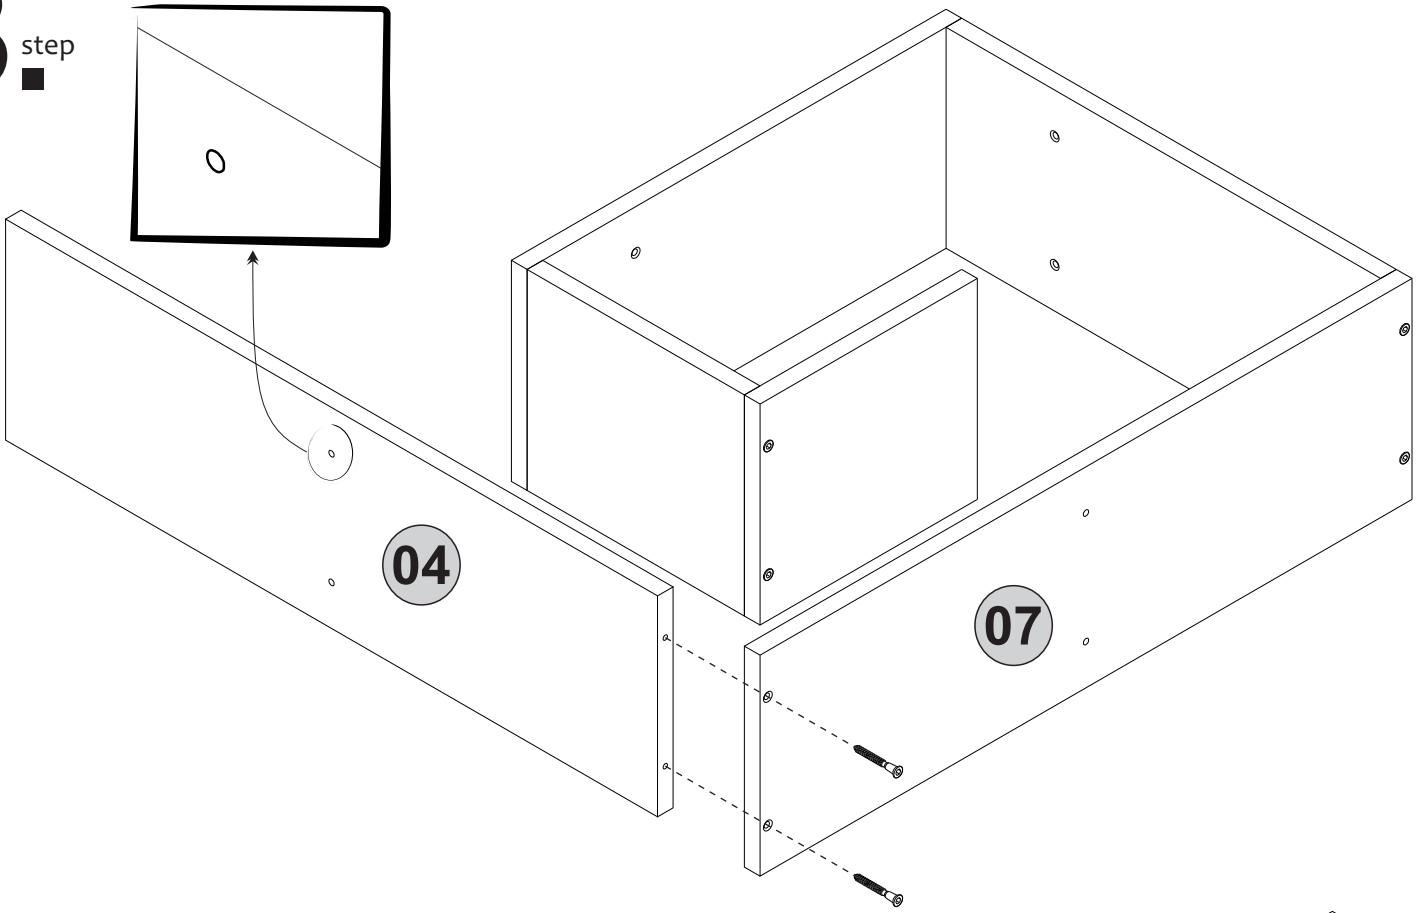


4 step

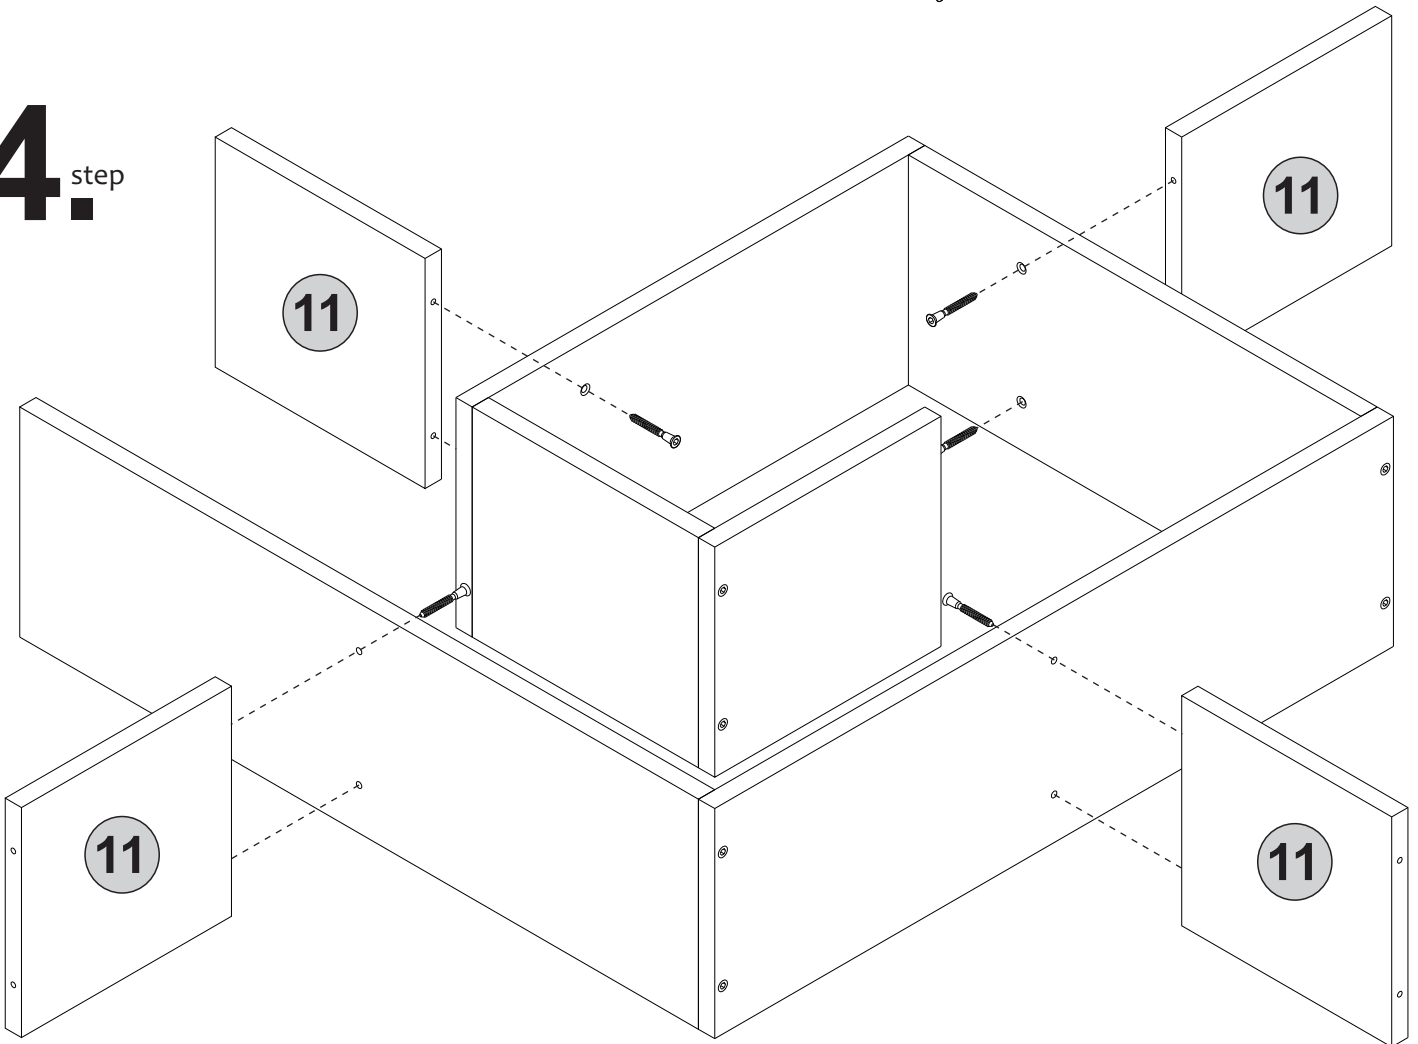




5^{step}

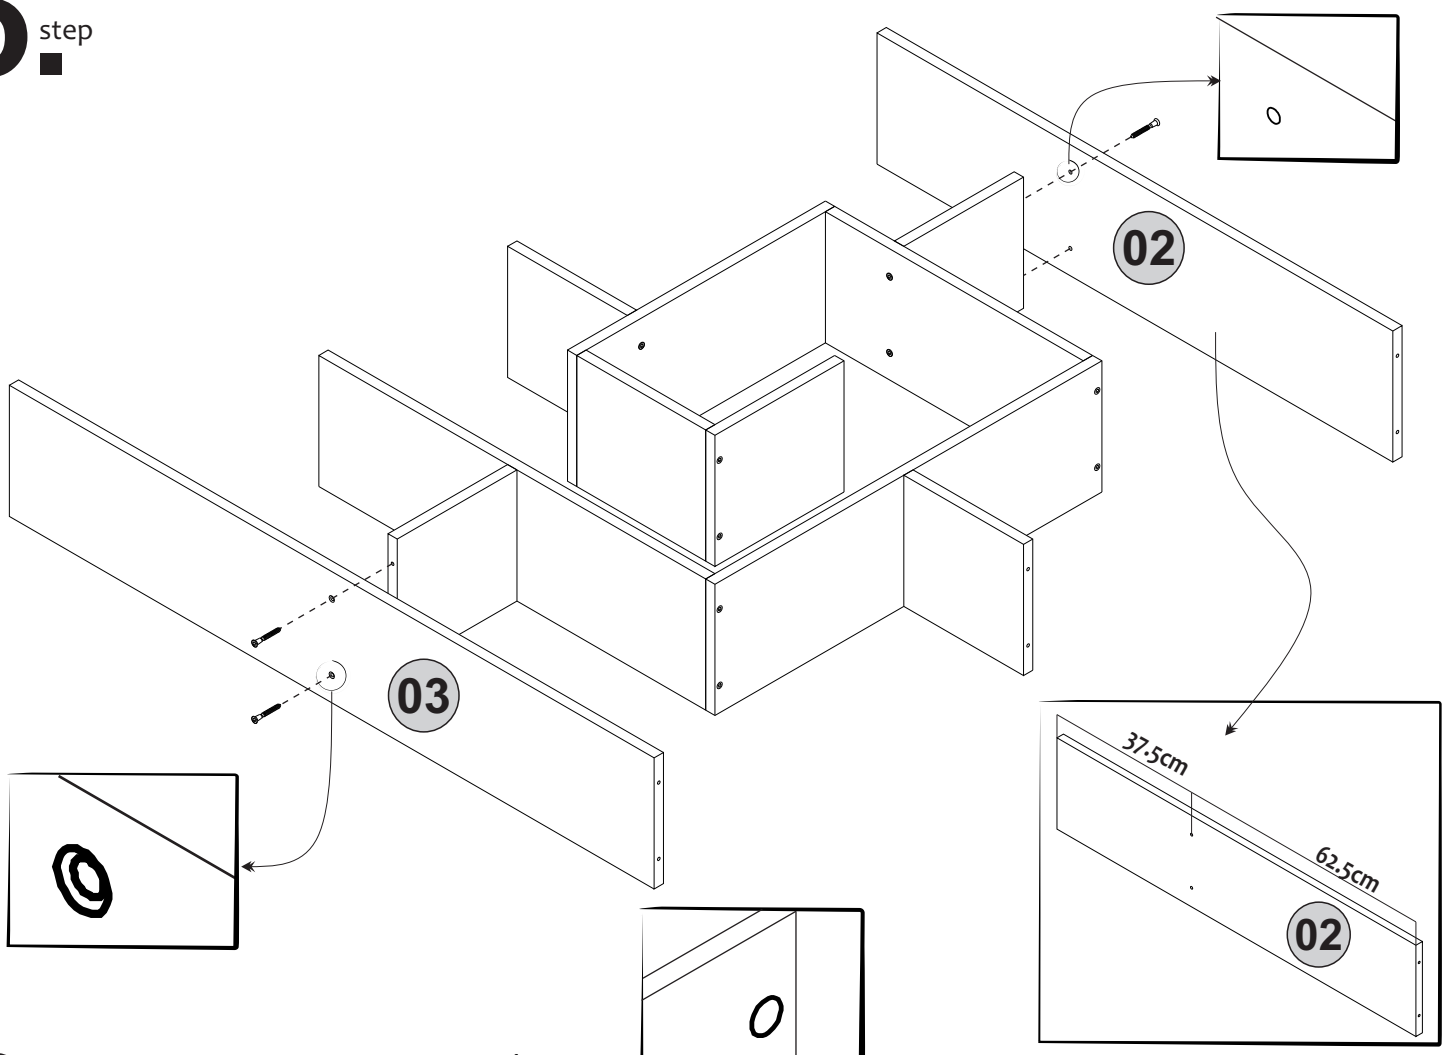

6^{step}

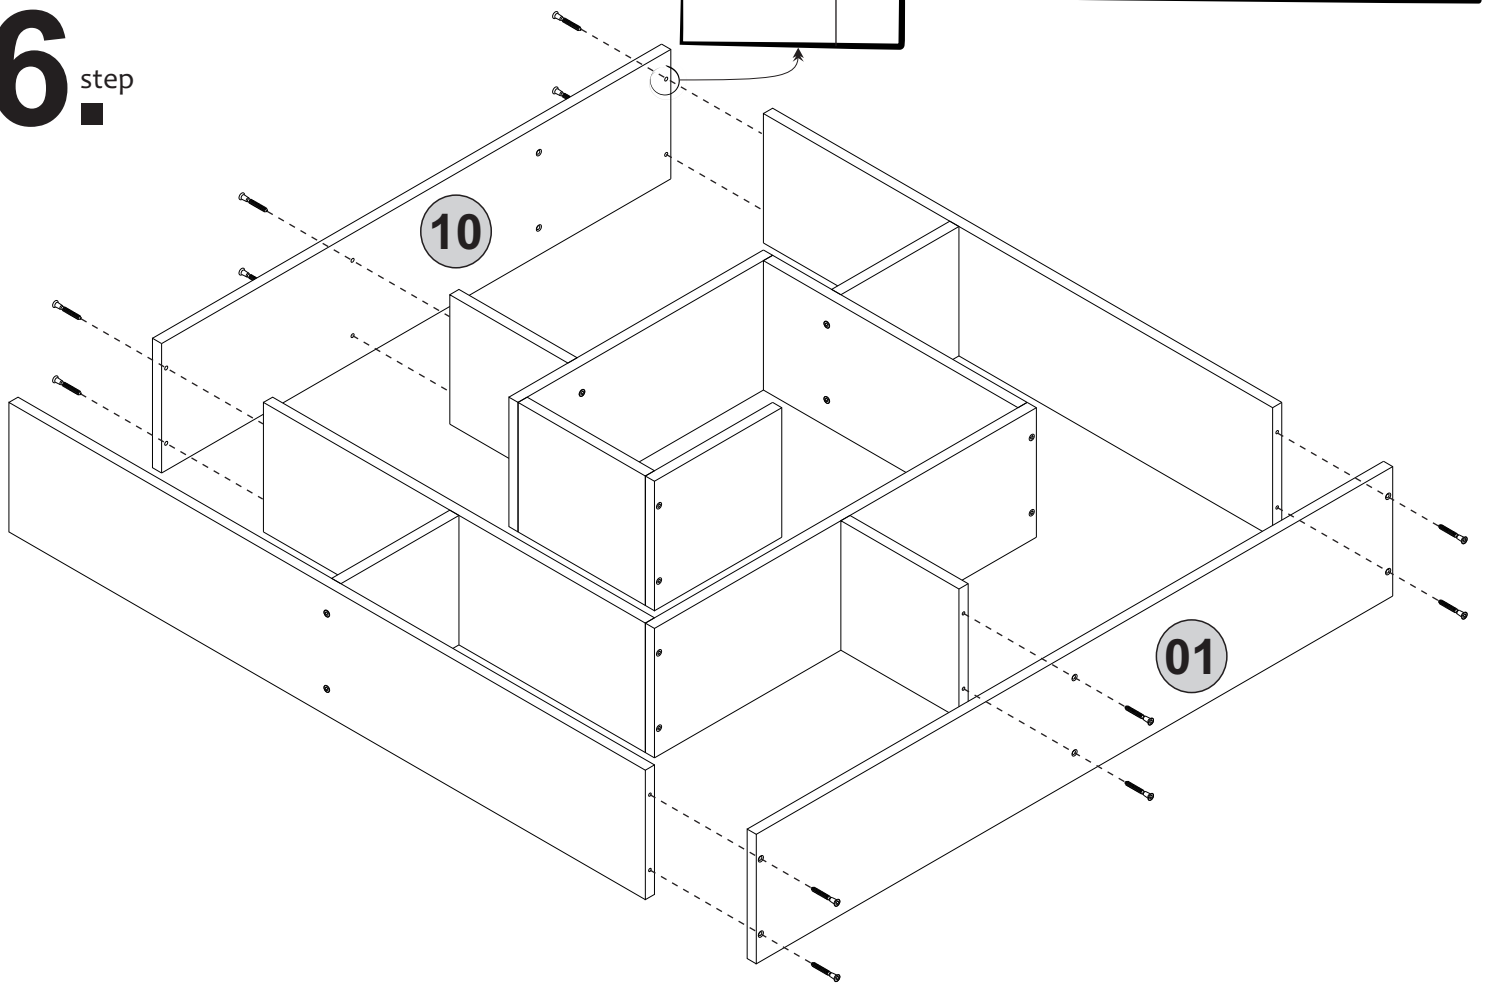

7^{step}

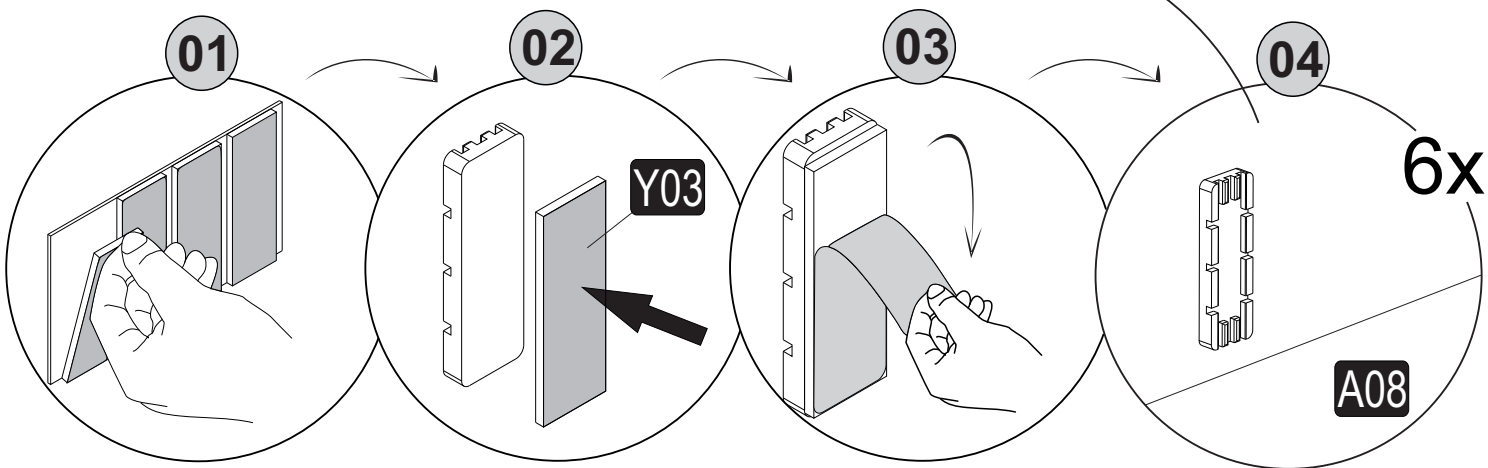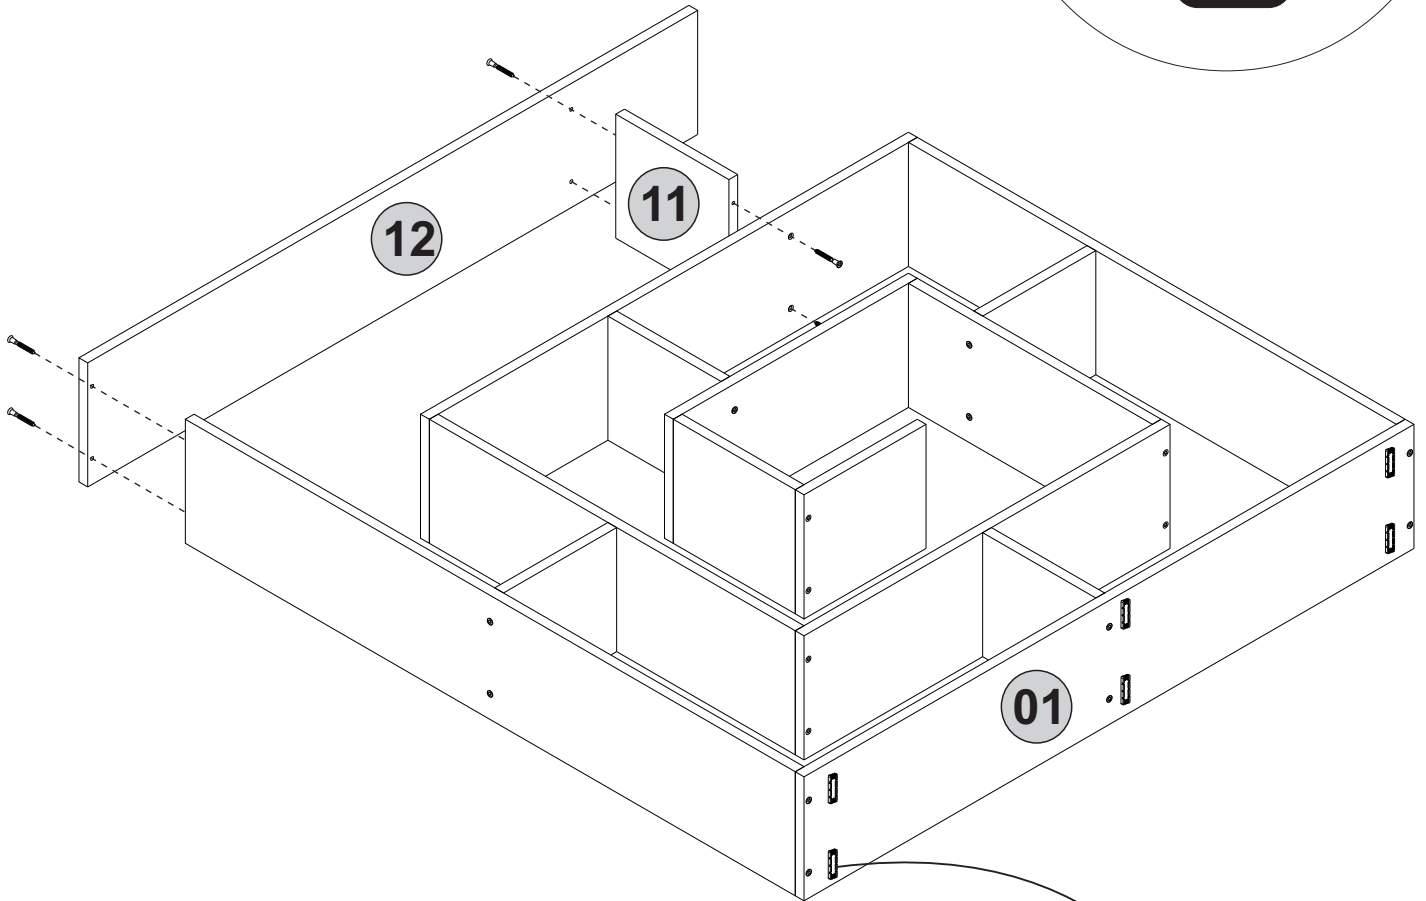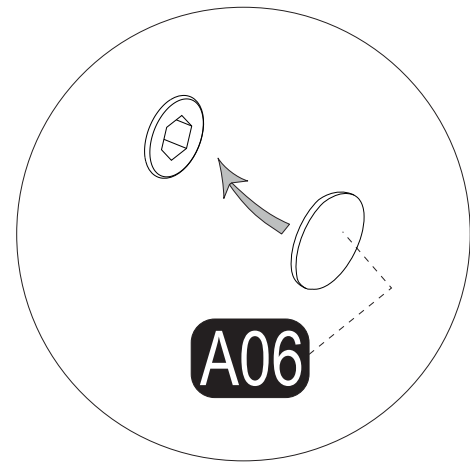

8 step

