








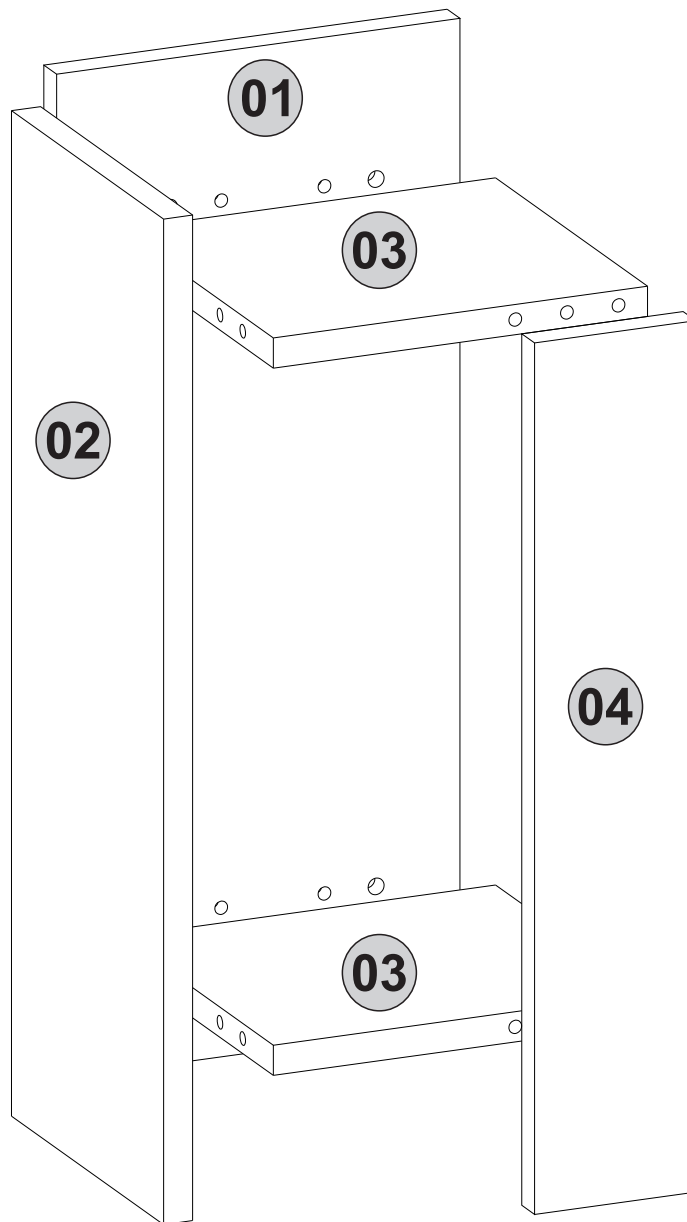


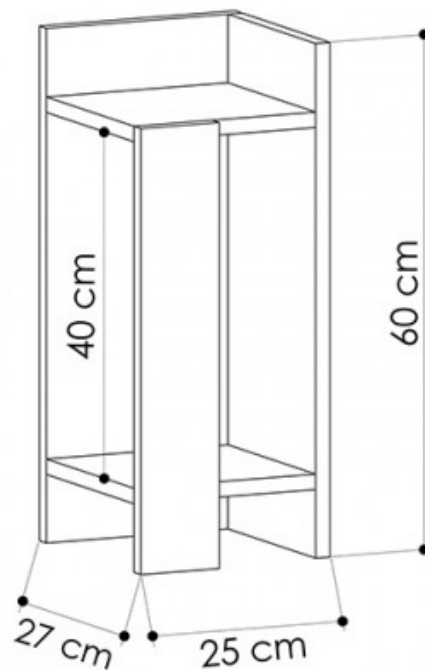



GP037-0070,3

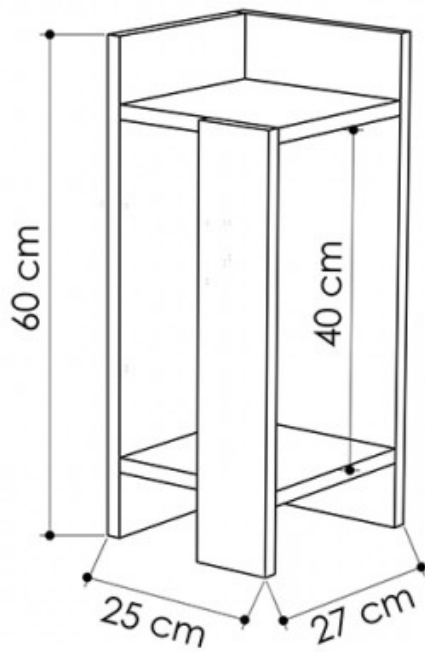



A04  10x	A06 18mm  C1-15x	A12 Minifix k18  1x	A13 50mm  3x	A22  12x
A23  12x	PB01 Kece  4x			






1. step

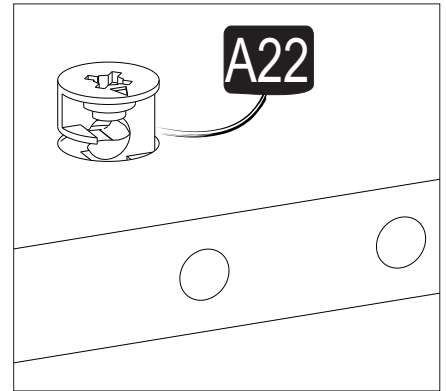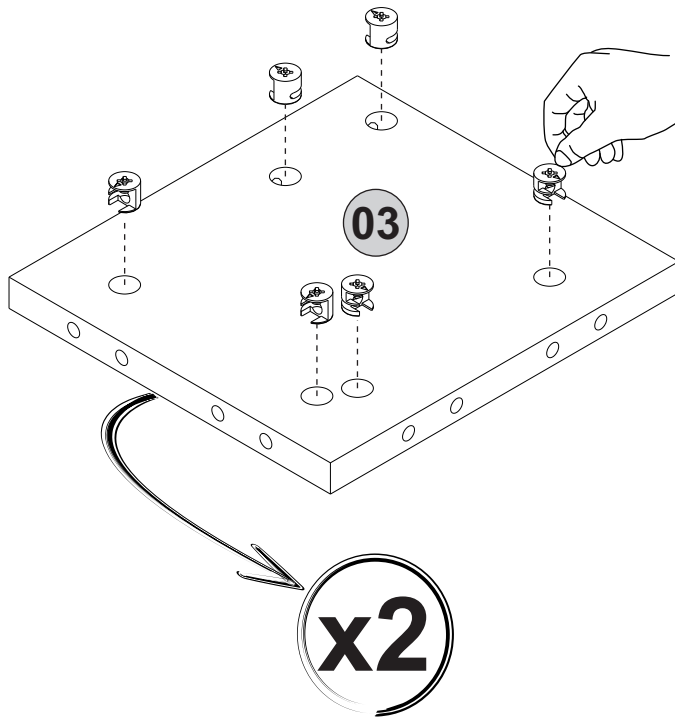



2. step

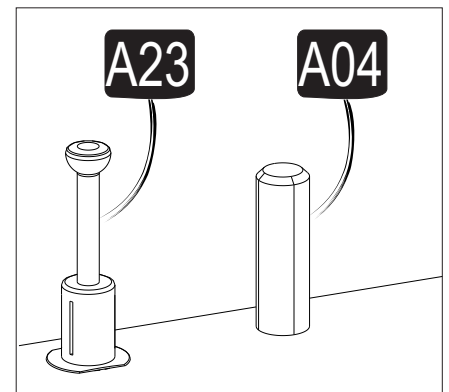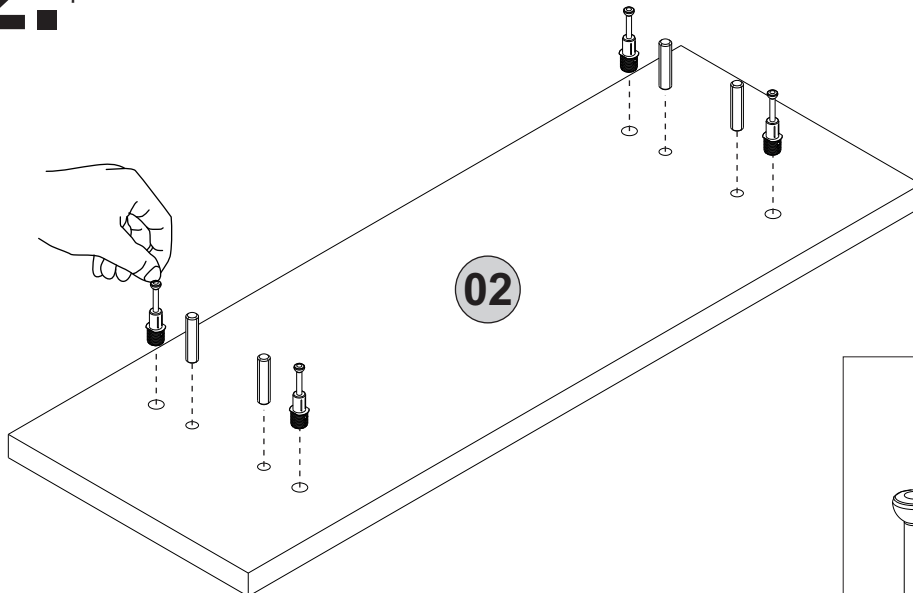




3 step

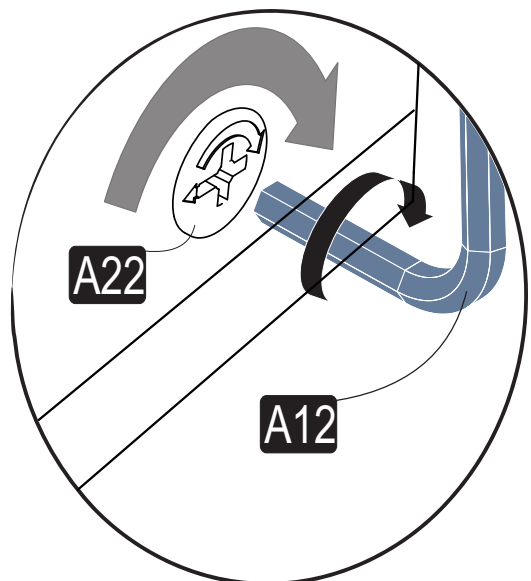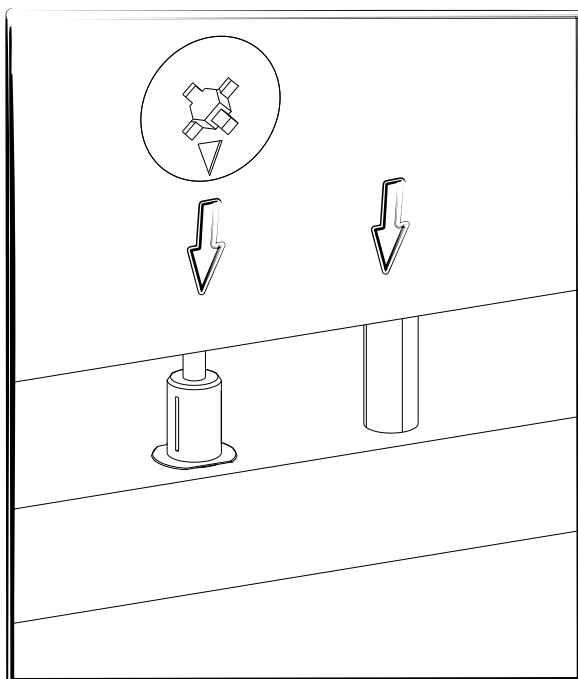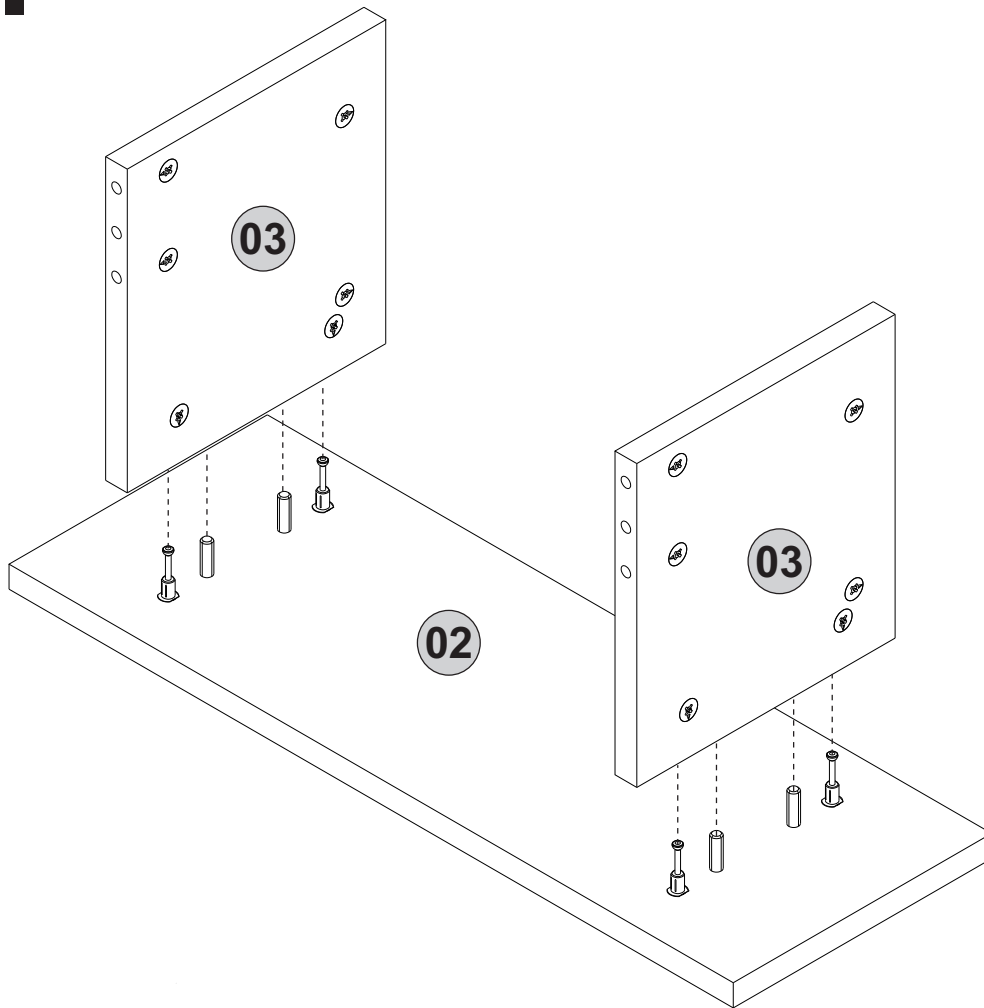


4.^{step}

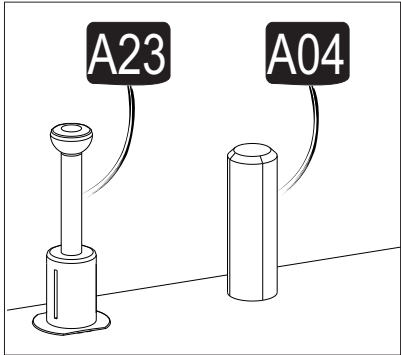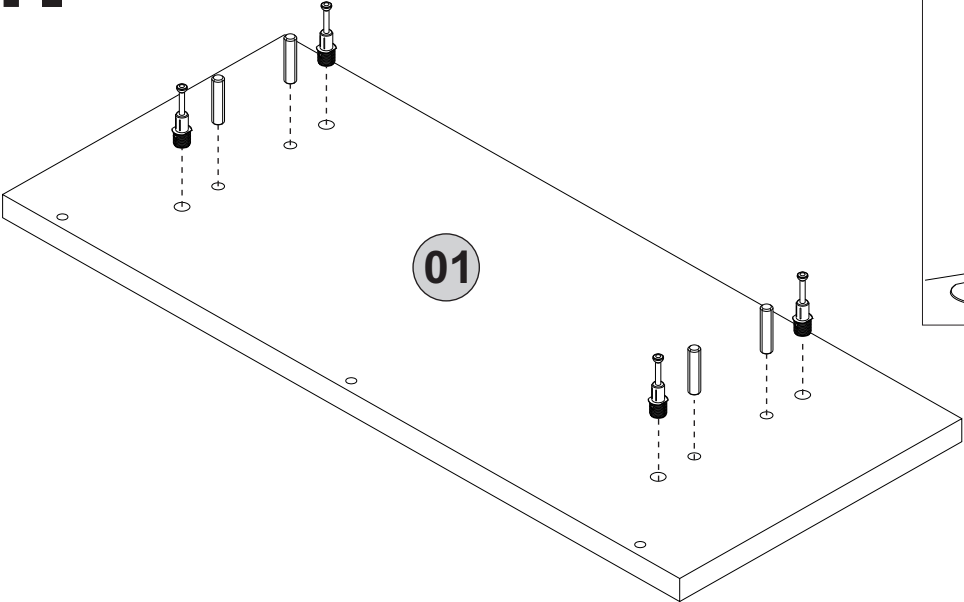



5.^{step}

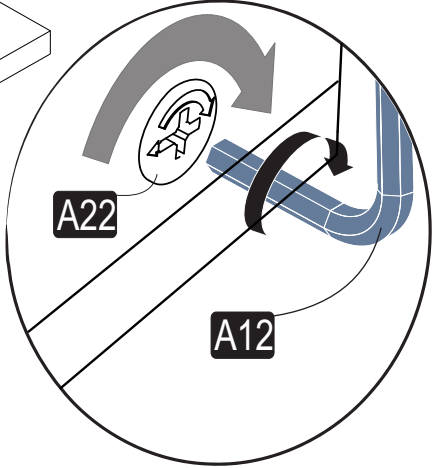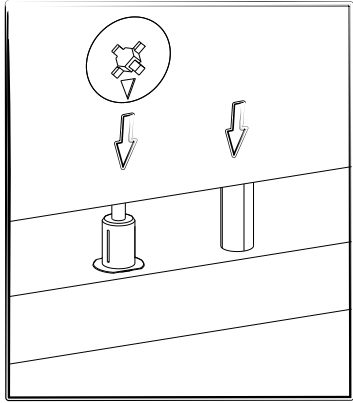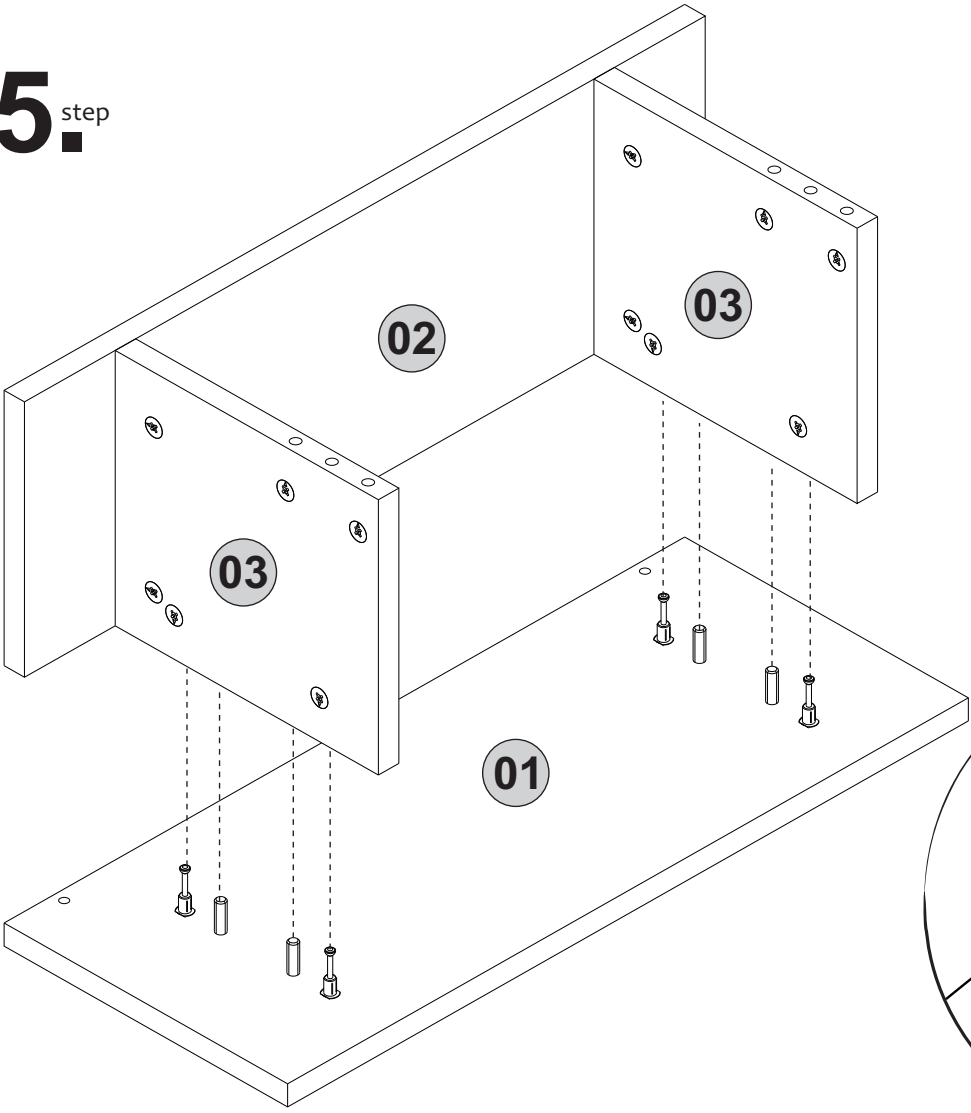




6_{step}

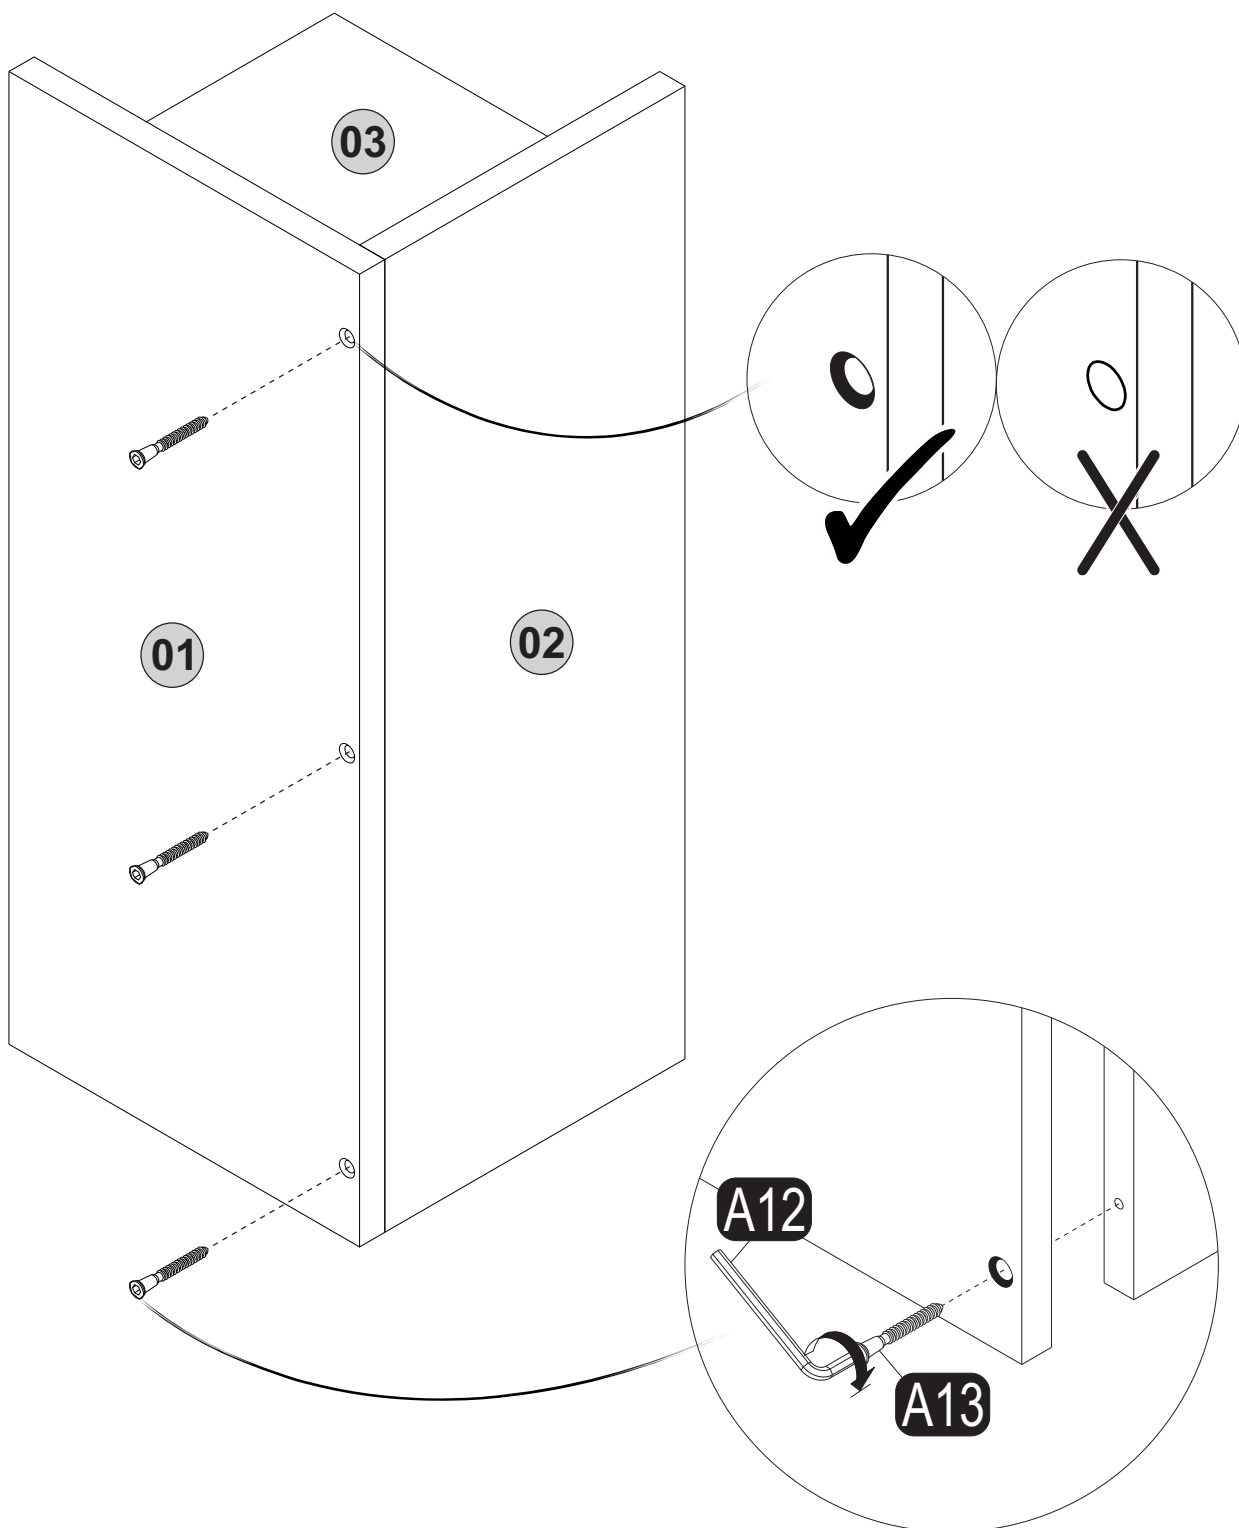


7^{step}

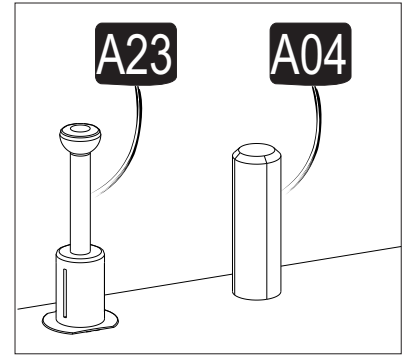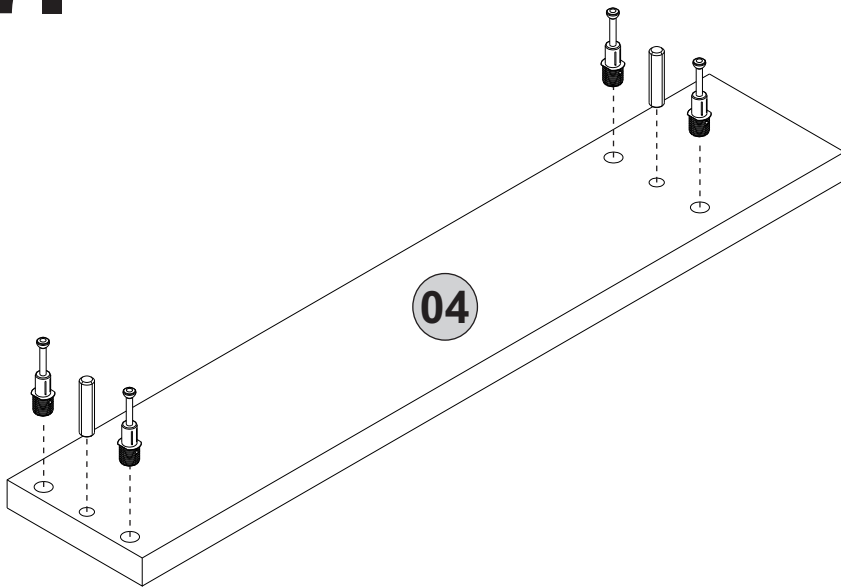

8^{step}

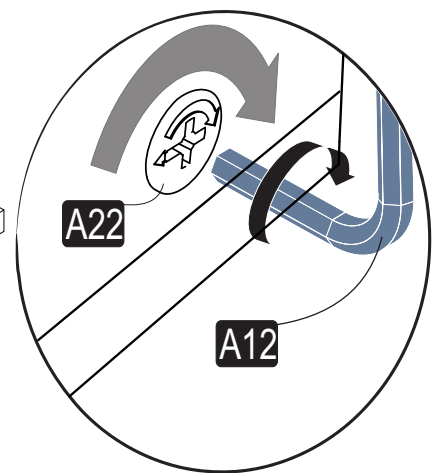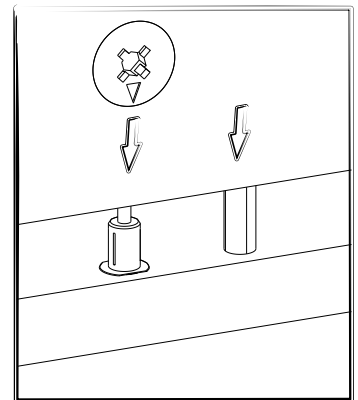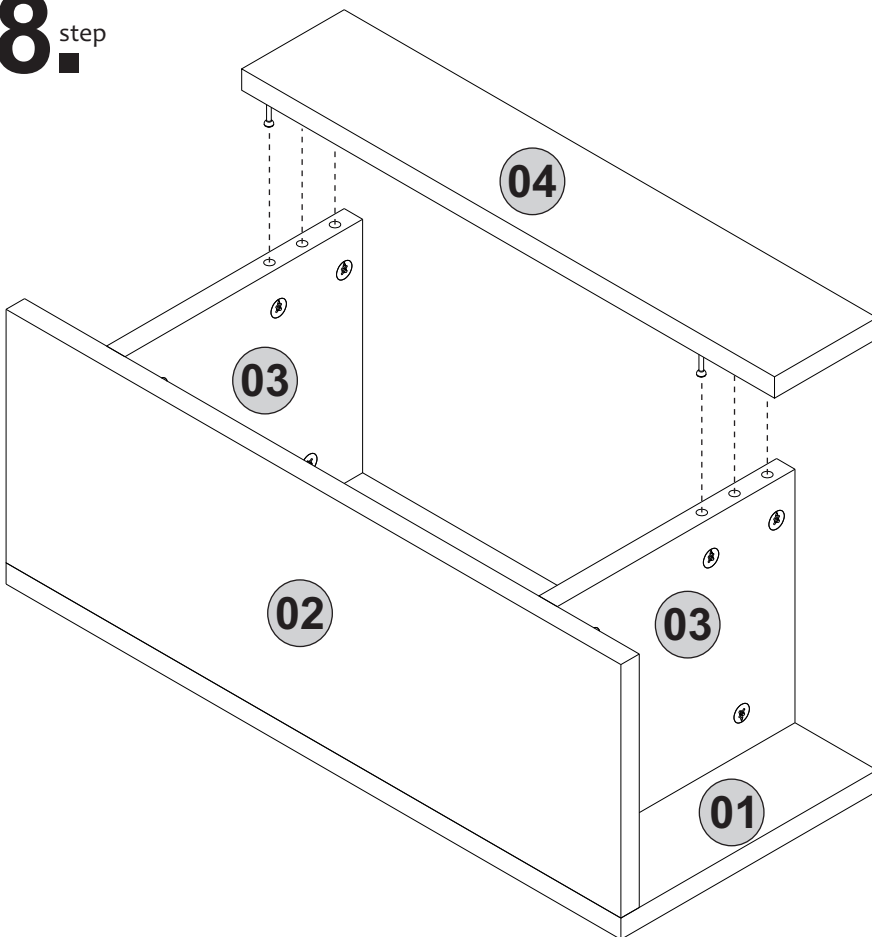

9.step

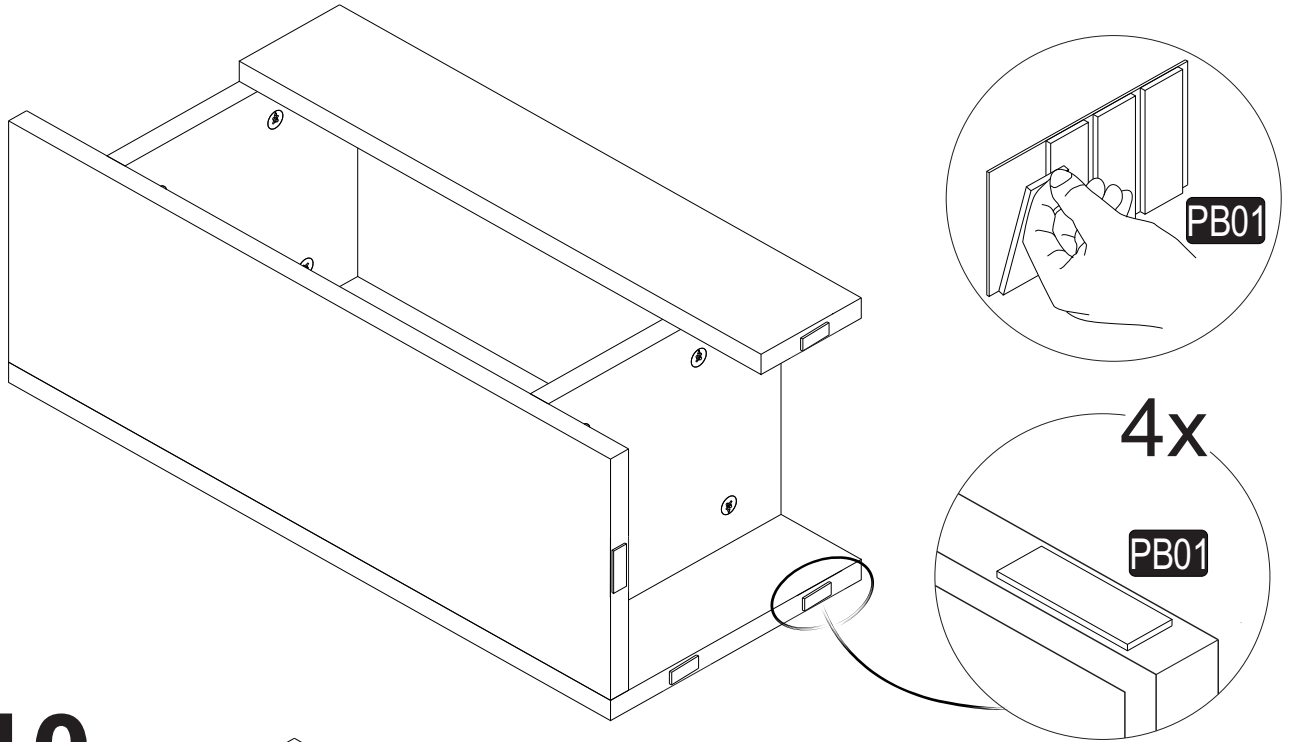

10.step

