








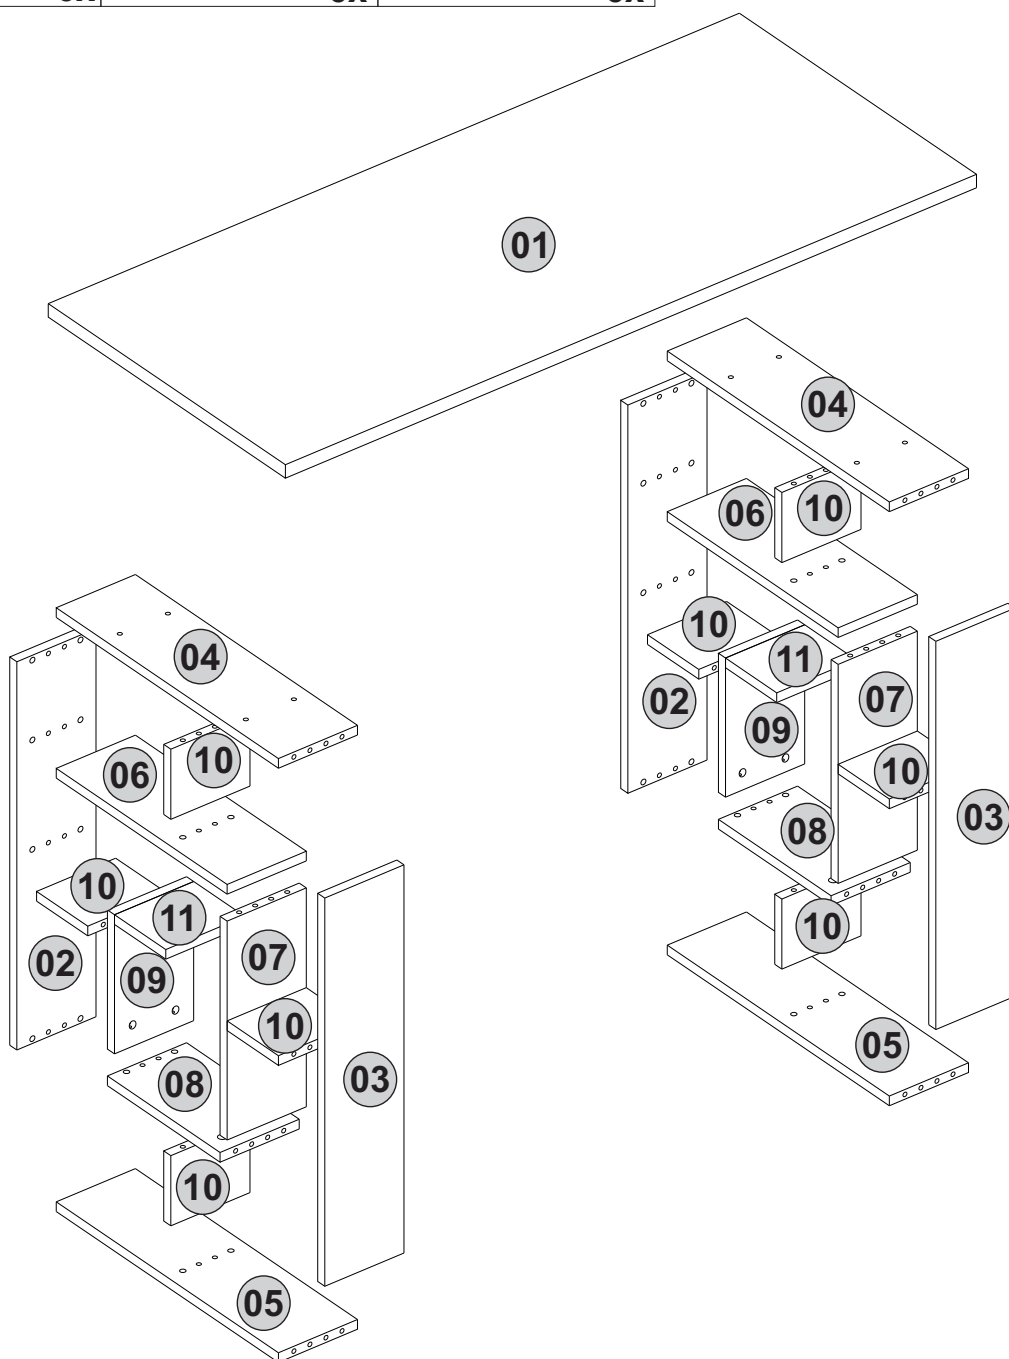


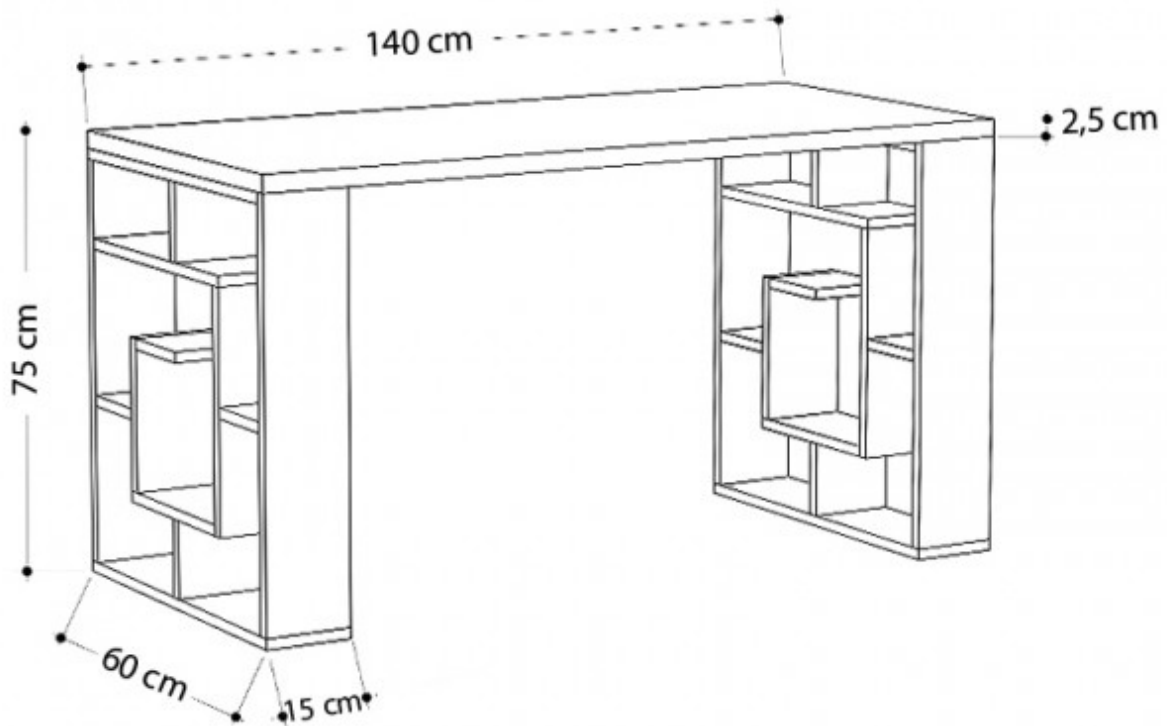


GP037-0094,1




A04  Ø8 68x	A06  18mm C2-76x	A12  Allen 1x	A22  Minifix k18 68x	A23  Minifix M10 68x
A69  P.D. 8x	B03  25 mm 8x	PB01  Kece 8x		




1. step

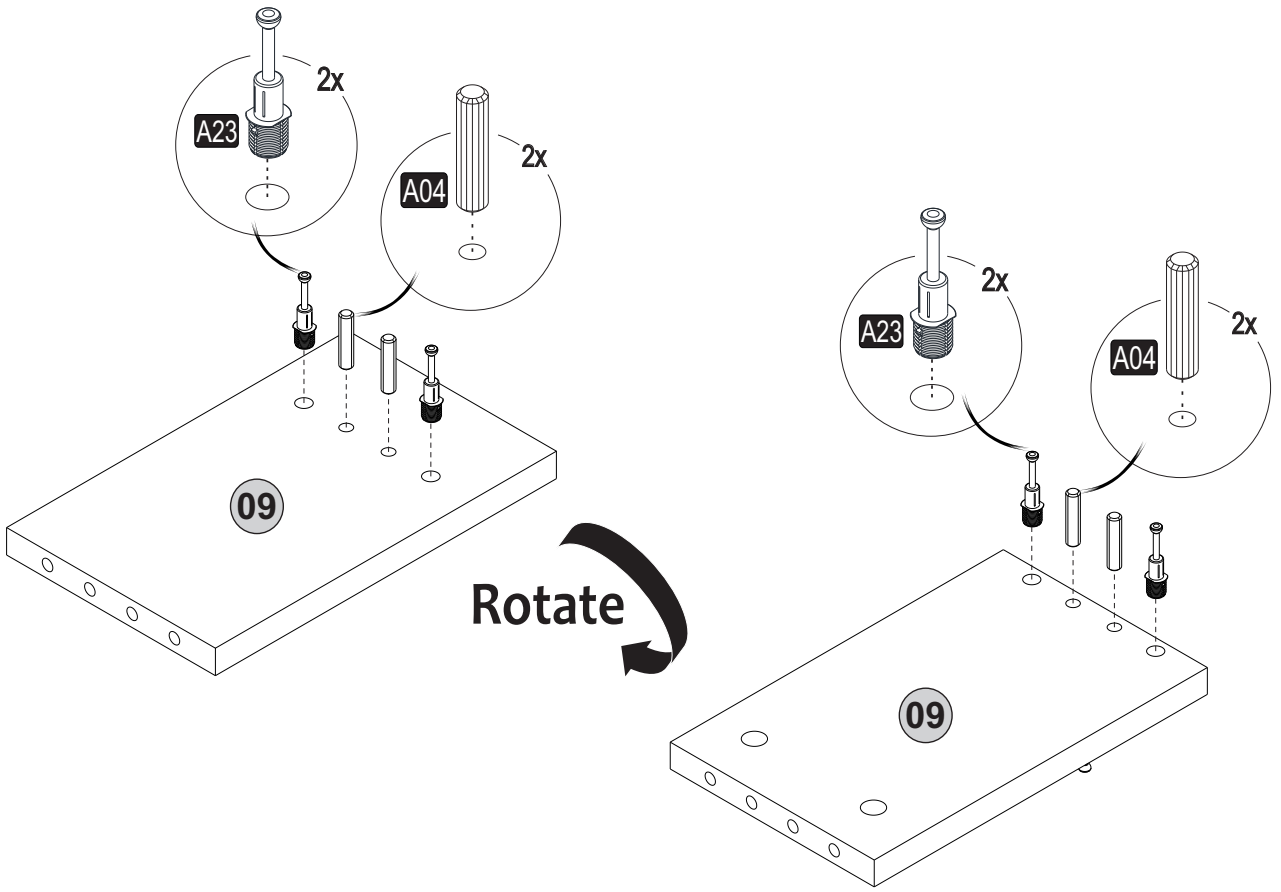


2. step

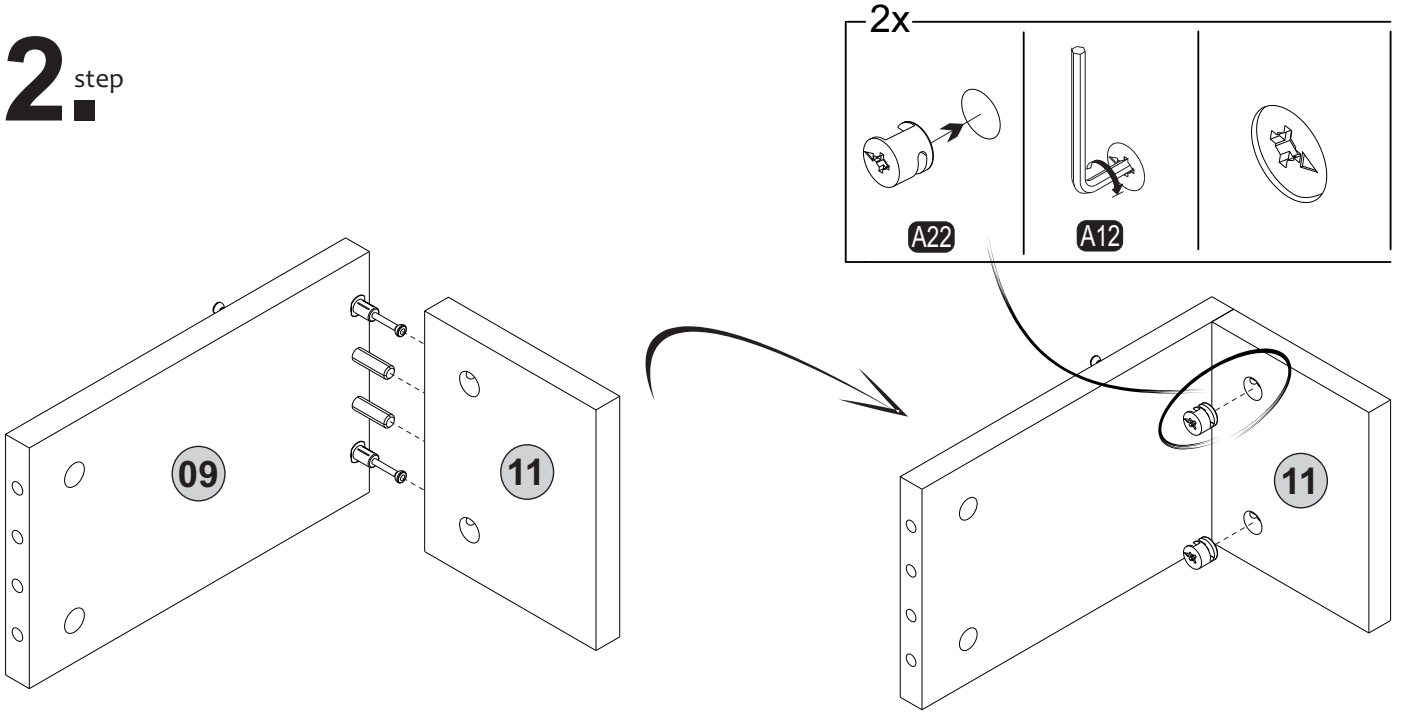



3 step

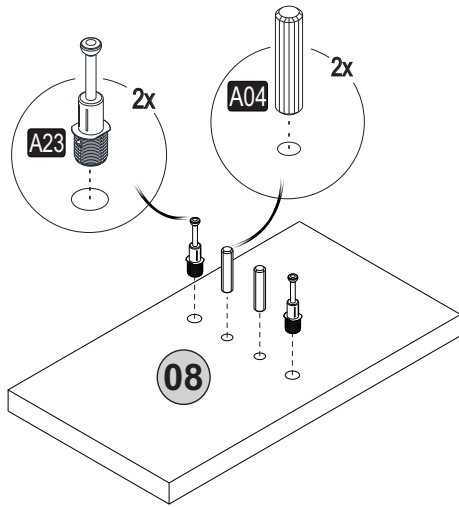


Rotate

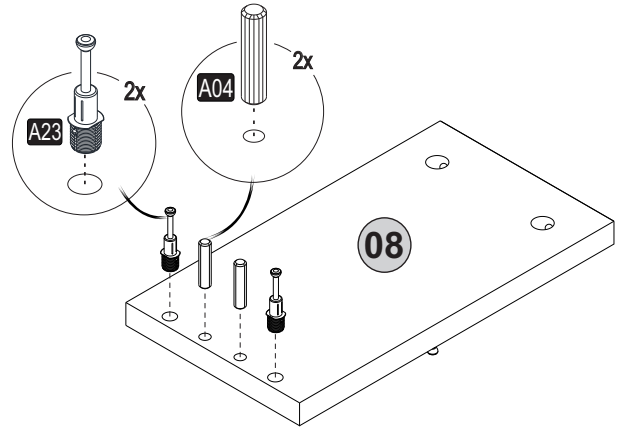


4 step

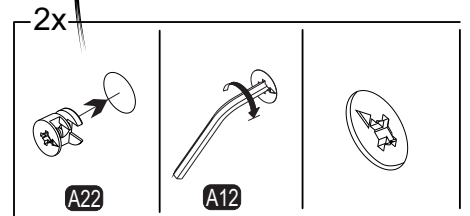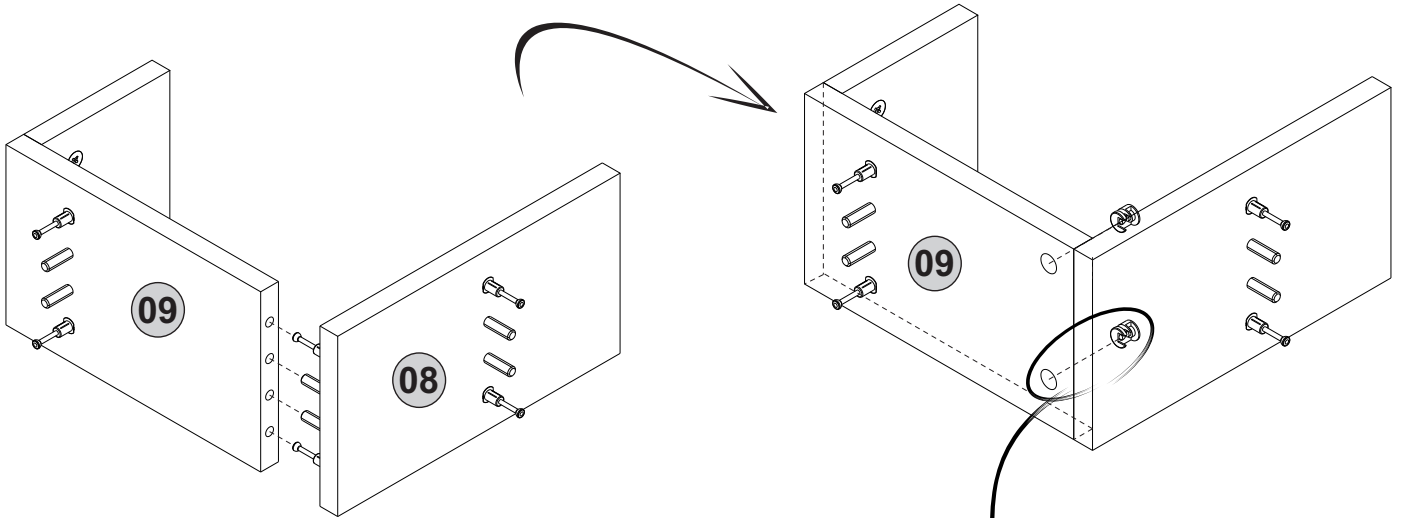


5^{step}

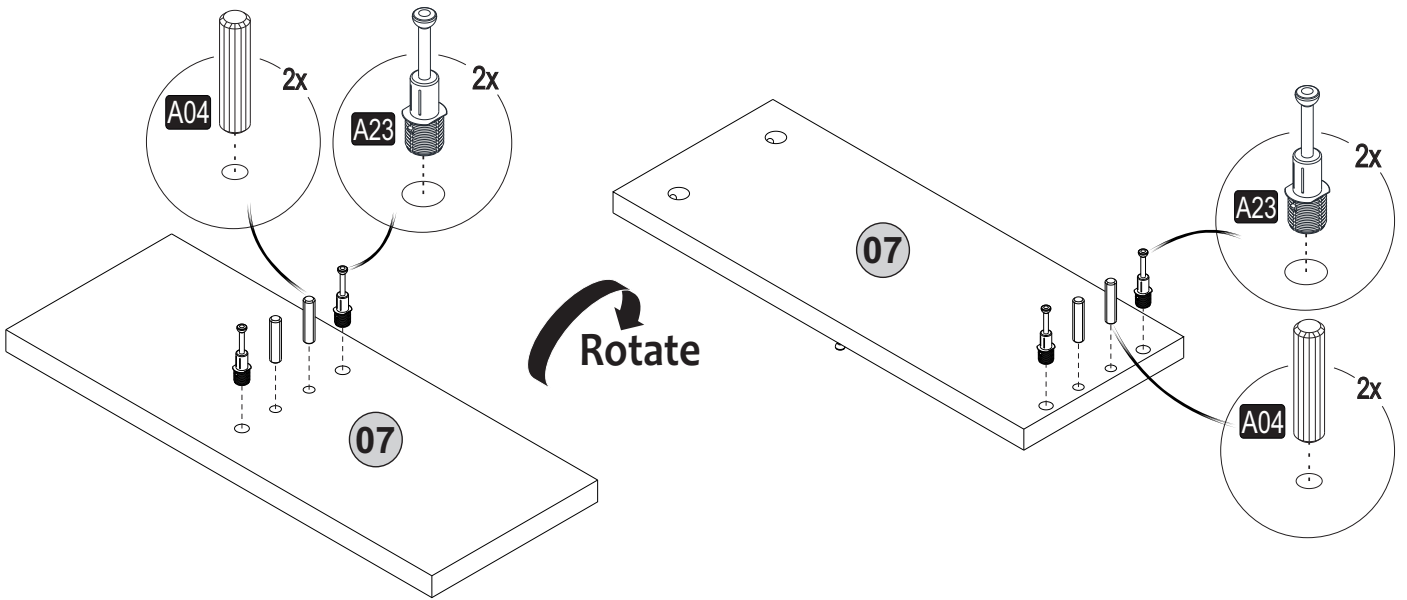


6^{step}

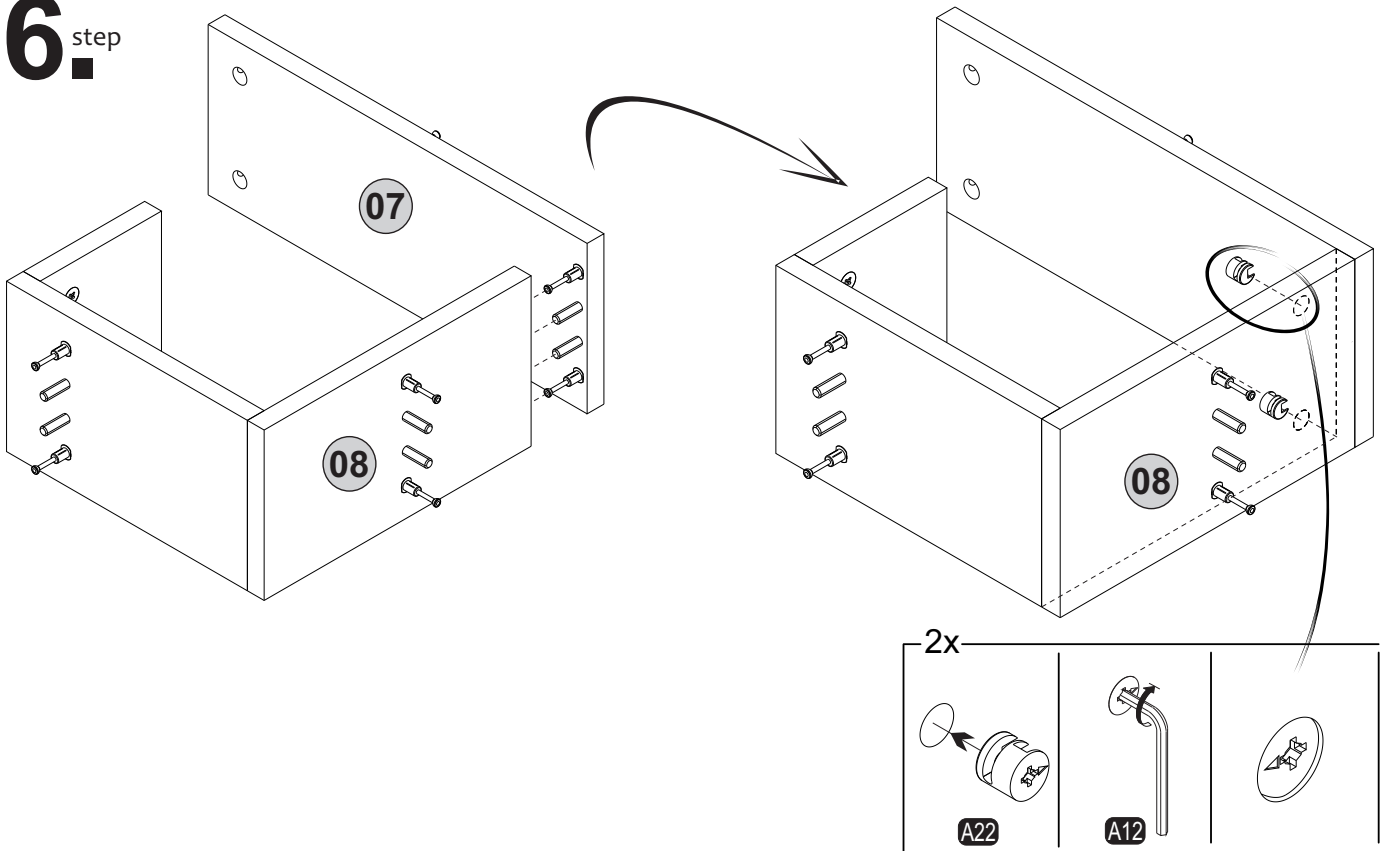




7^{step}

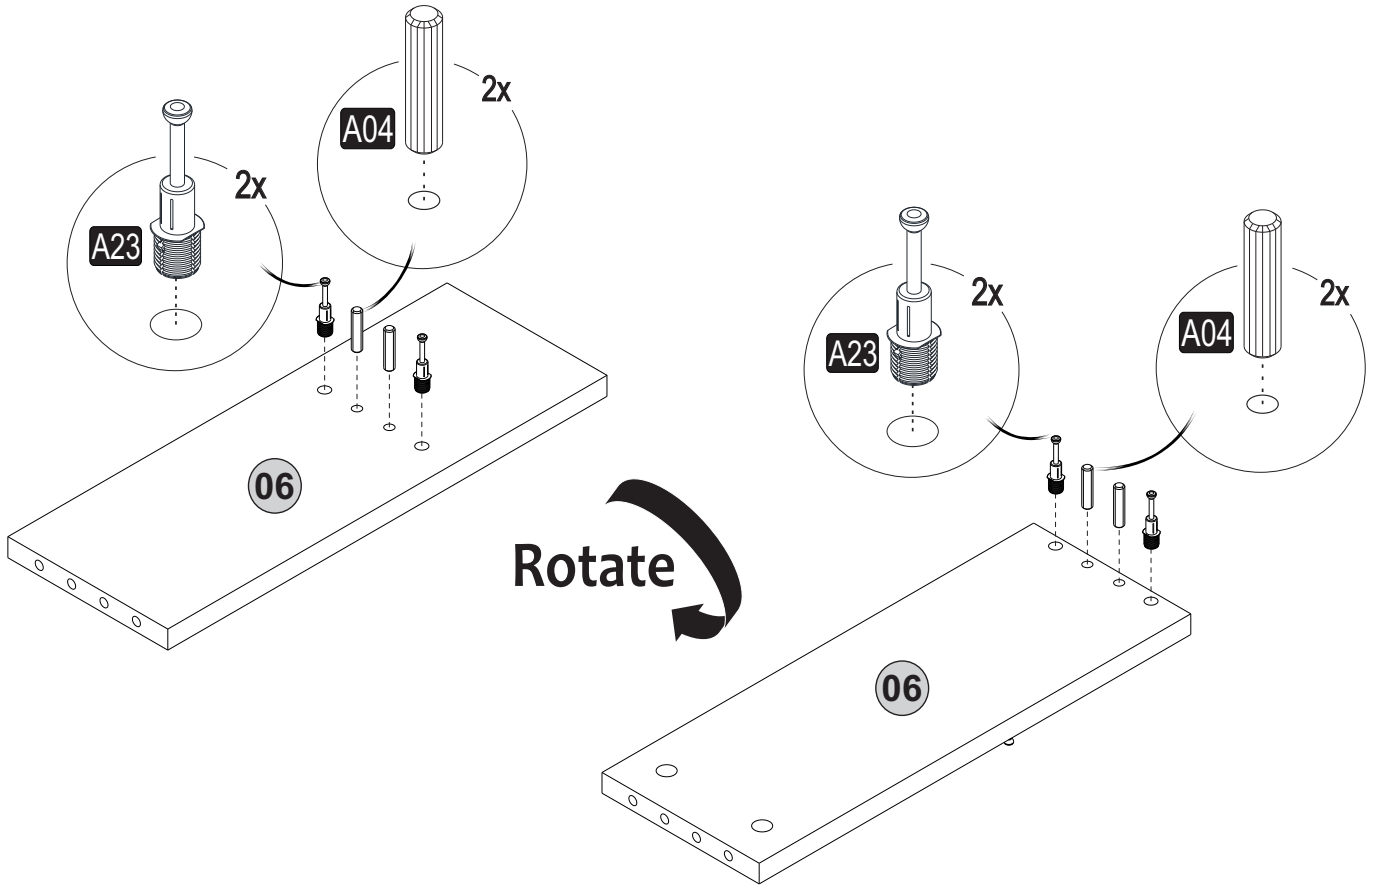


8^{step}

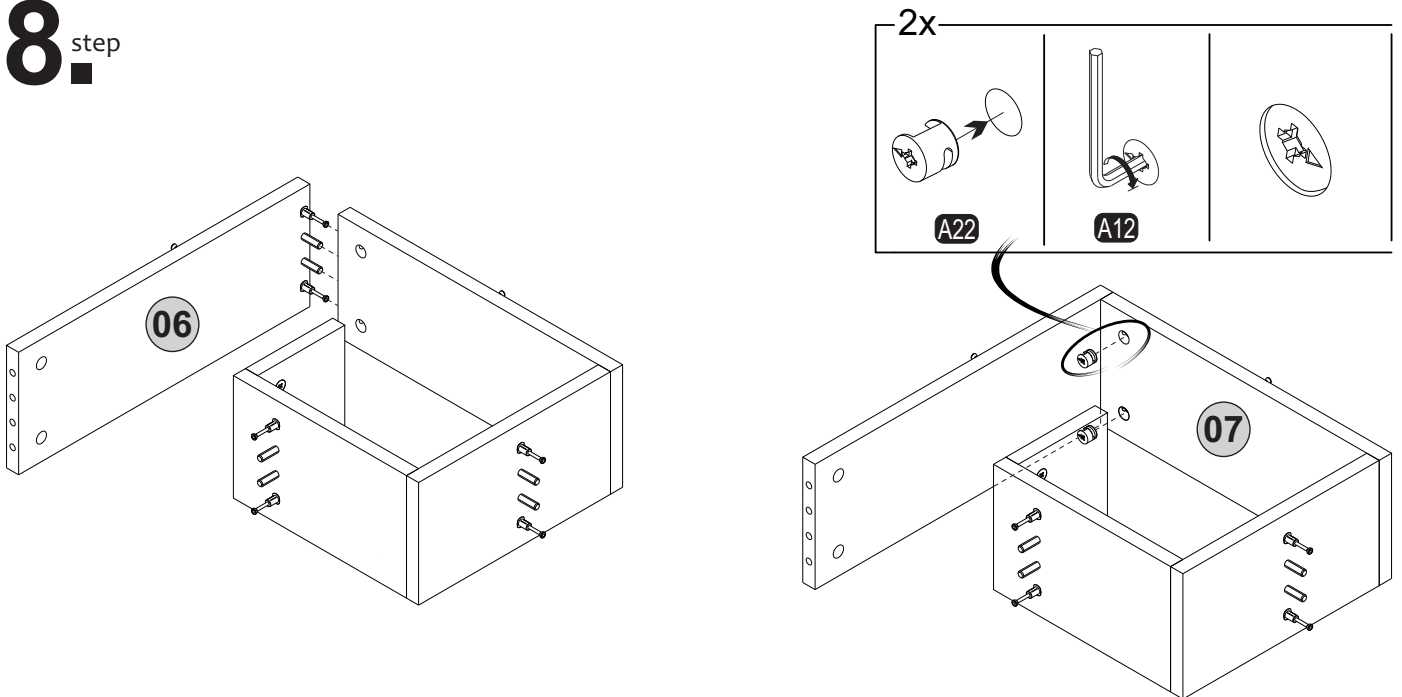


9^{step}

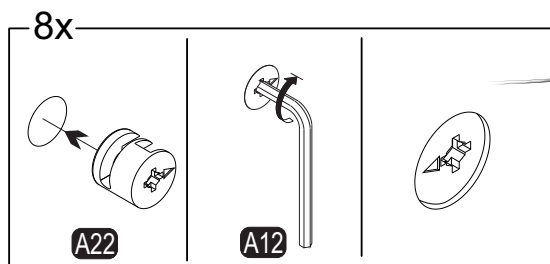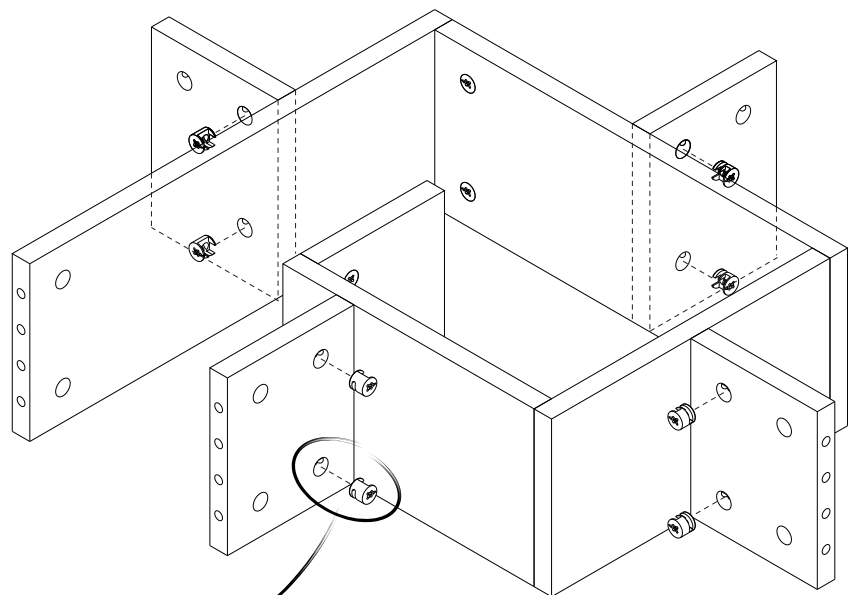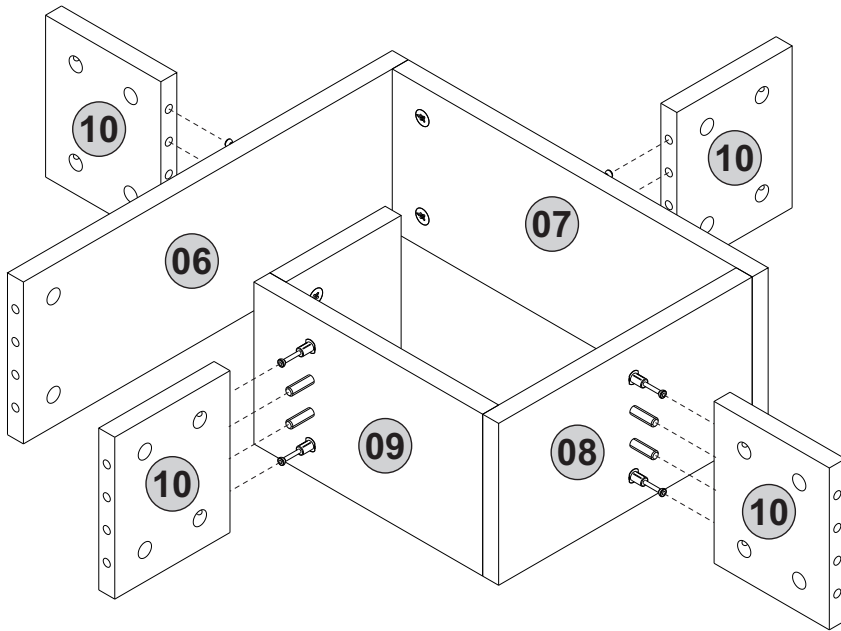


10.^{step}

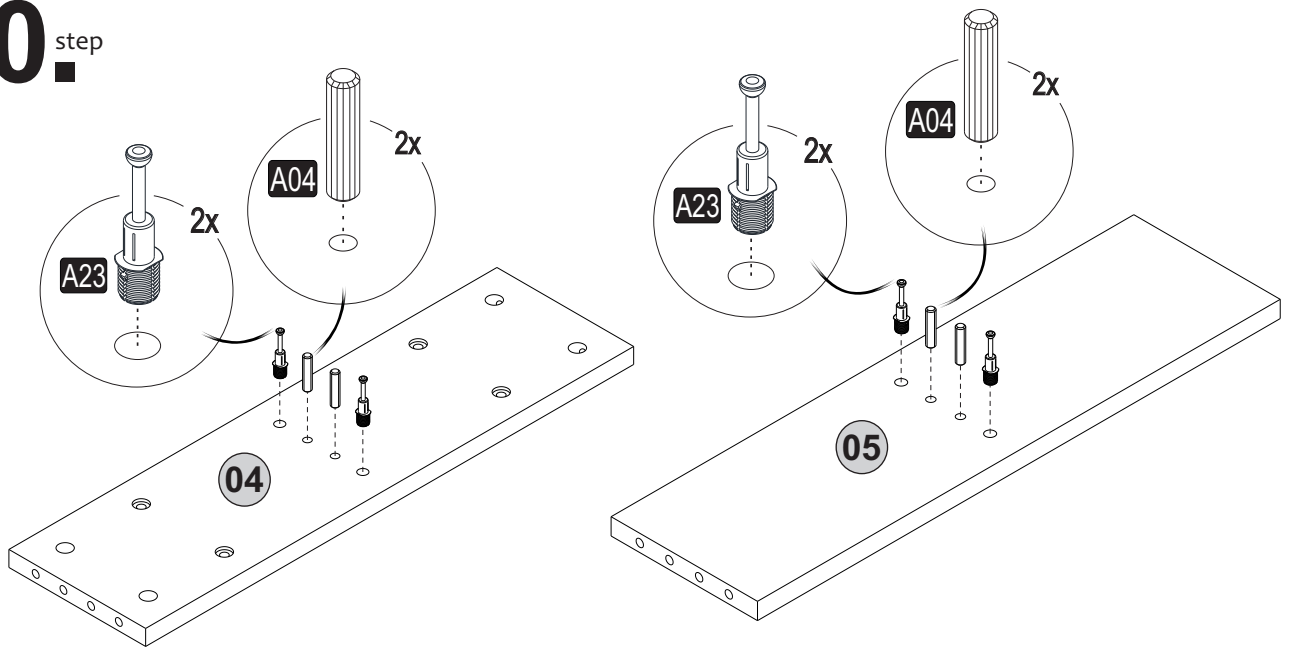


11.^{step}

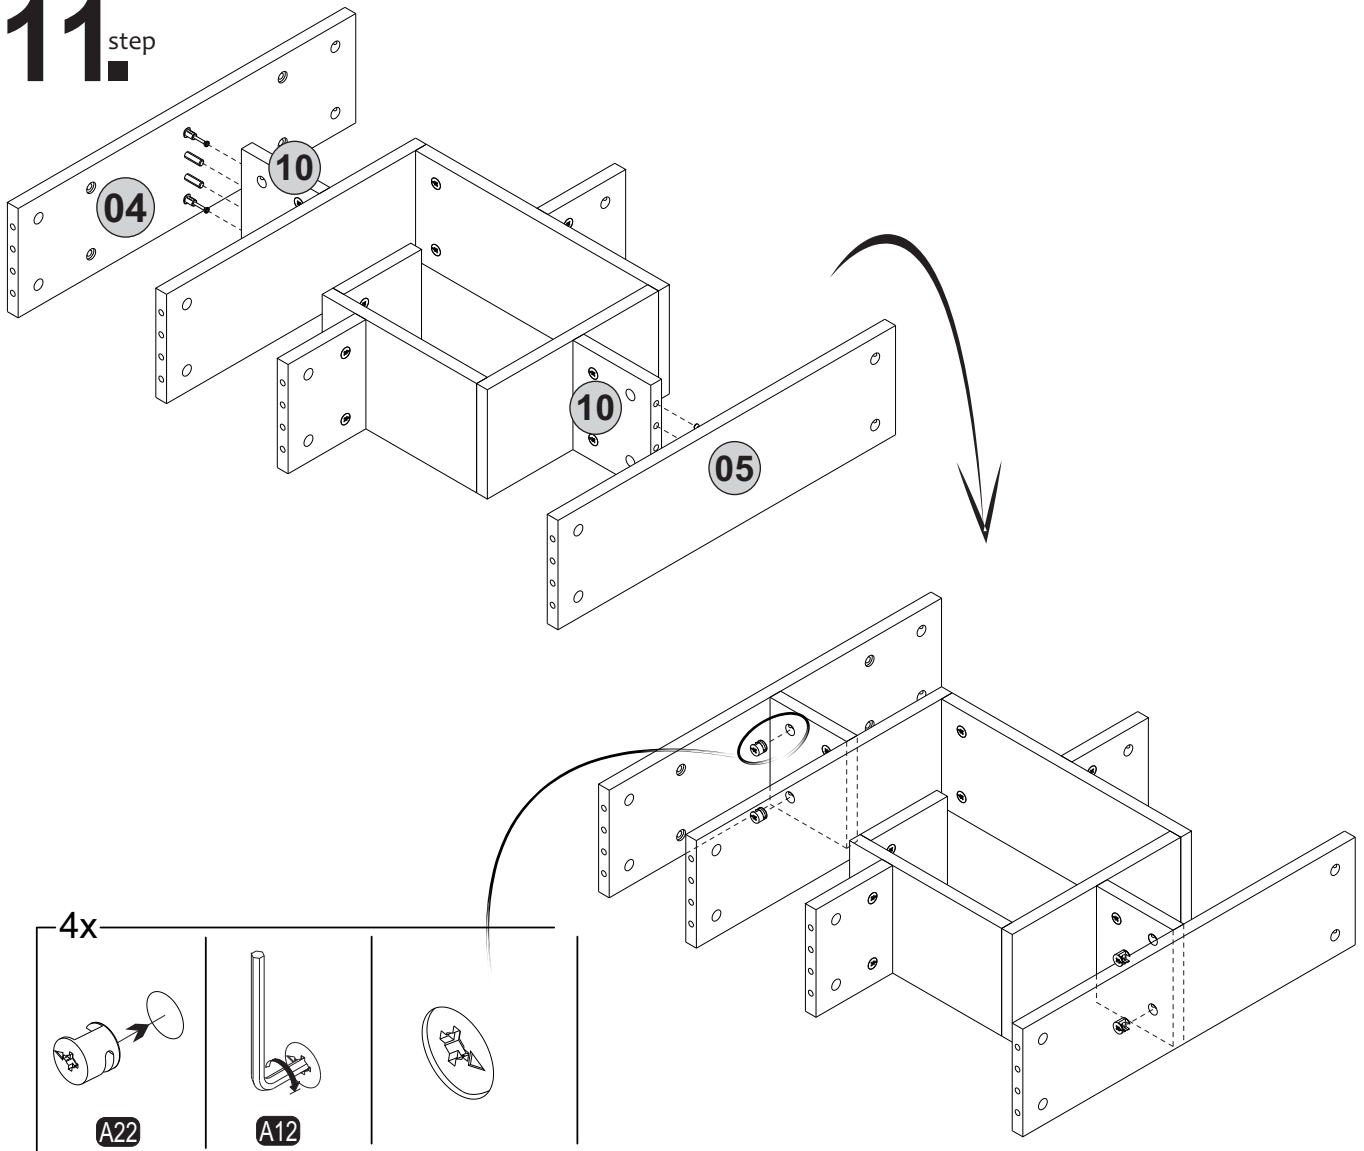


12^{step}

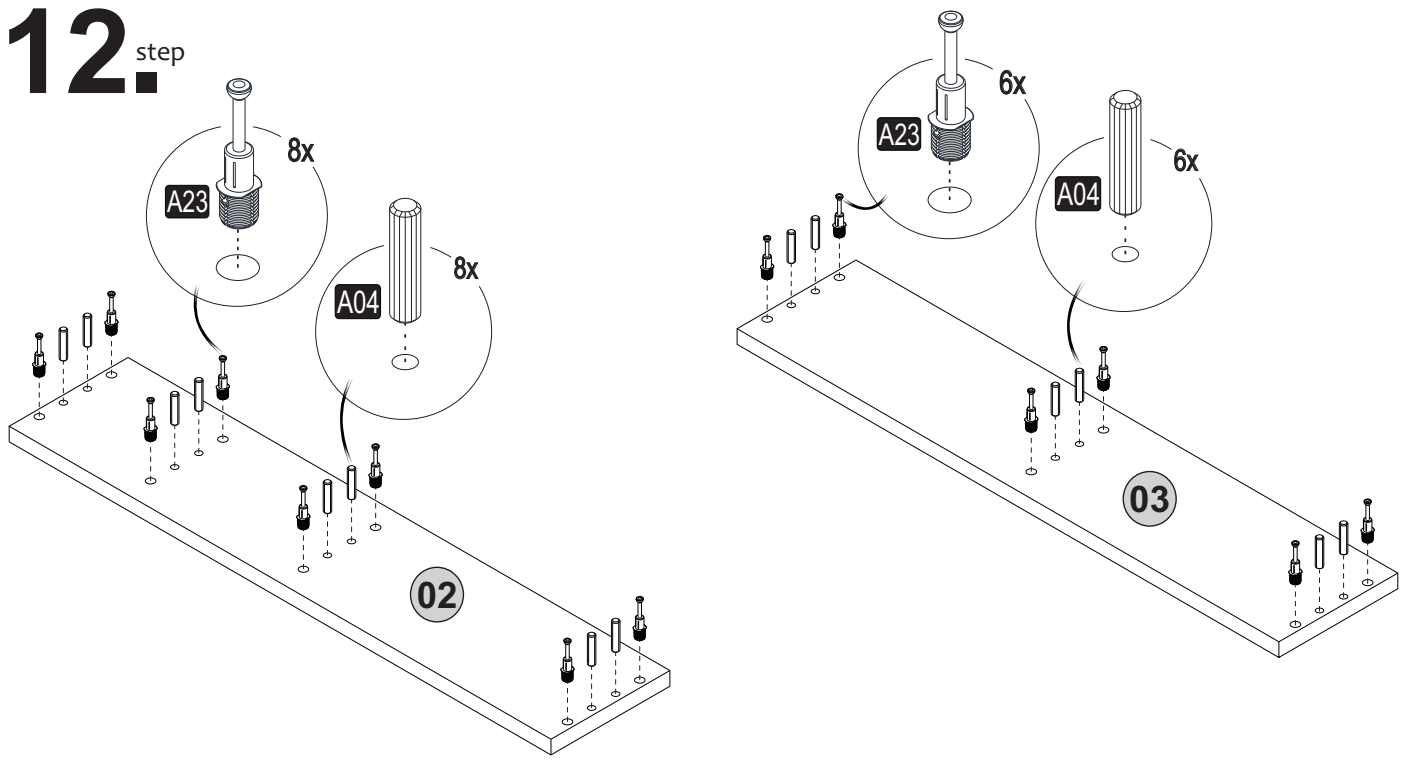



13^{step}

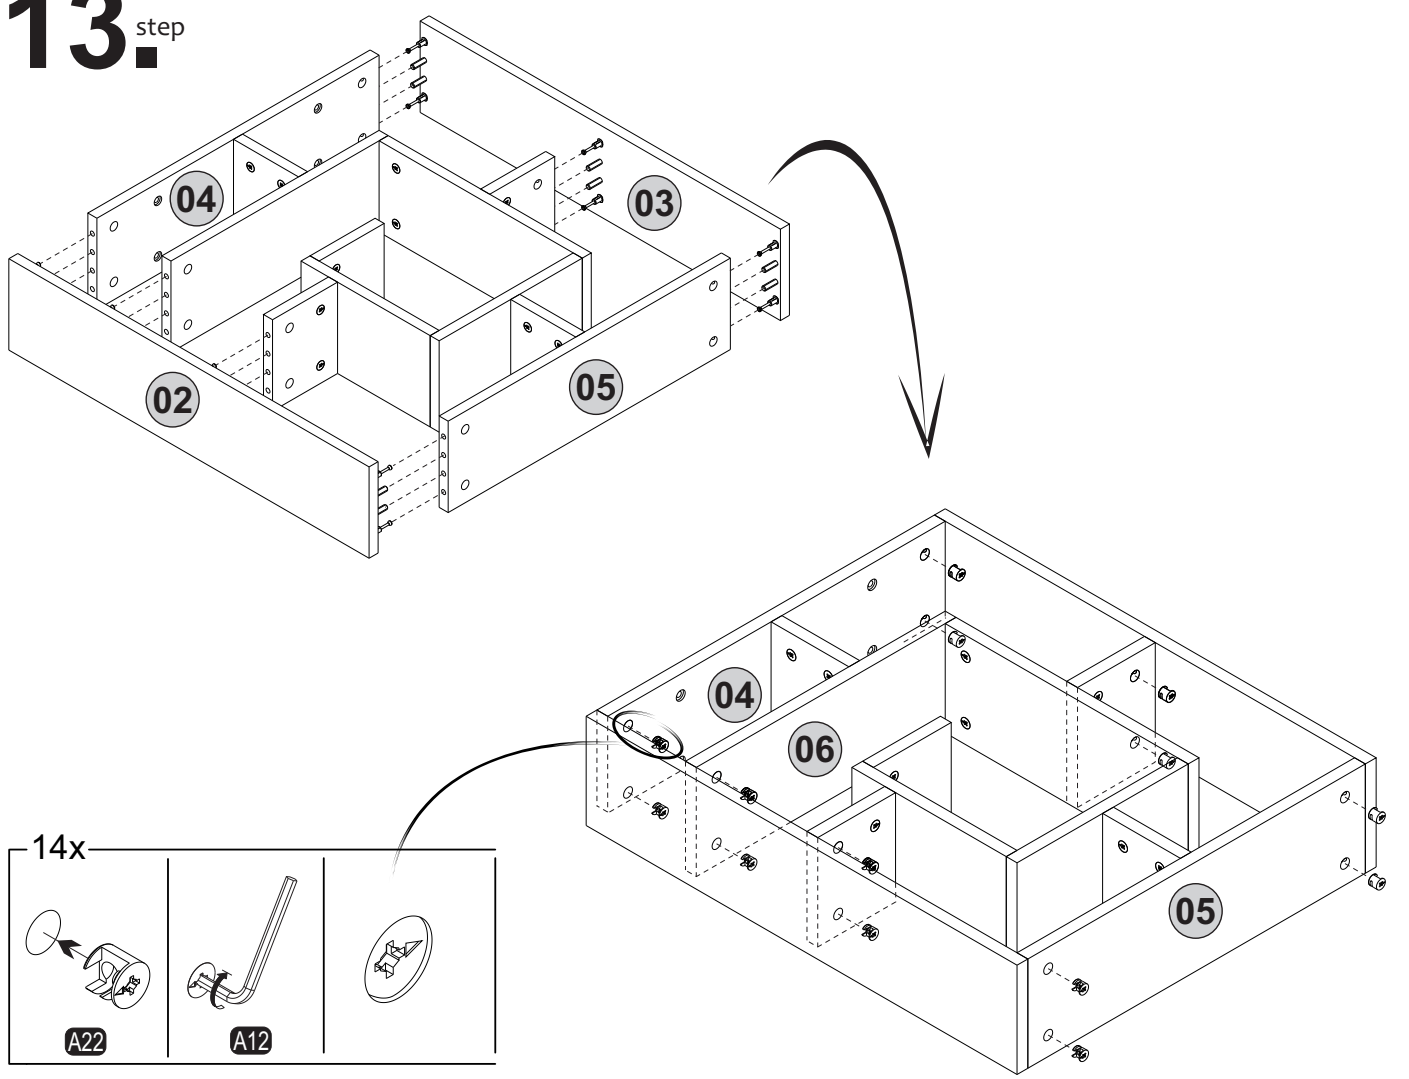



14.^{step}

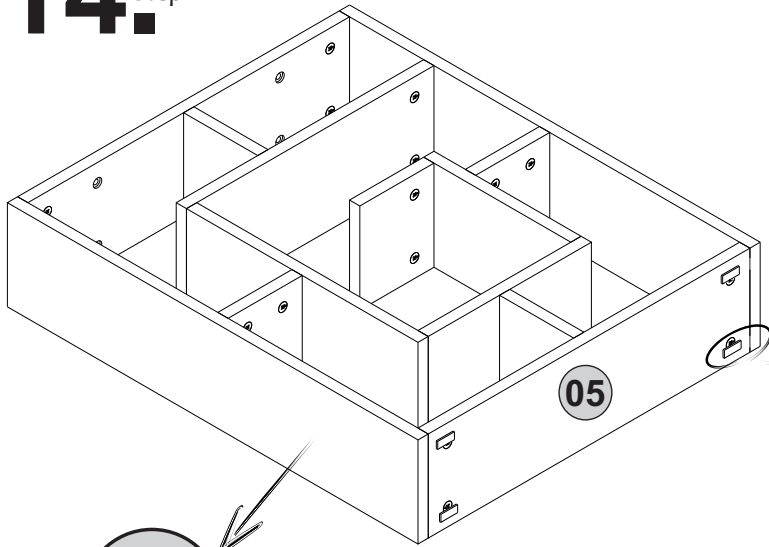



2x

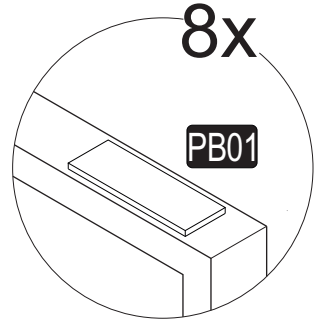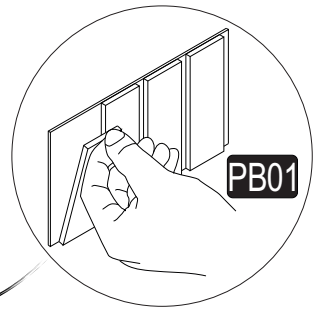

15.^{step}

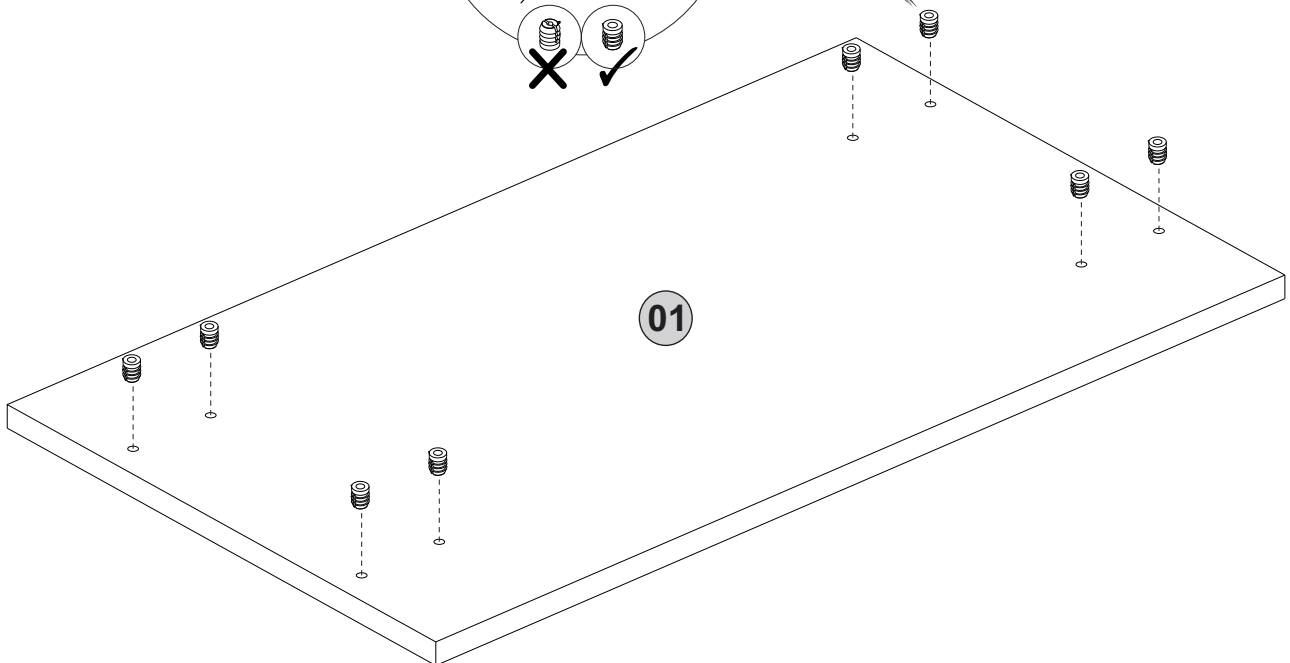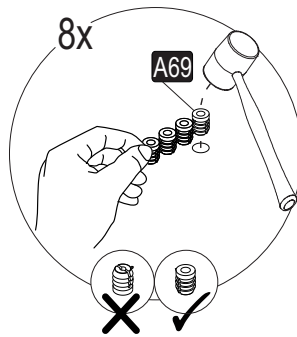

16.^{step}

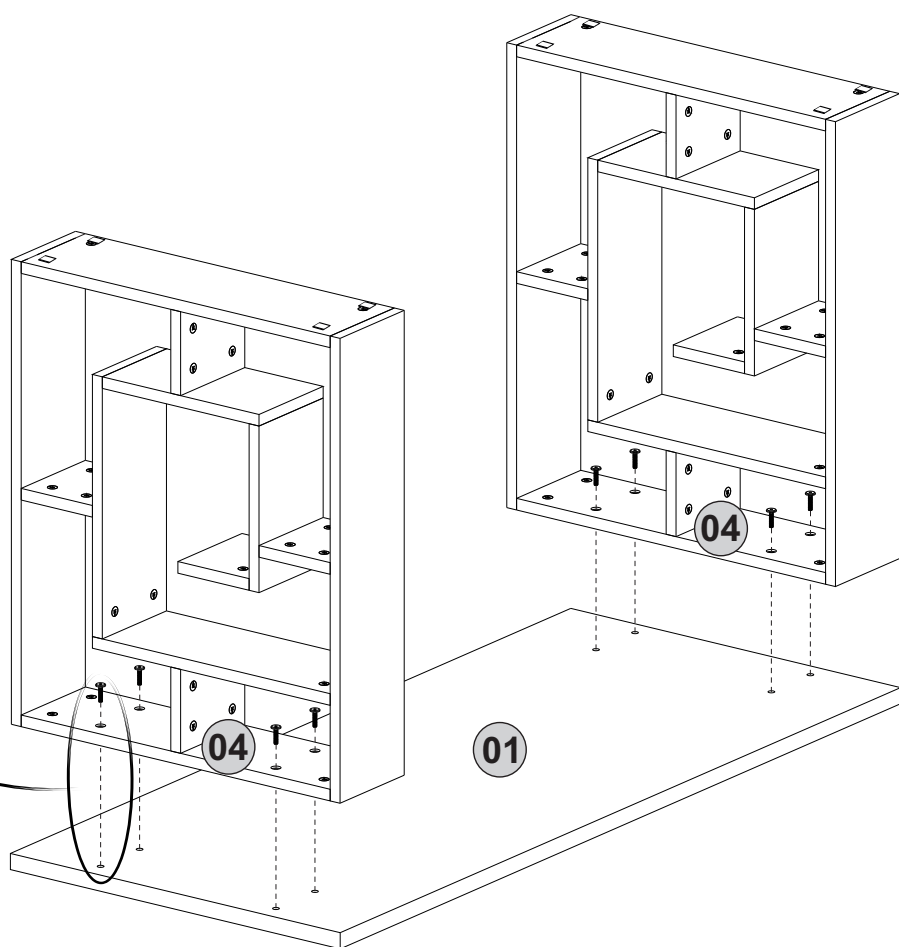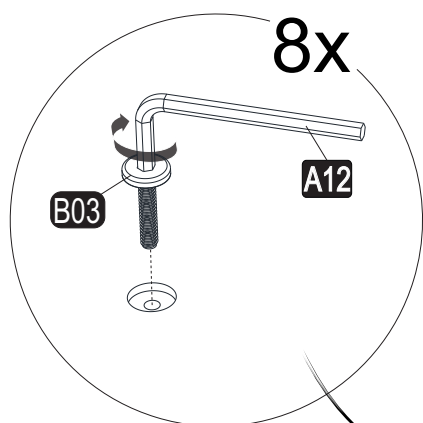

17.^{step}

