


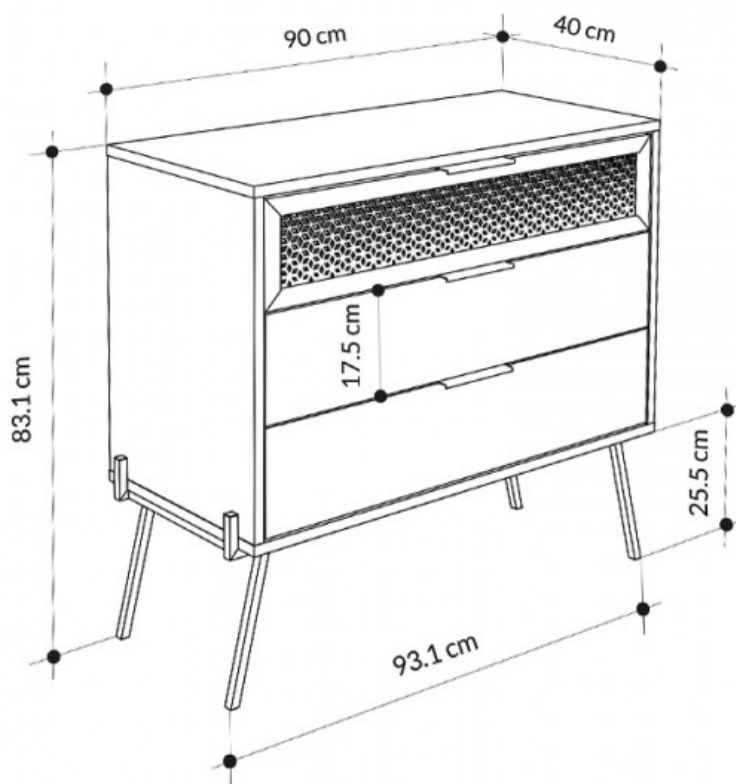





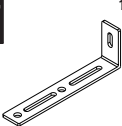
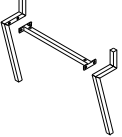





GP037-0237,1

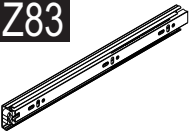


A04  4x	A06  C1-32x	A12  1x	A13  4x	A16  1x
A17  1x	A18  24x	A22  28x	A23  28x	A25  19x
A50  6x	A69  4x	A87  1x	A100  3x	A130  24x
B11  8x	B13  4x	Z60  2x	Z51  3x	Z83  3x

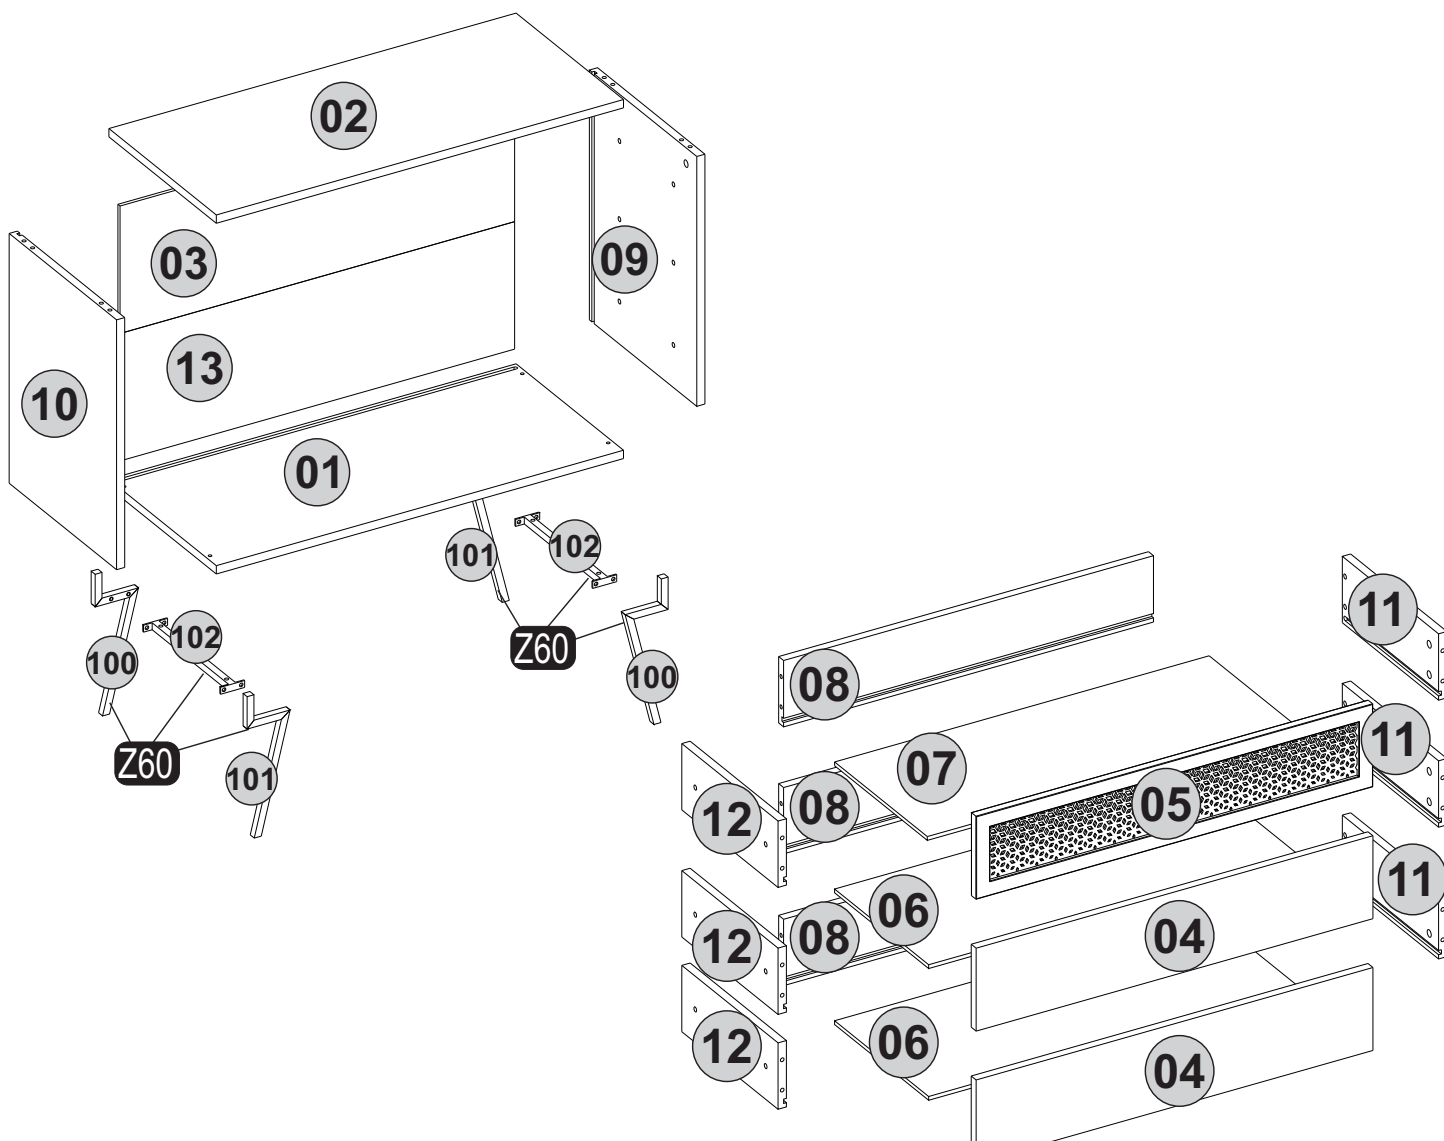



1 x6

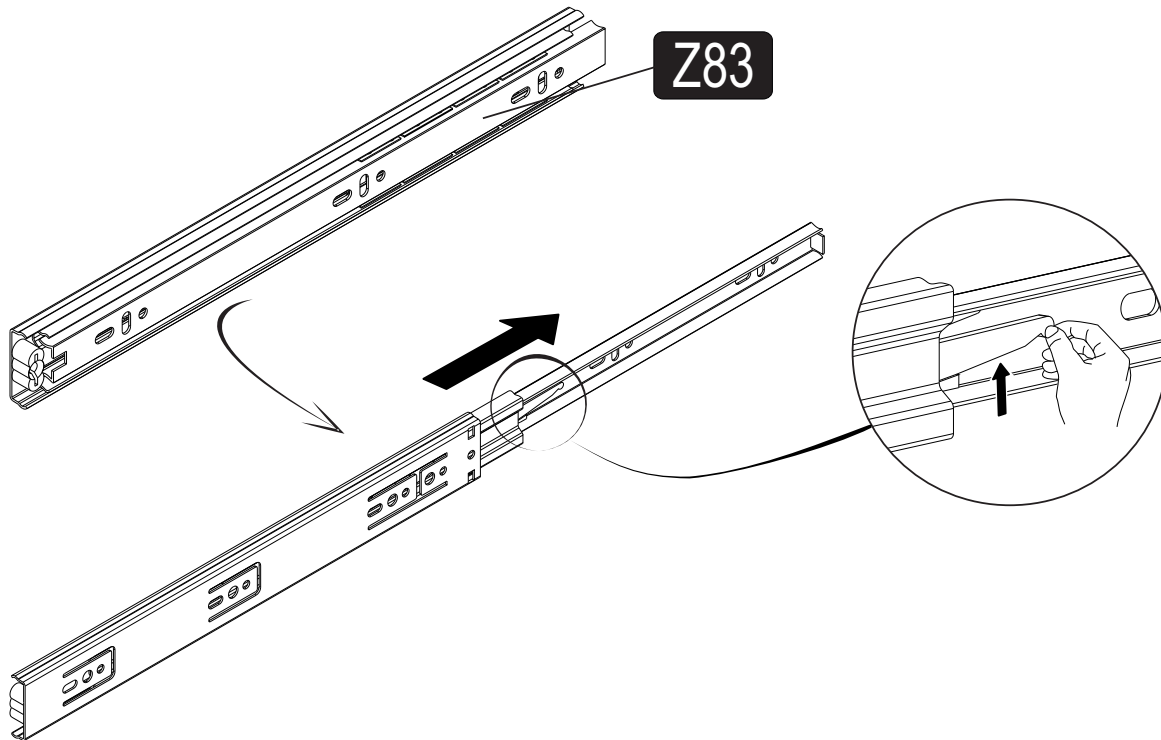



2 x6

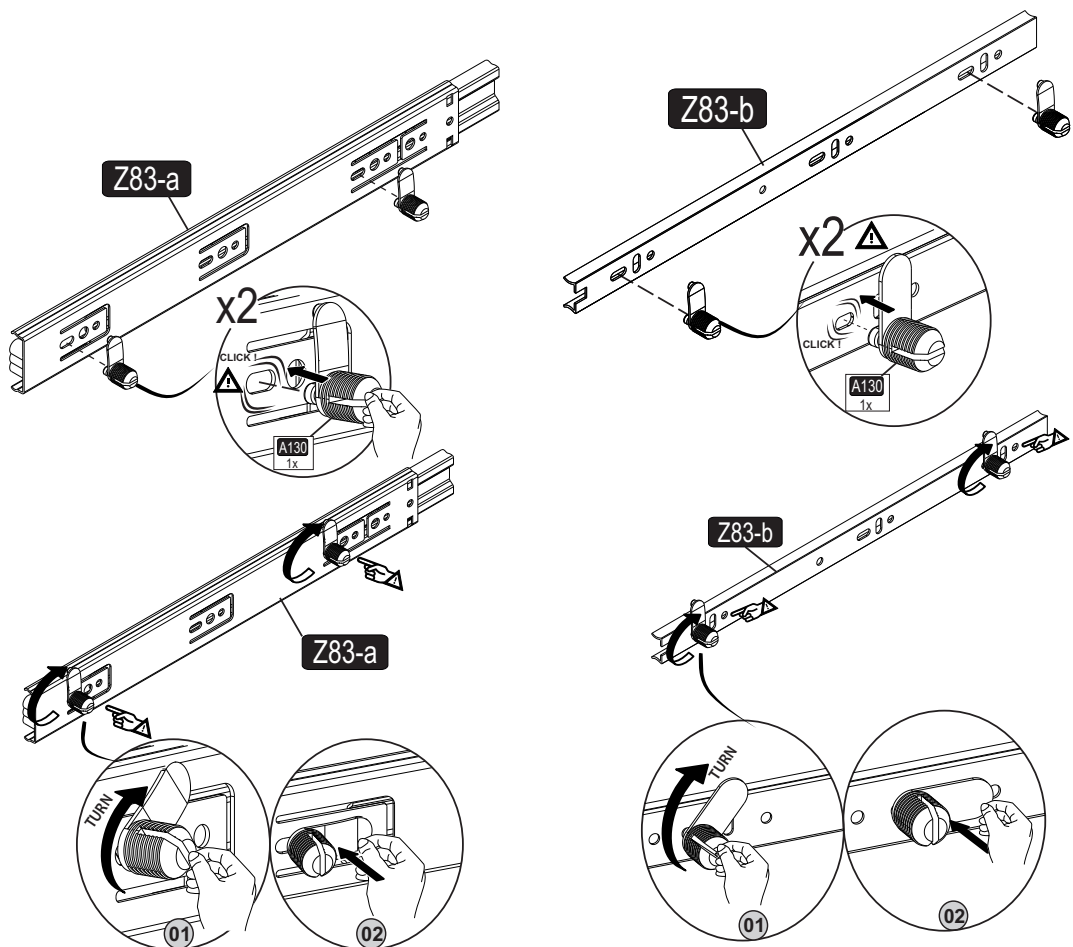


3

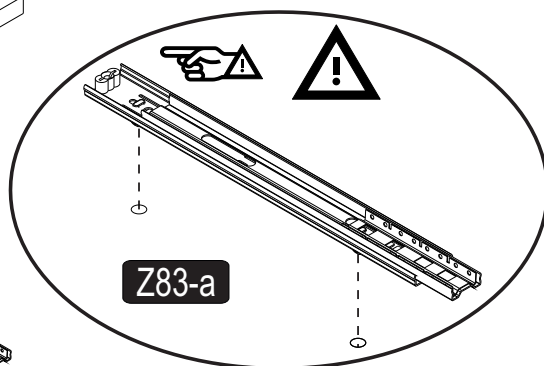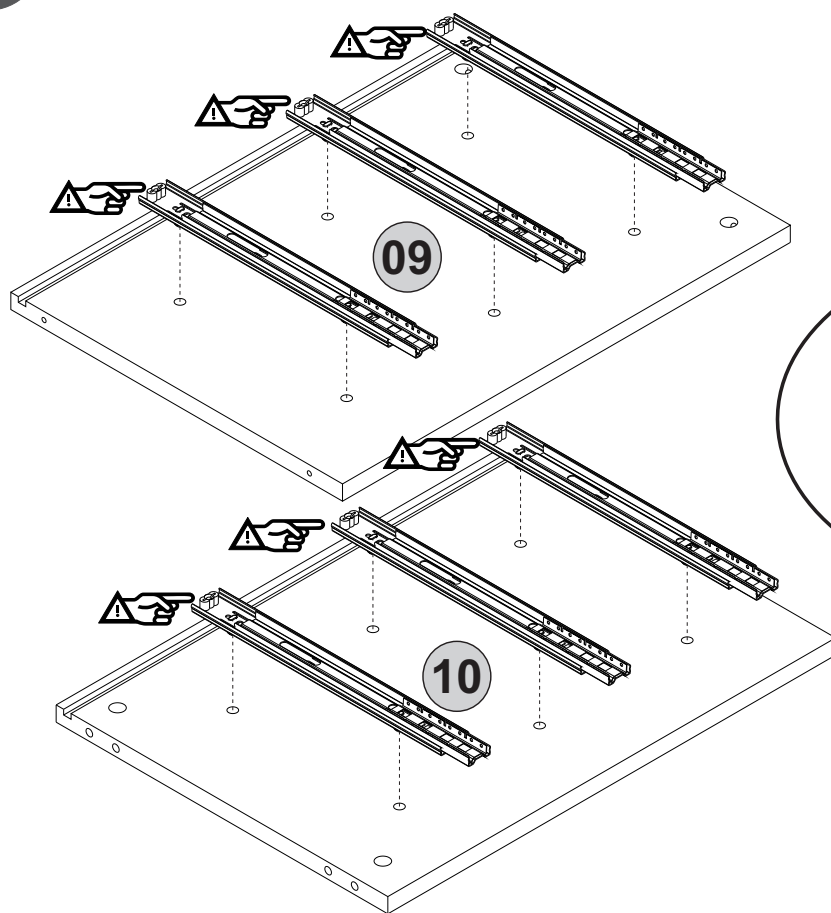


4 x3

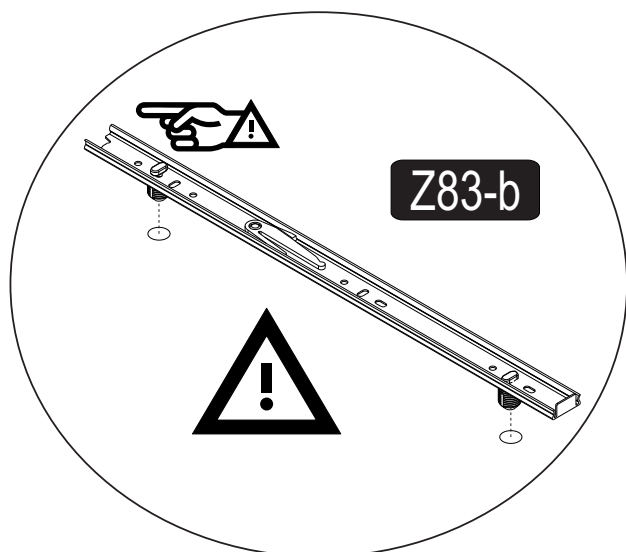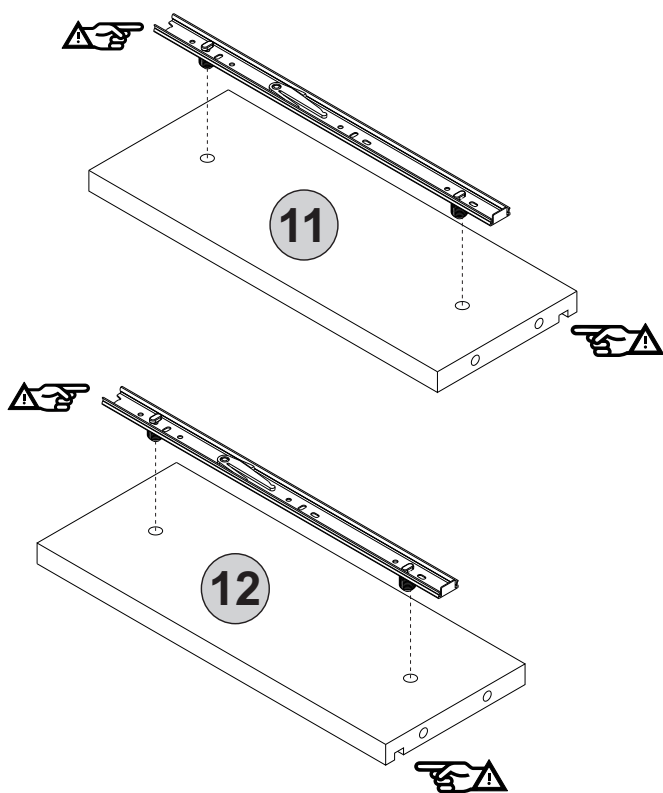


5

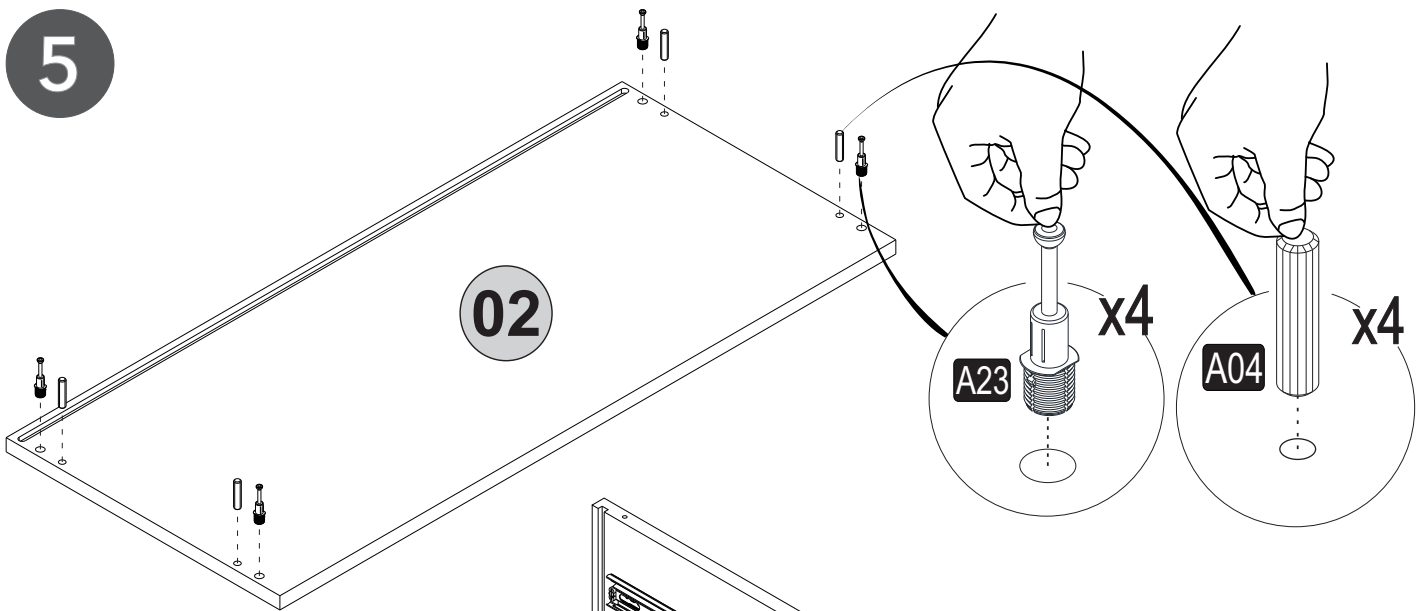


6

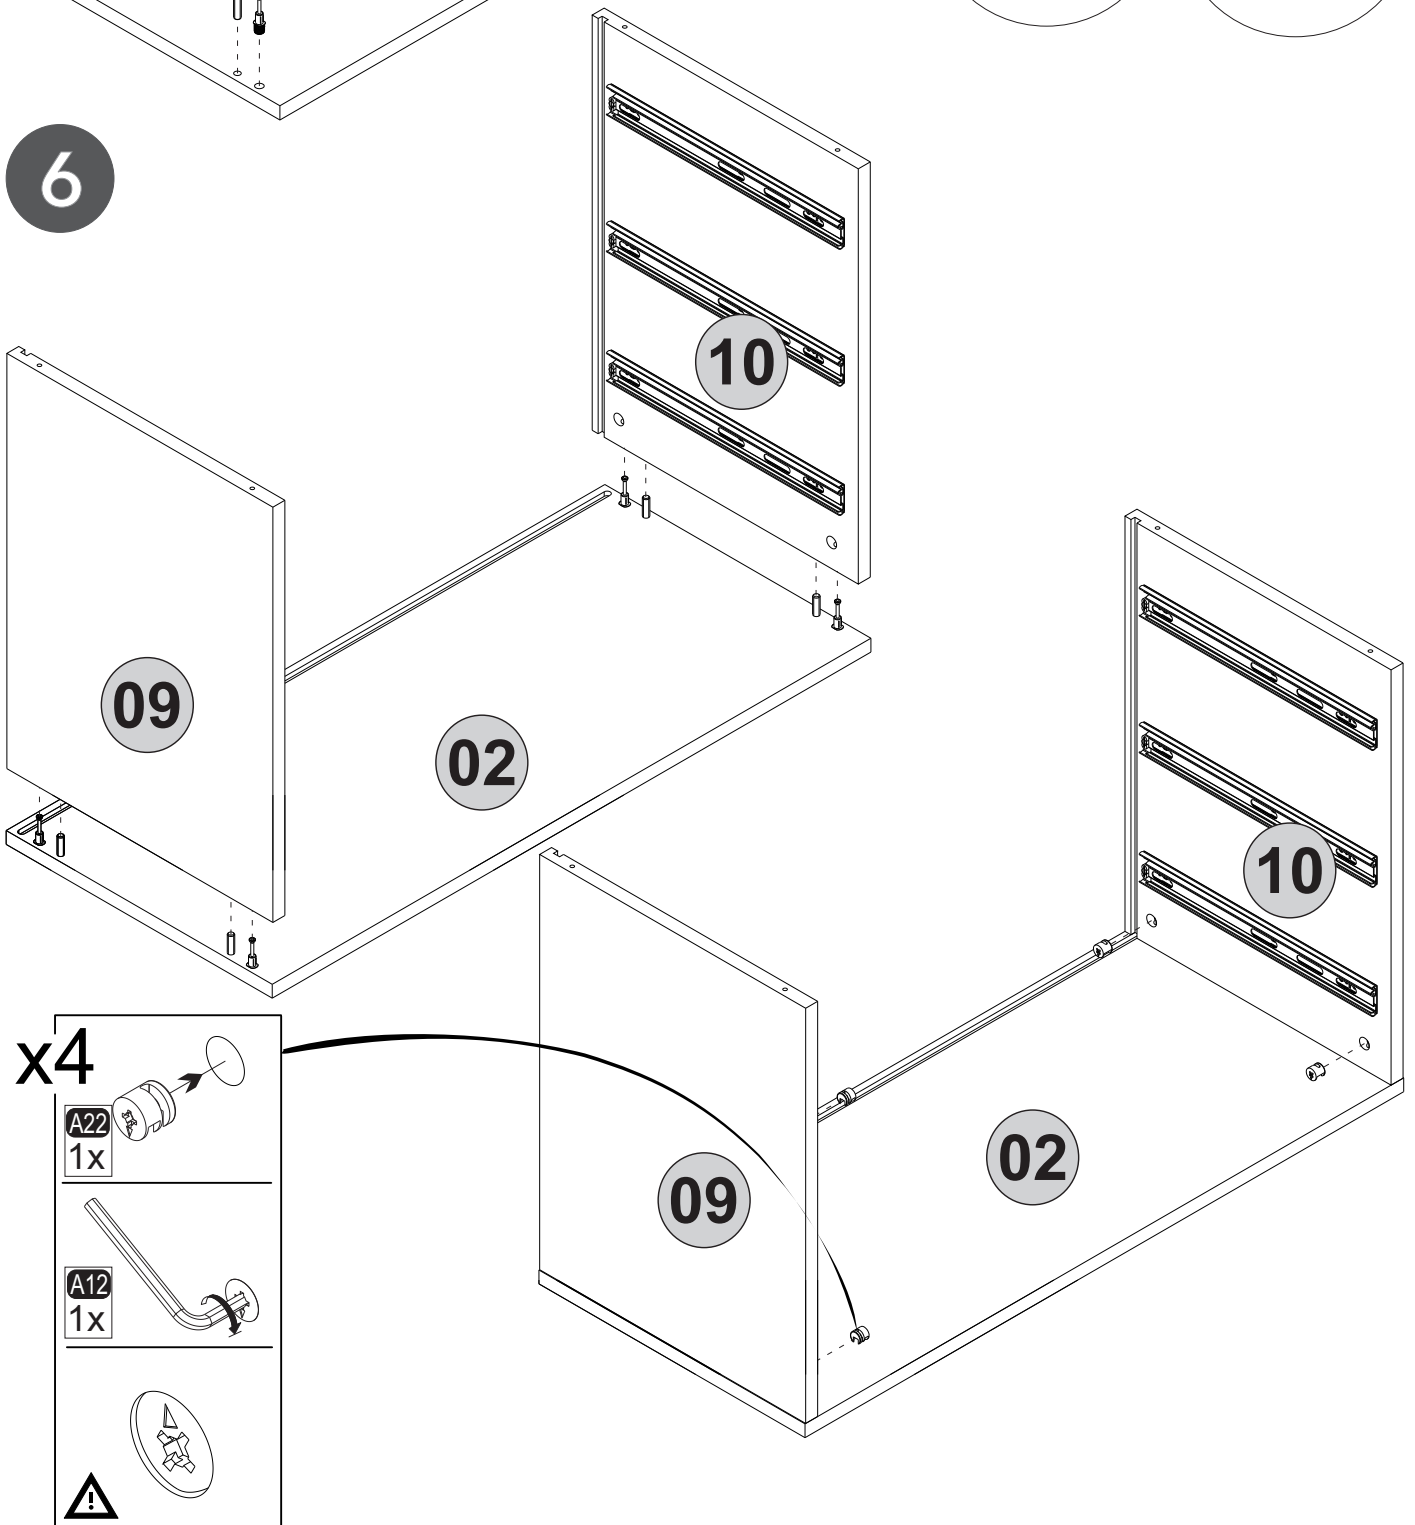


7

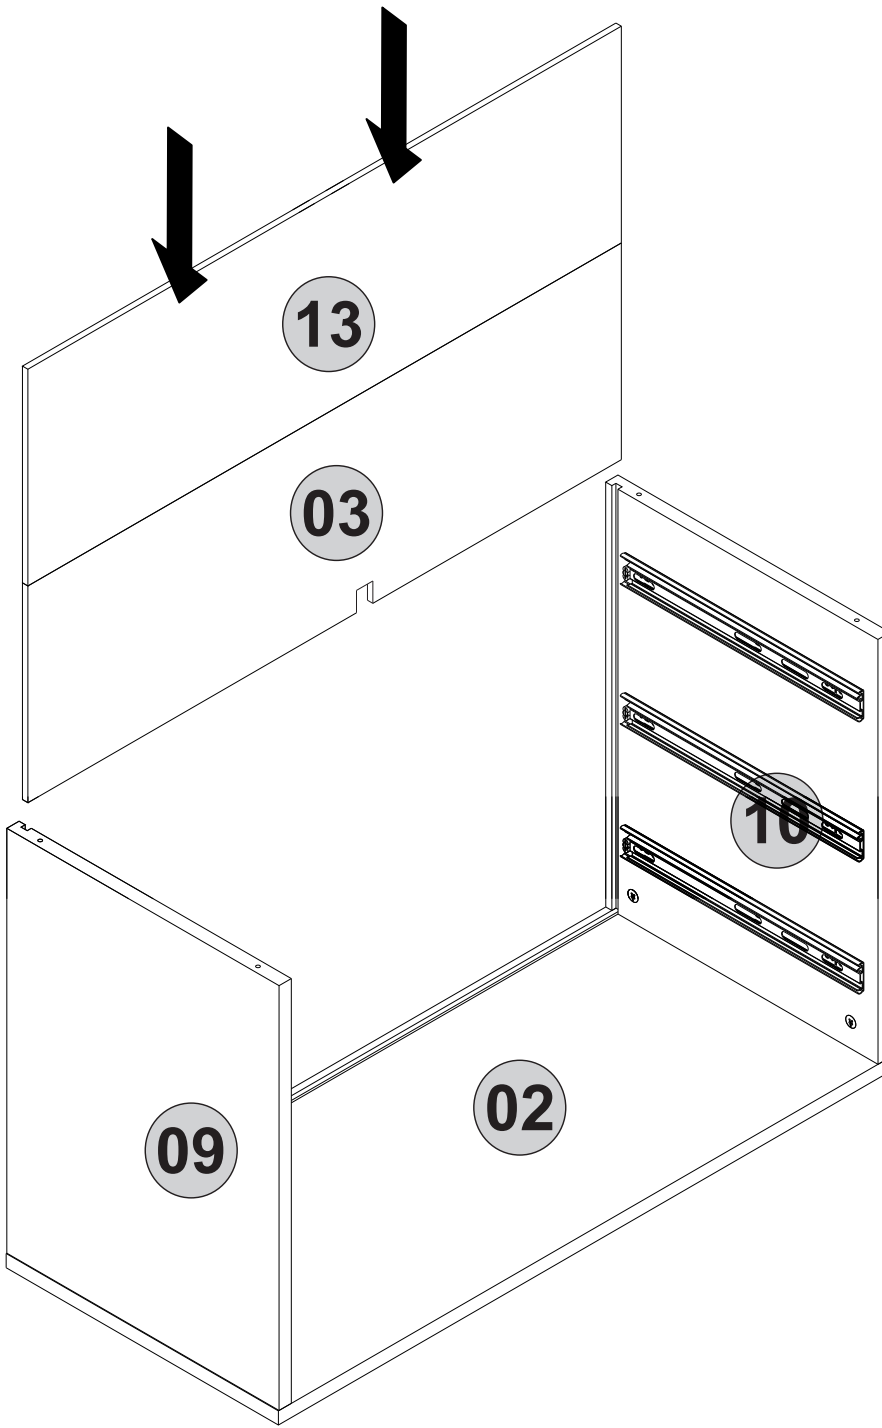


8

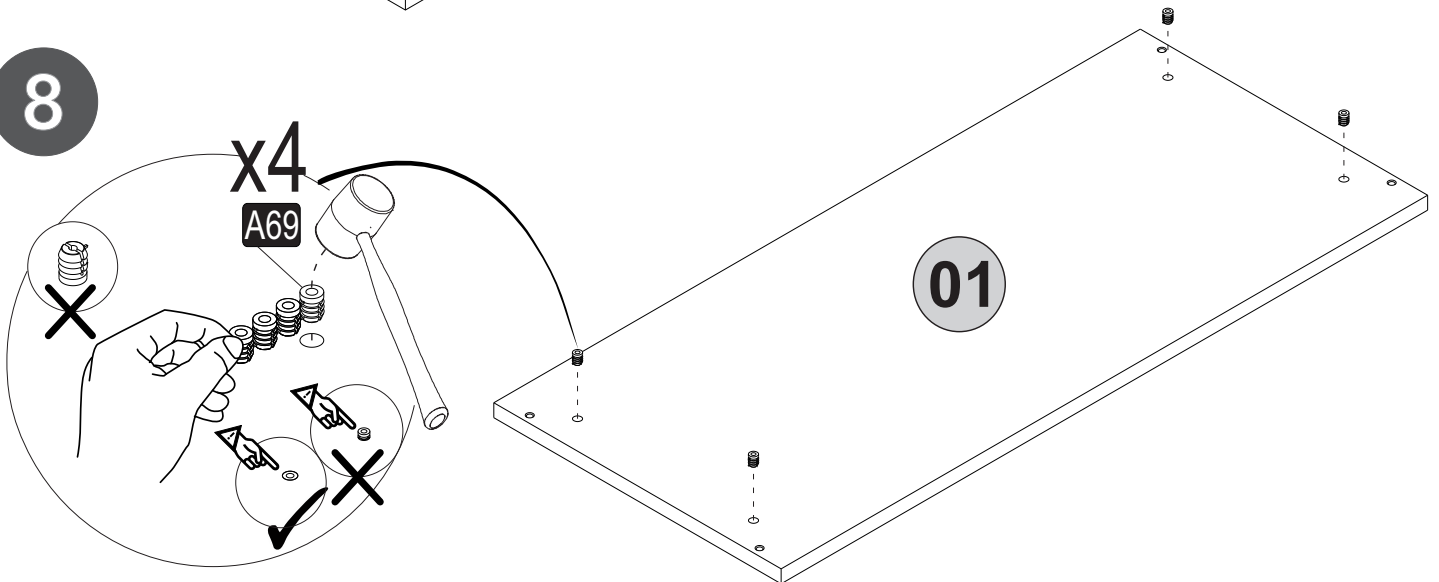



9

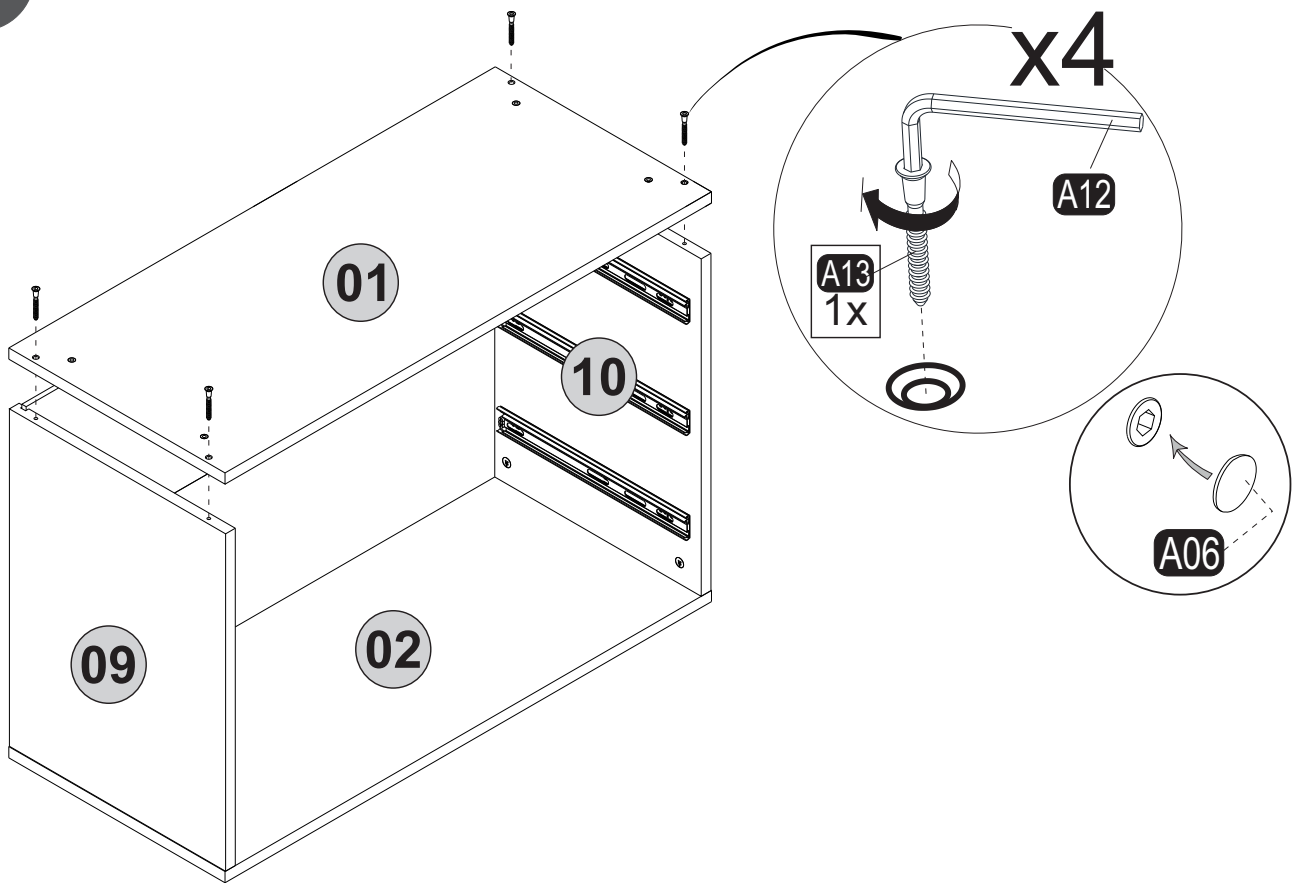



10x2

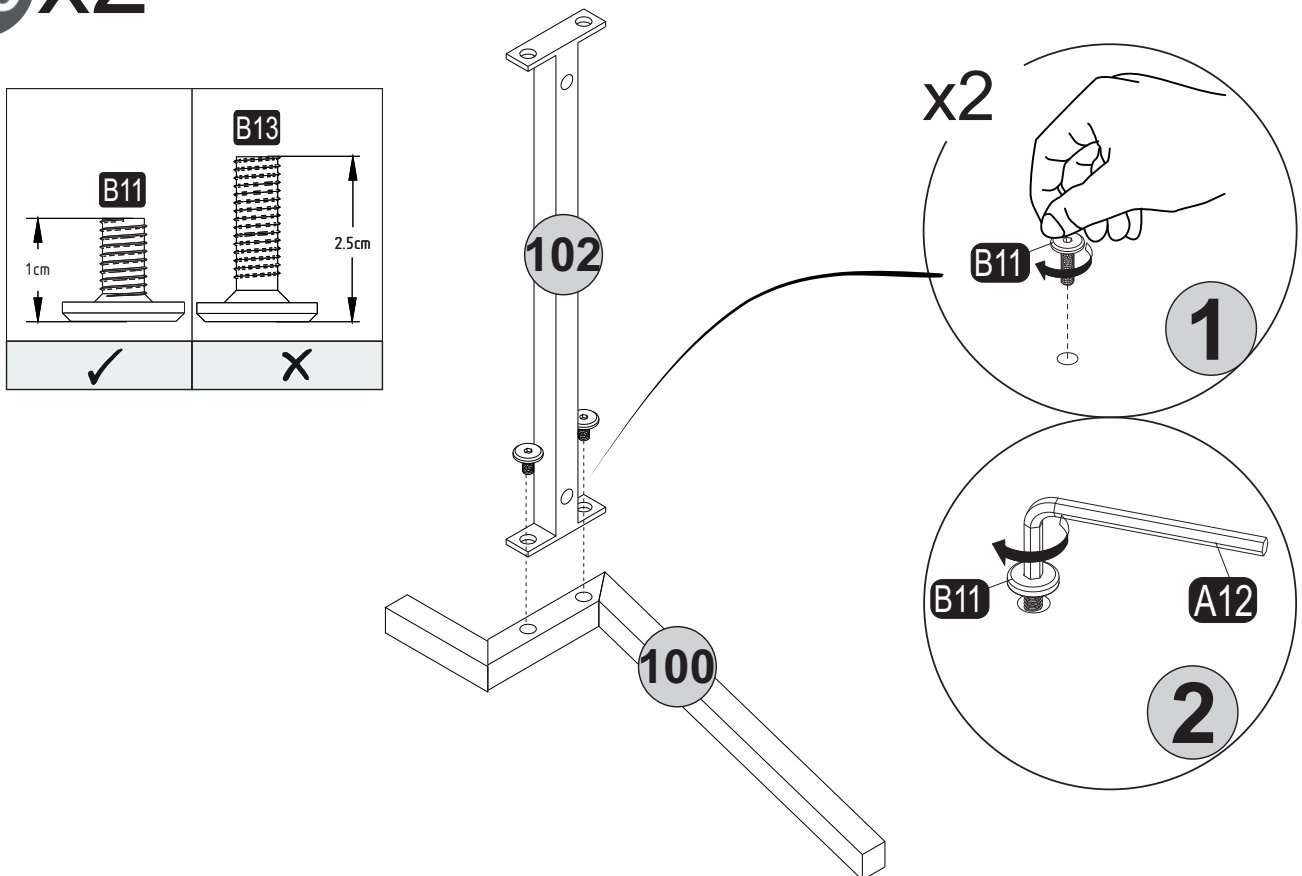


11 x2

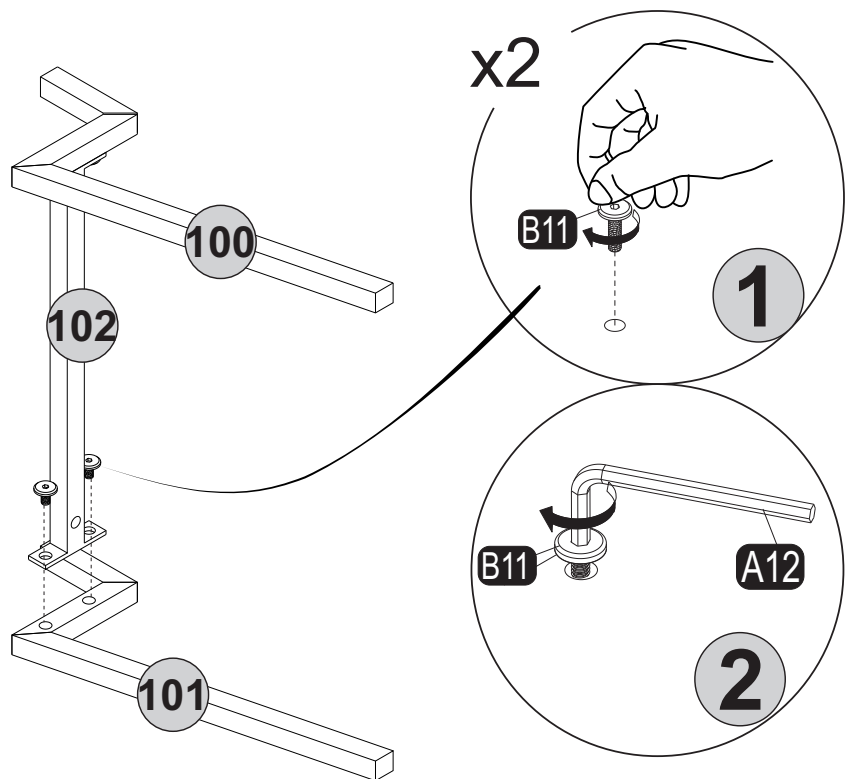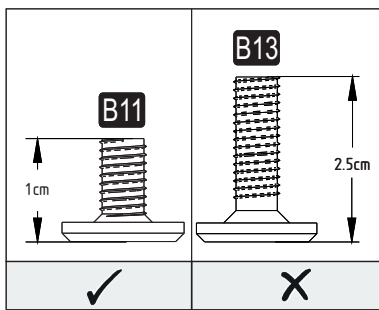


12

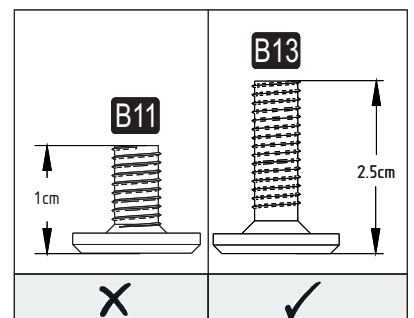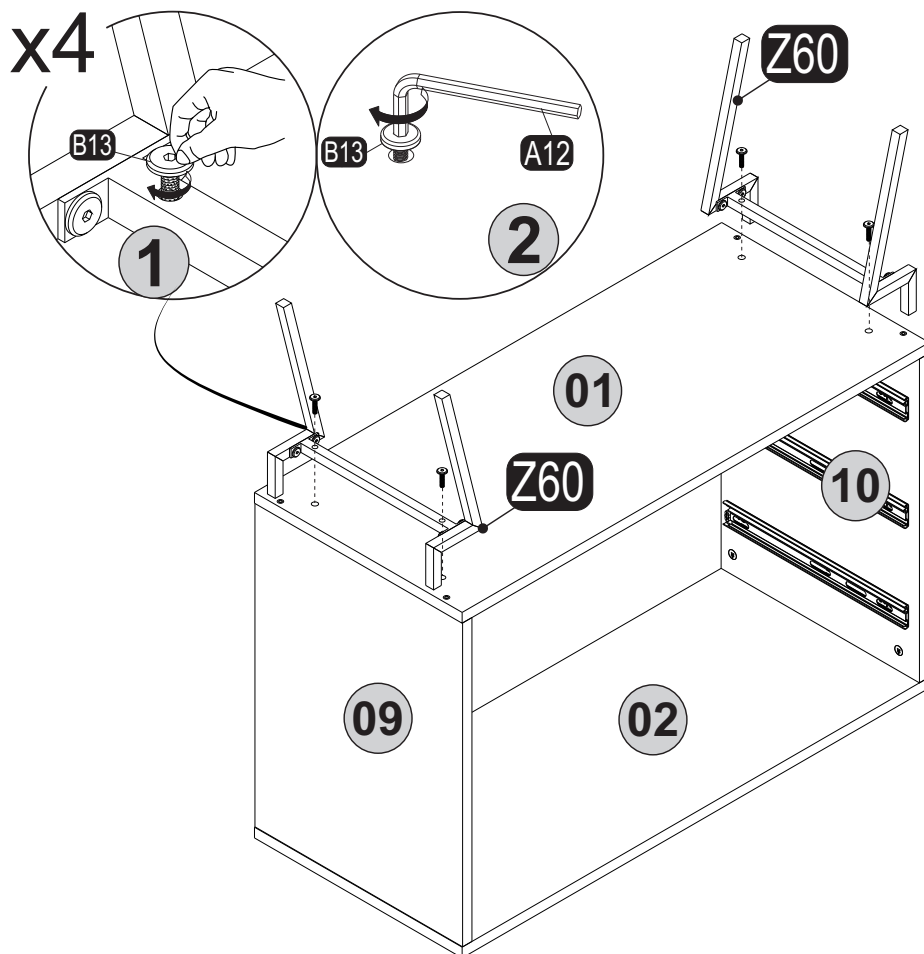


13

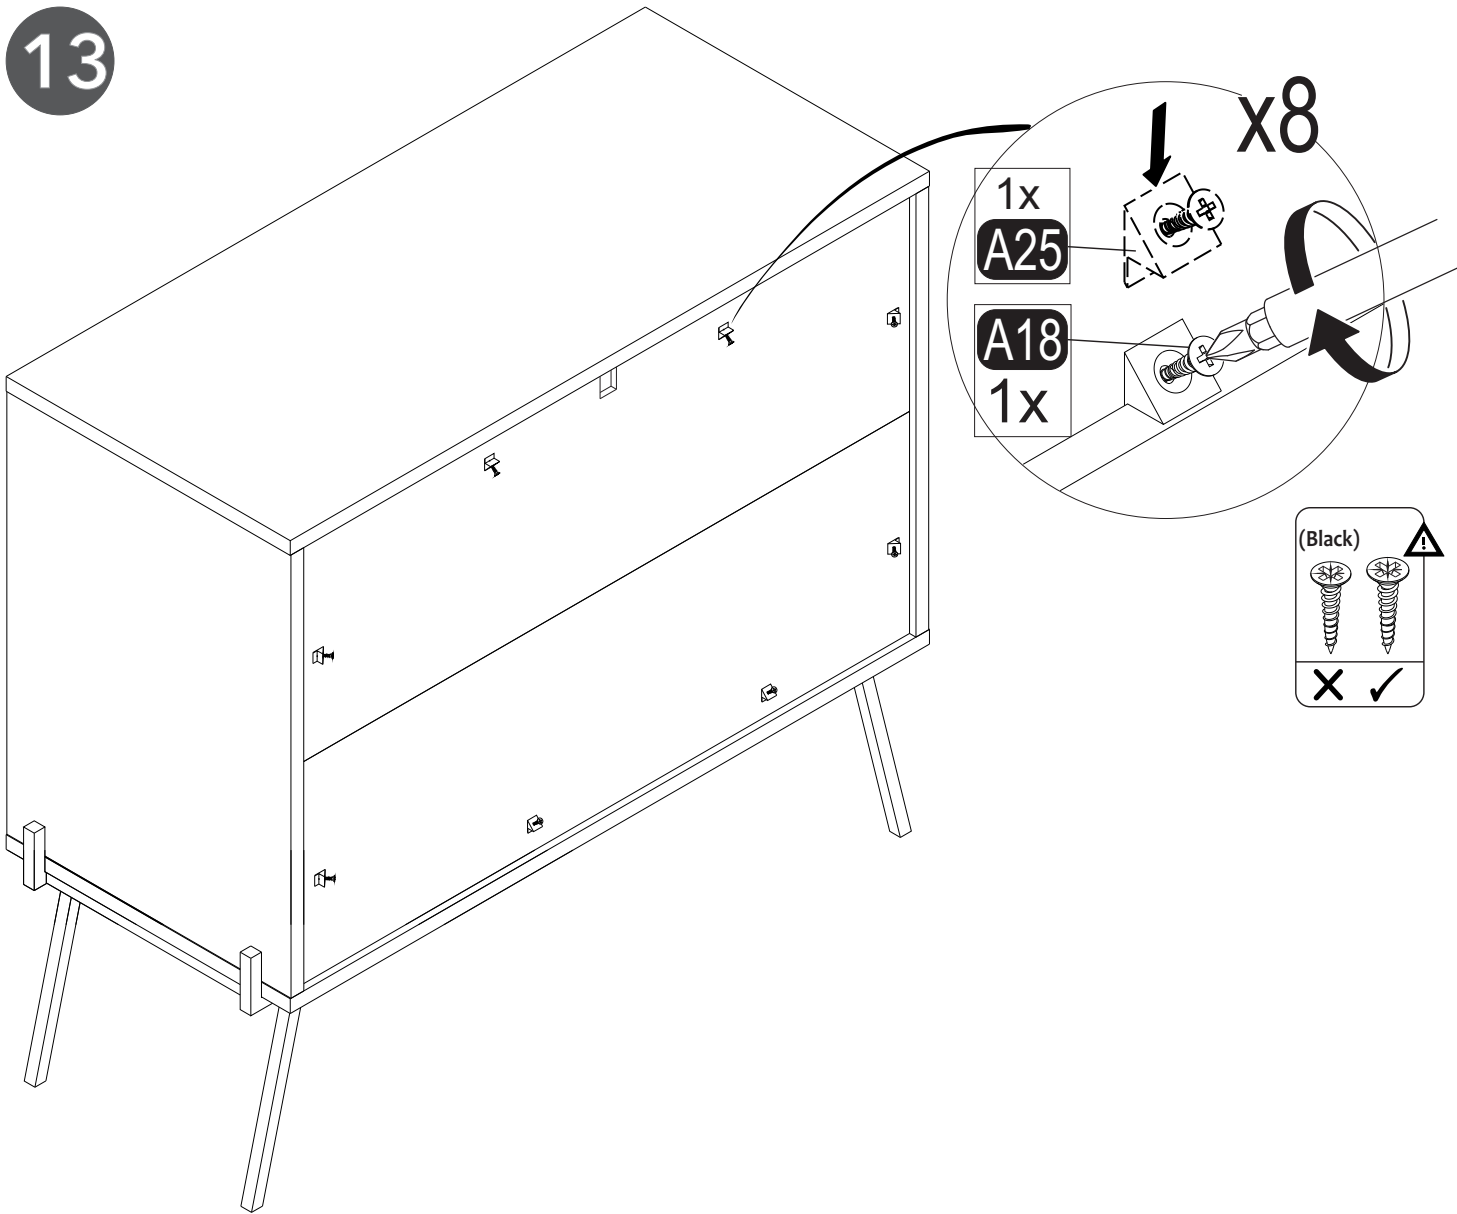


14x2

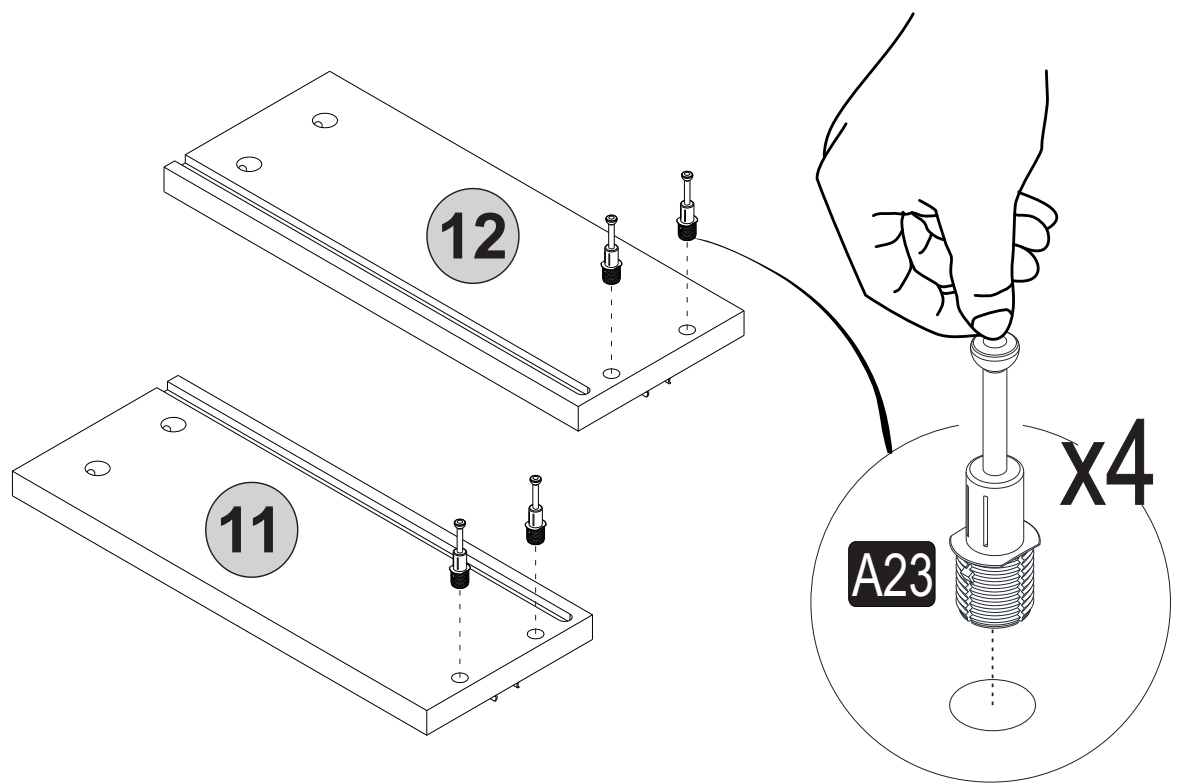


15x2

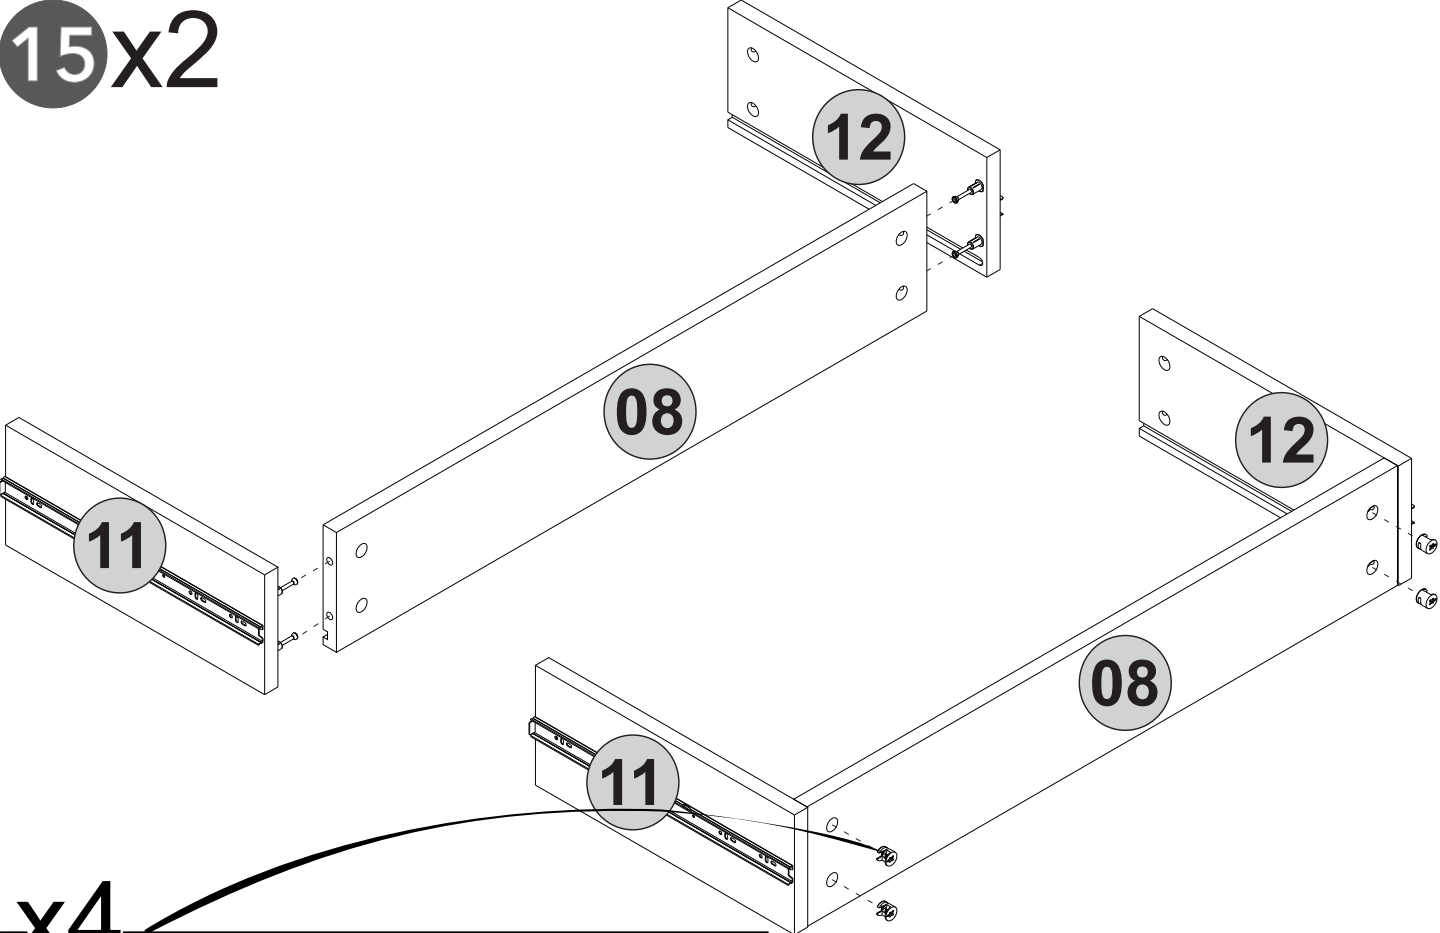


x4

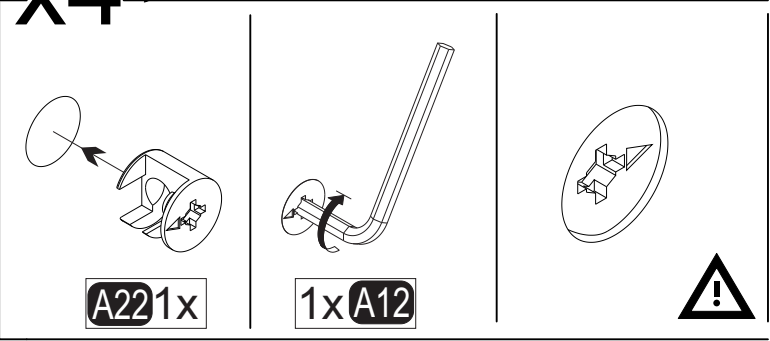





16x2

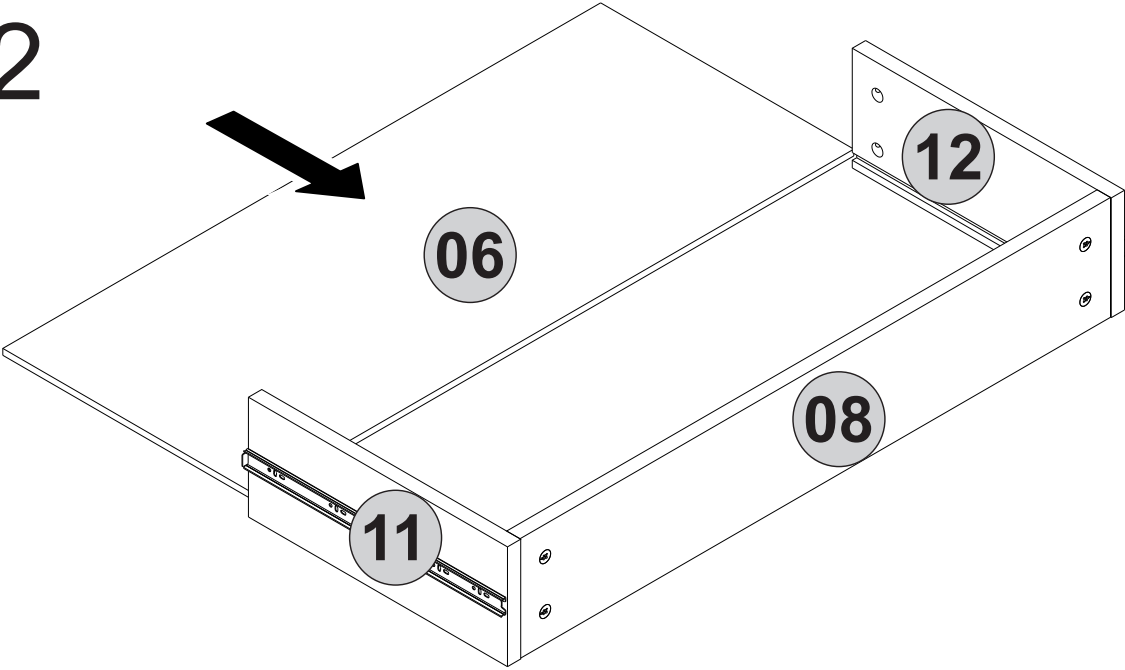


17x2

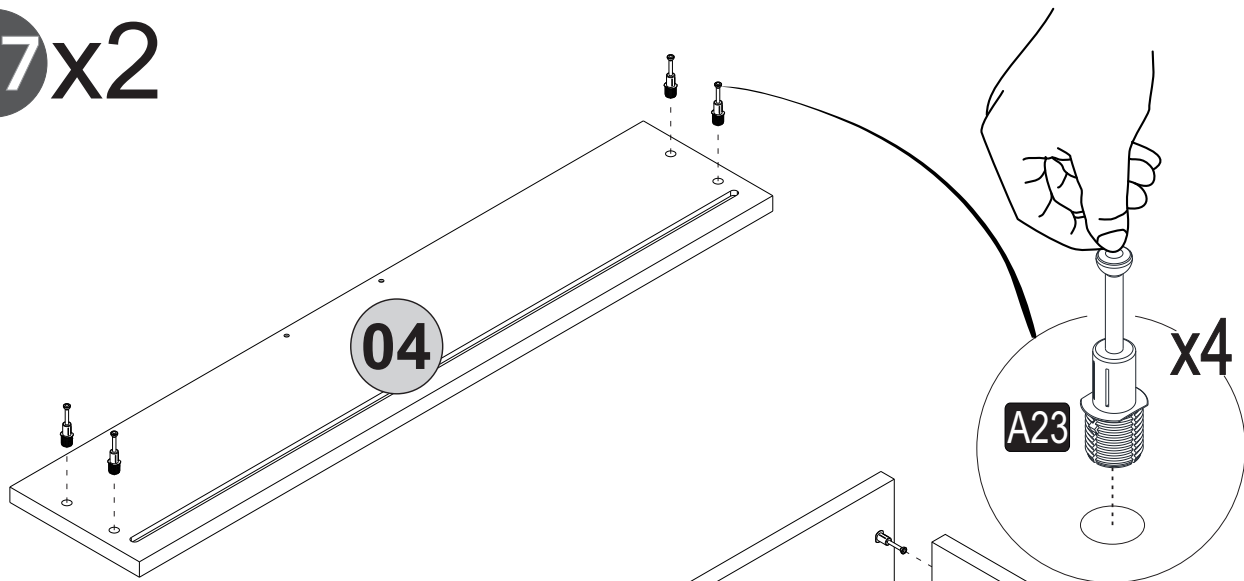


18x2

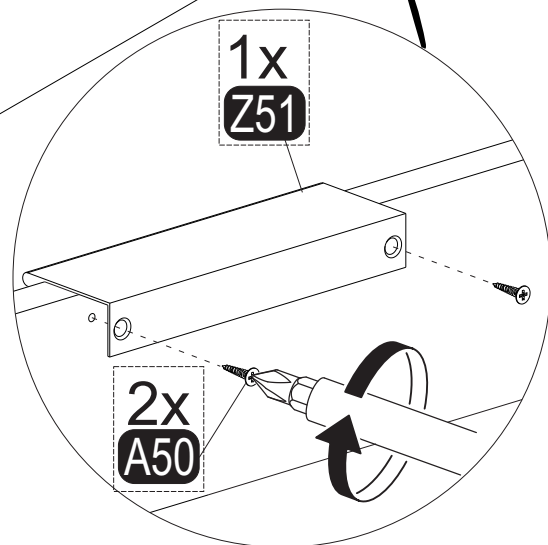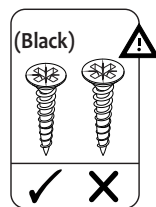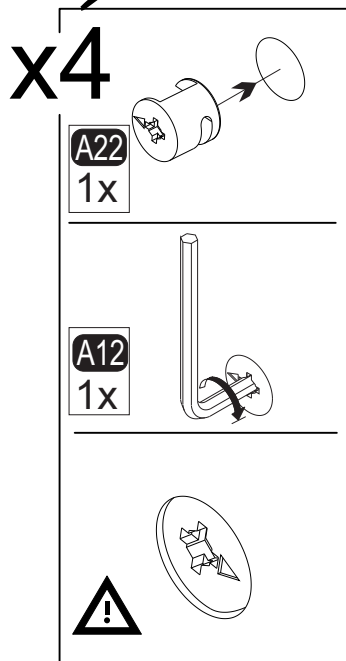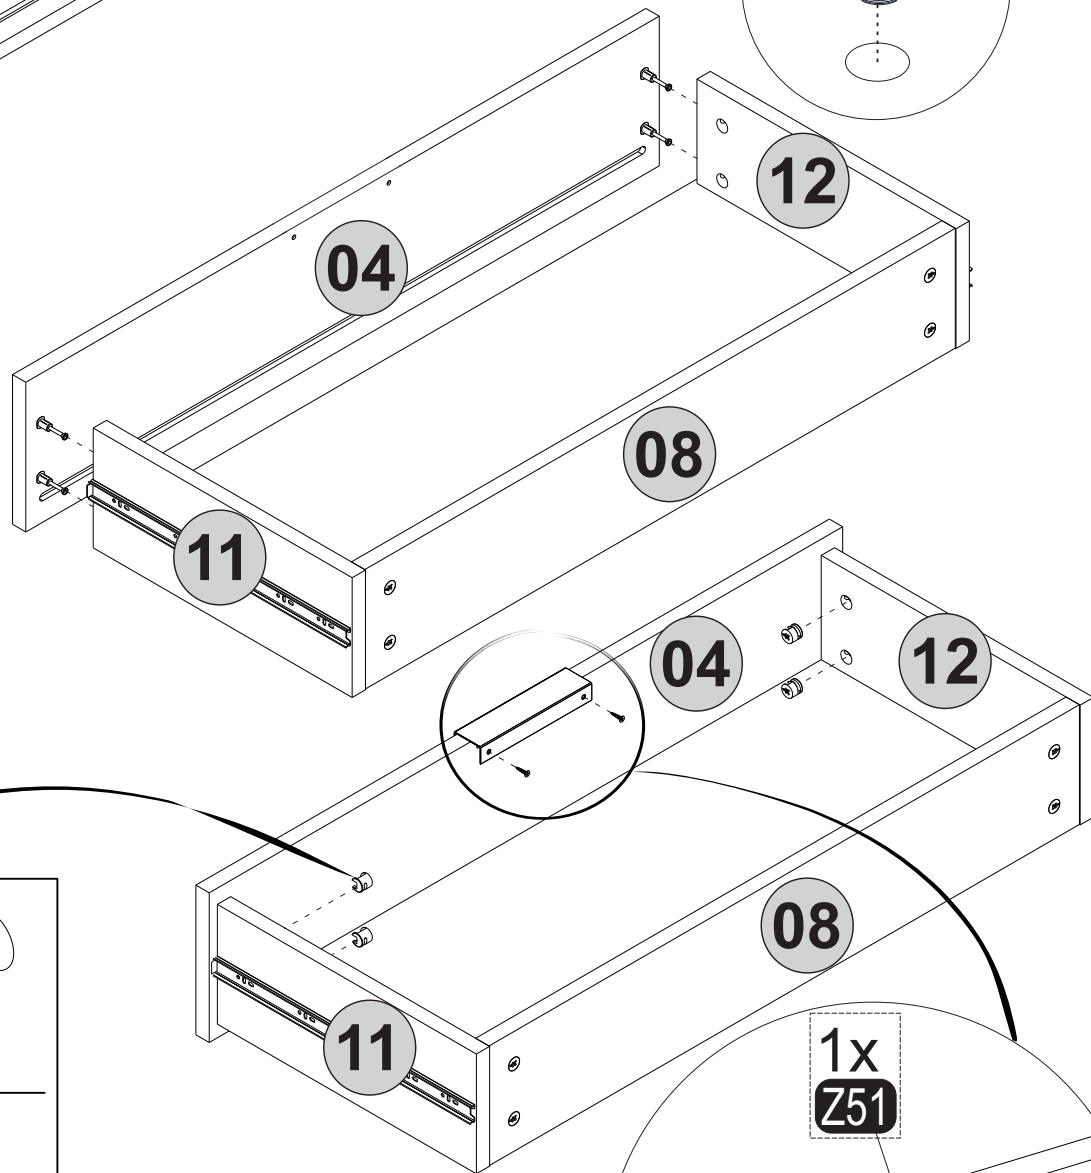

19x2

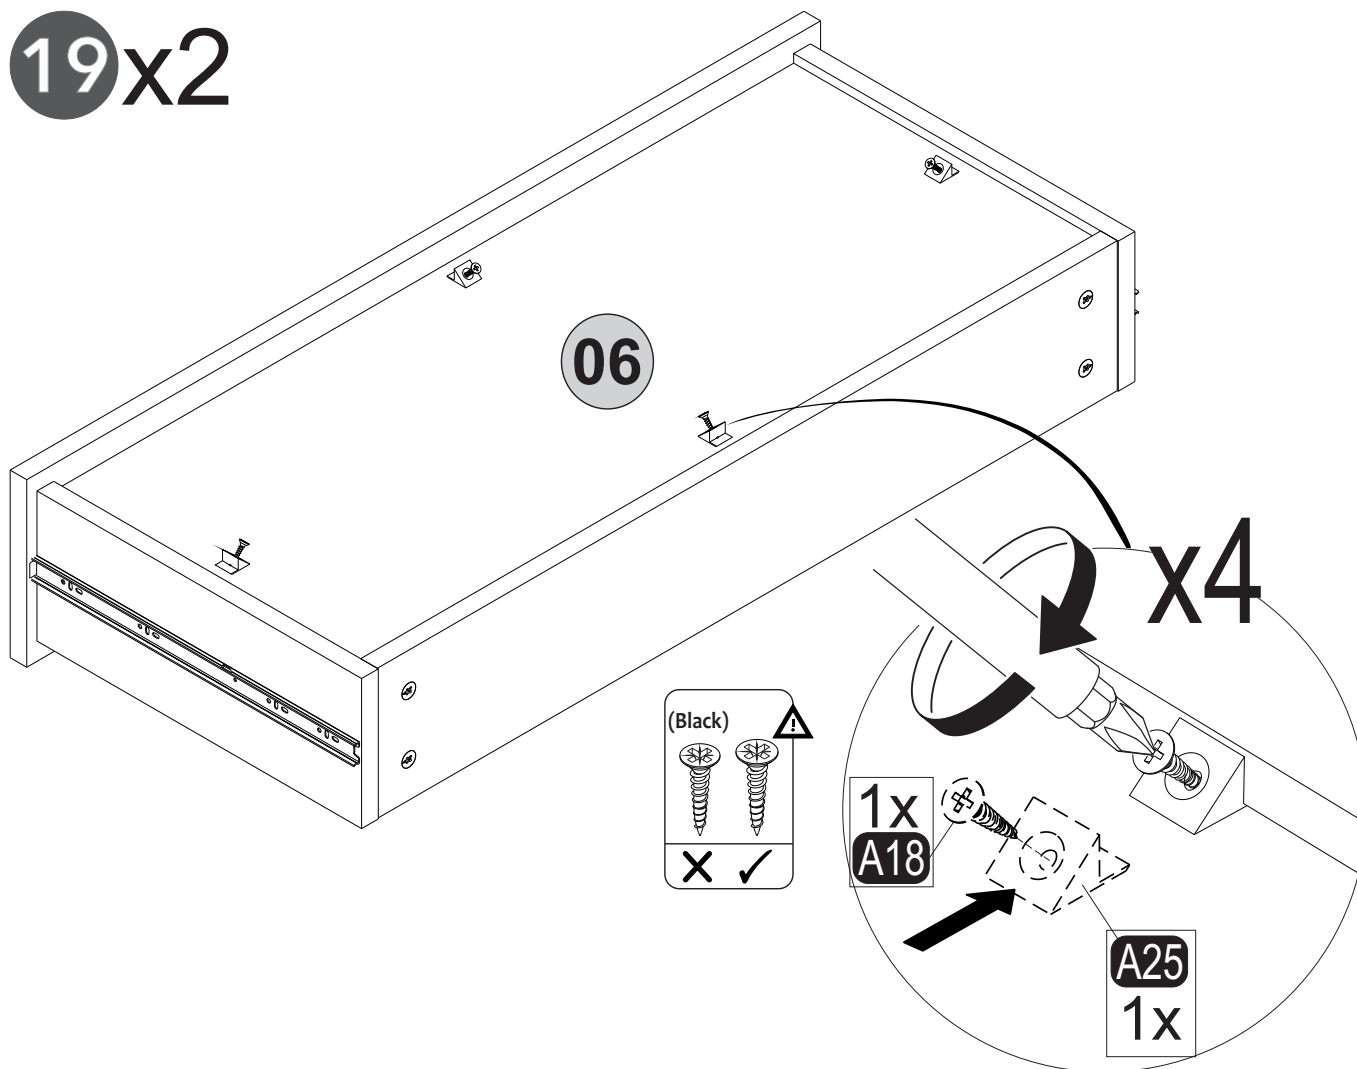

20

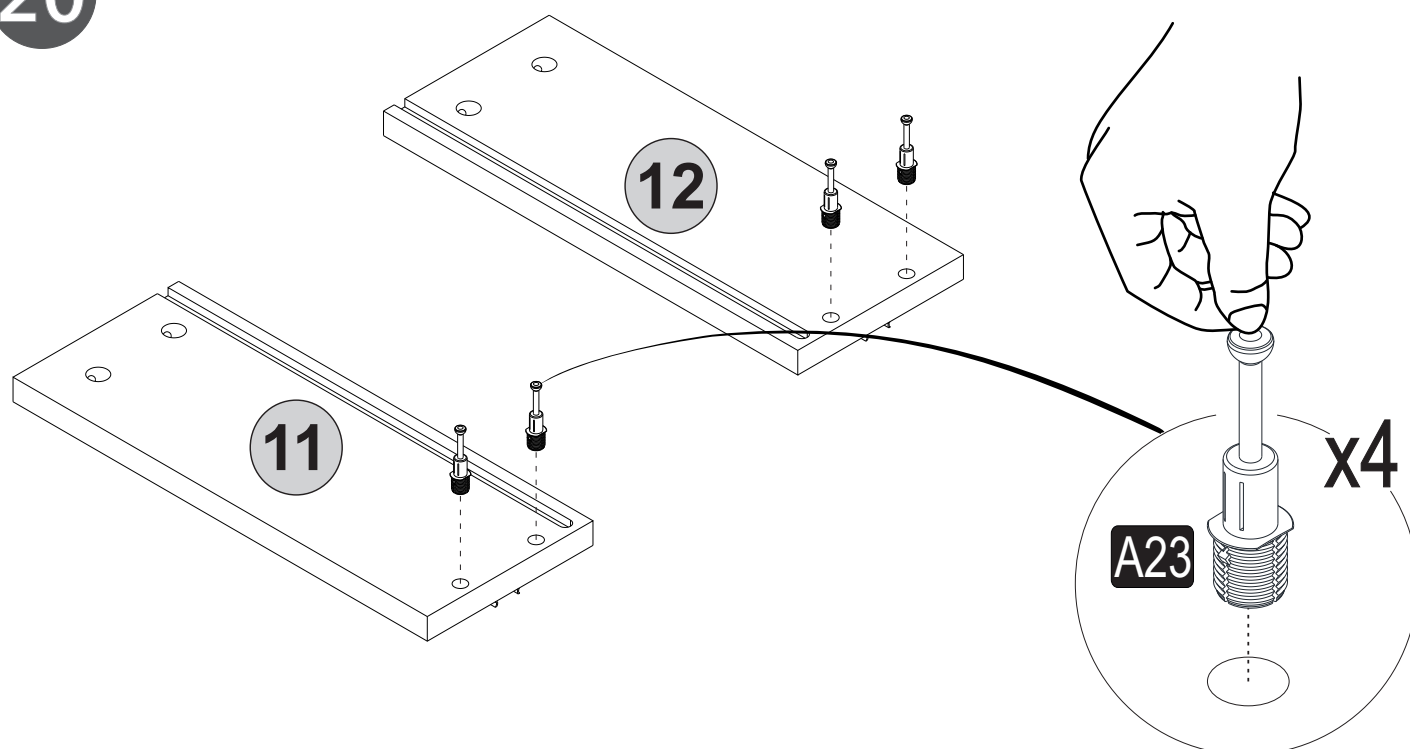

21

11

08

12

x4


A22
1x

A12
1x





!

Diagram 22 illustrates the step of attaching the front panel (12) to the cabinet frame. The panel is shown being lowered into place, guided by a large downward arrow. The panel is secured to the frame (08) using the front panel clips (11). The top edge of the panel is aligned with the top rail (07). The diagram includes three warning icons: a hand pointing to the top edge of the panel, a hand pointing to the top edge of the frame, and a hand pointing to the top edge of the panel, indicating that the panel should be handled carefully to avoid damage or injury.




23






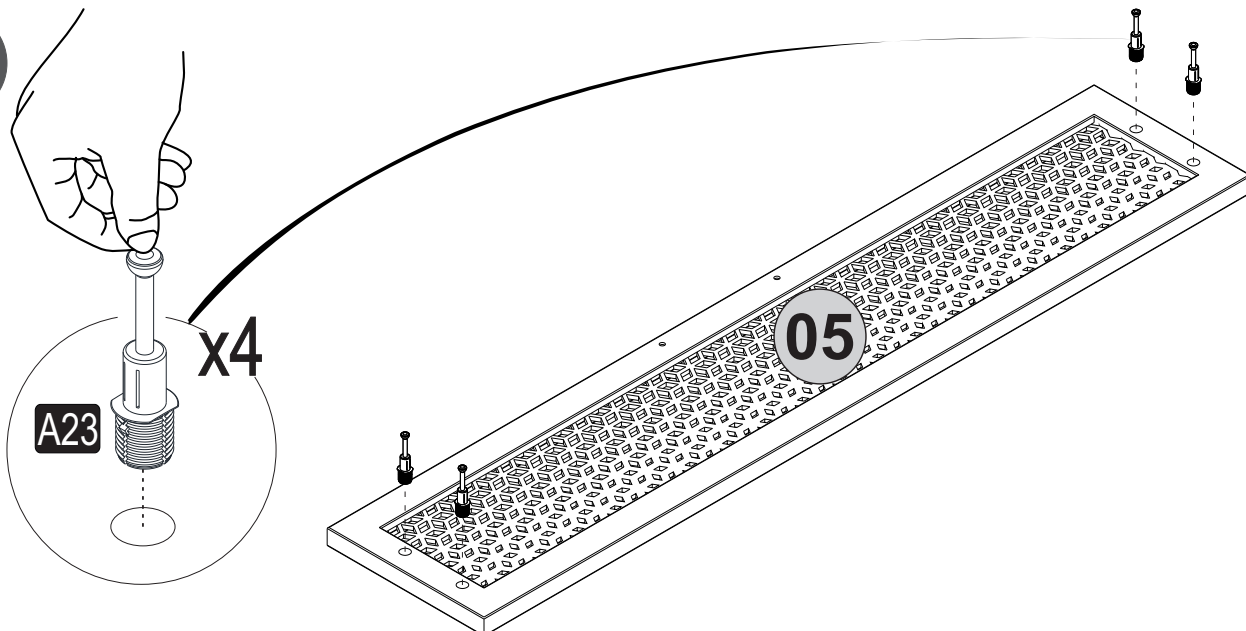


24

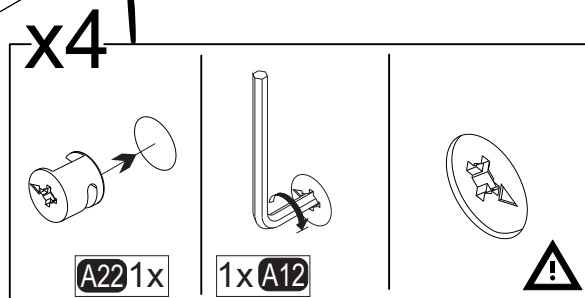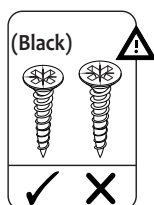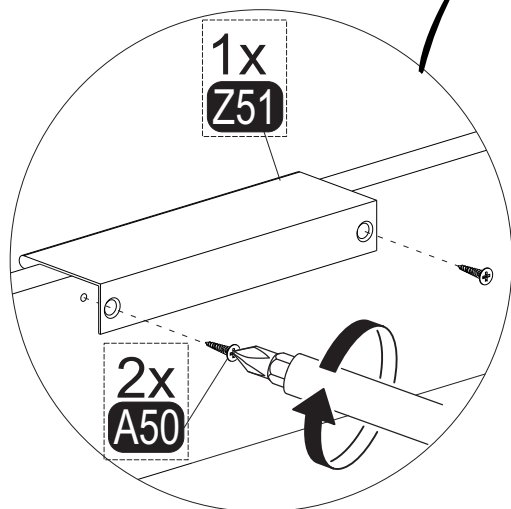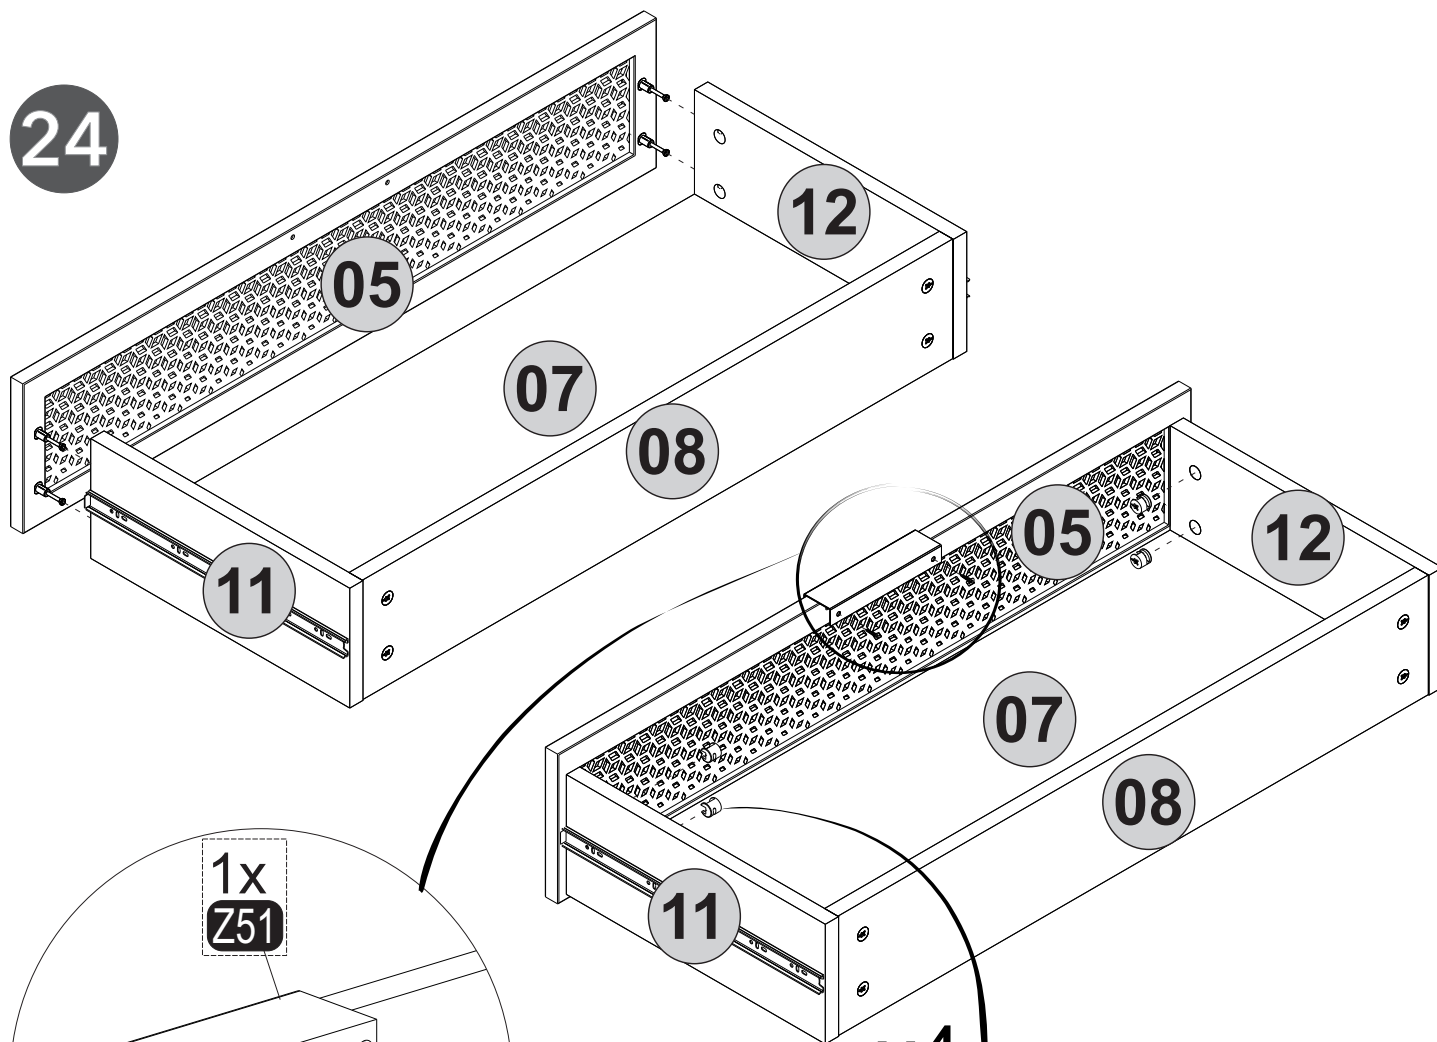

25

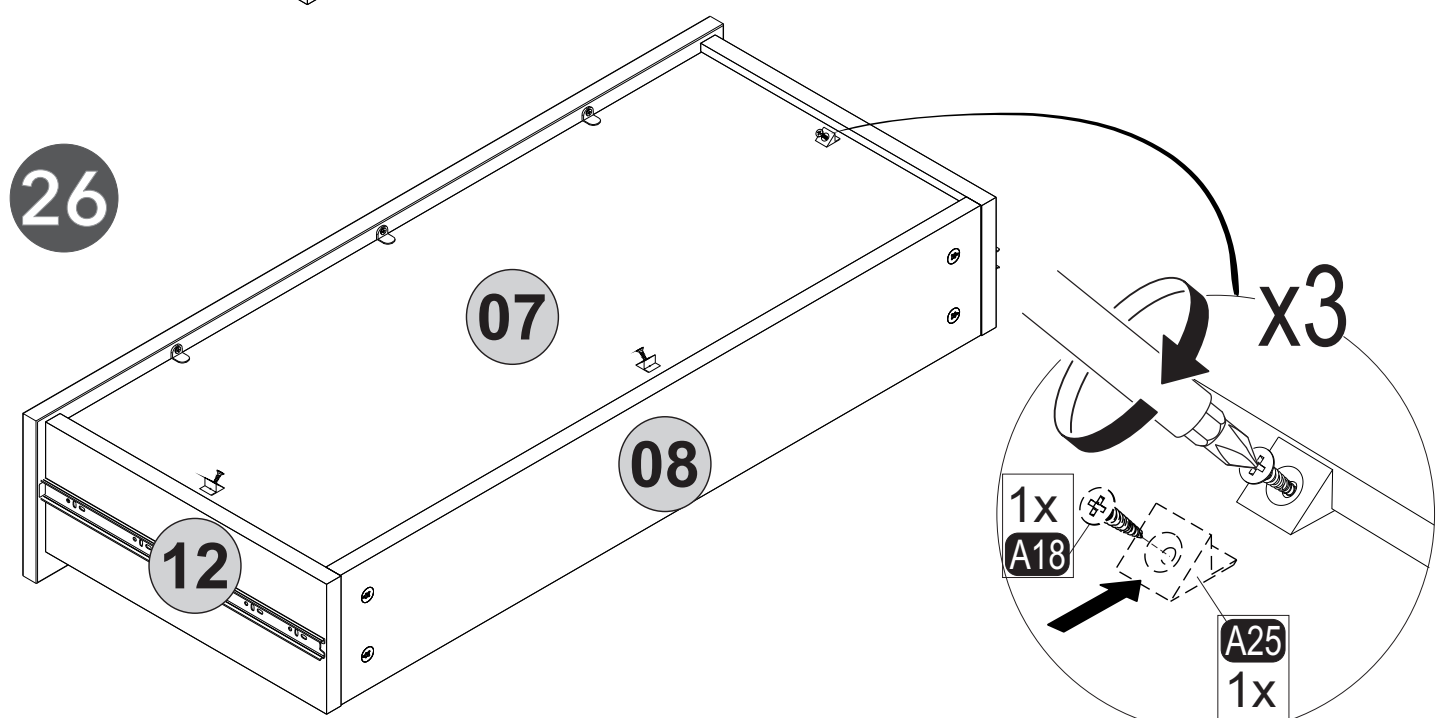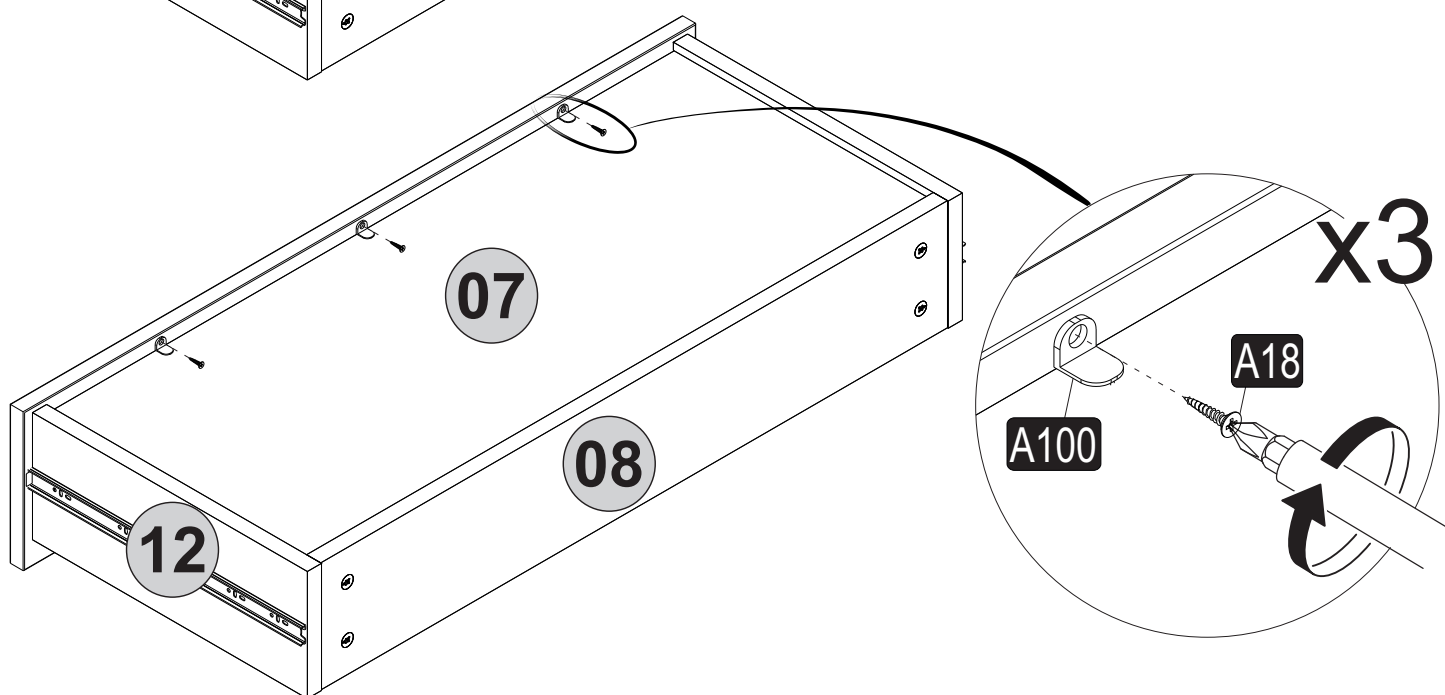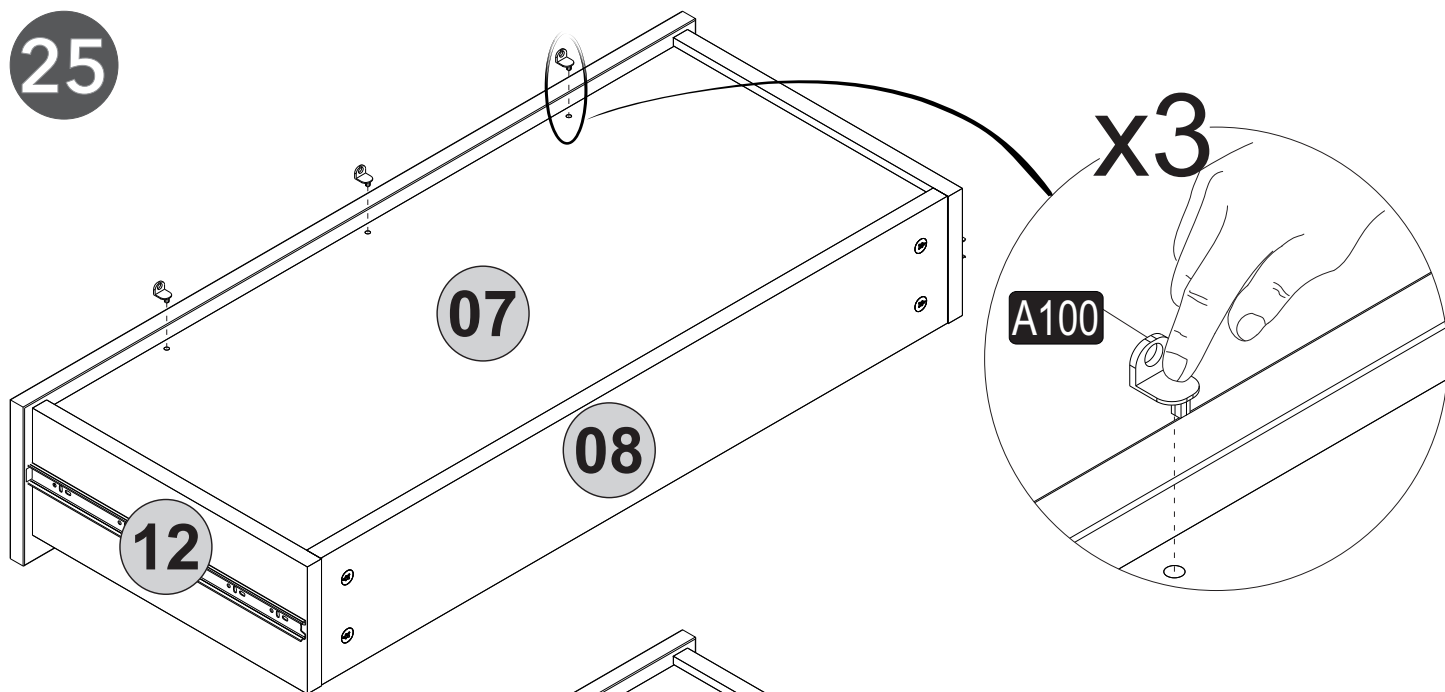

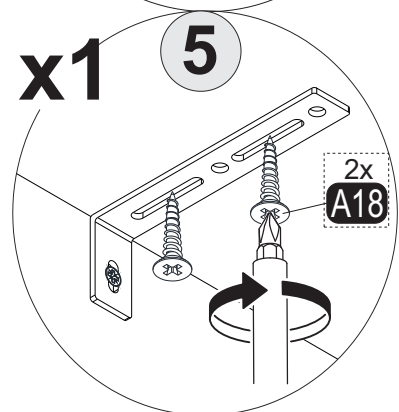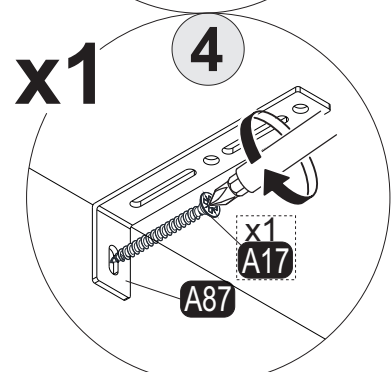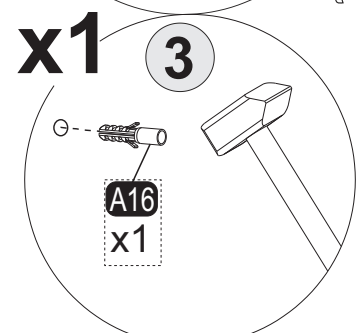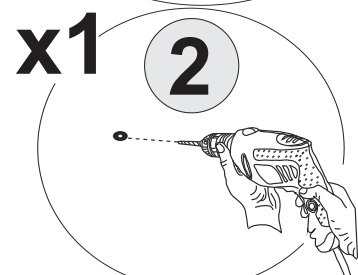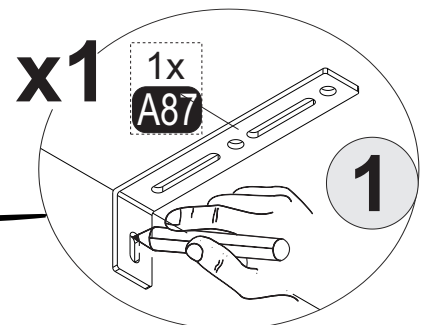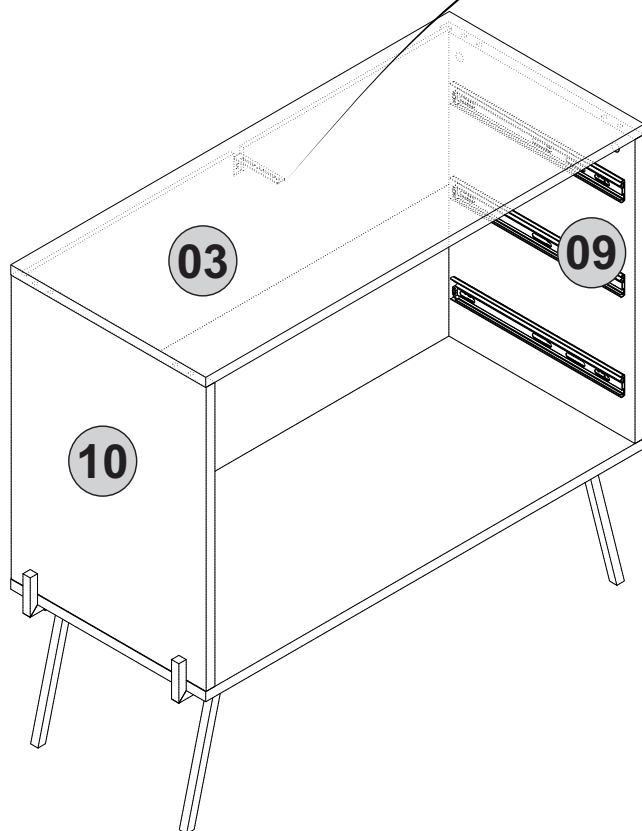

28

