











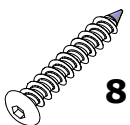




i GP052-0129,1


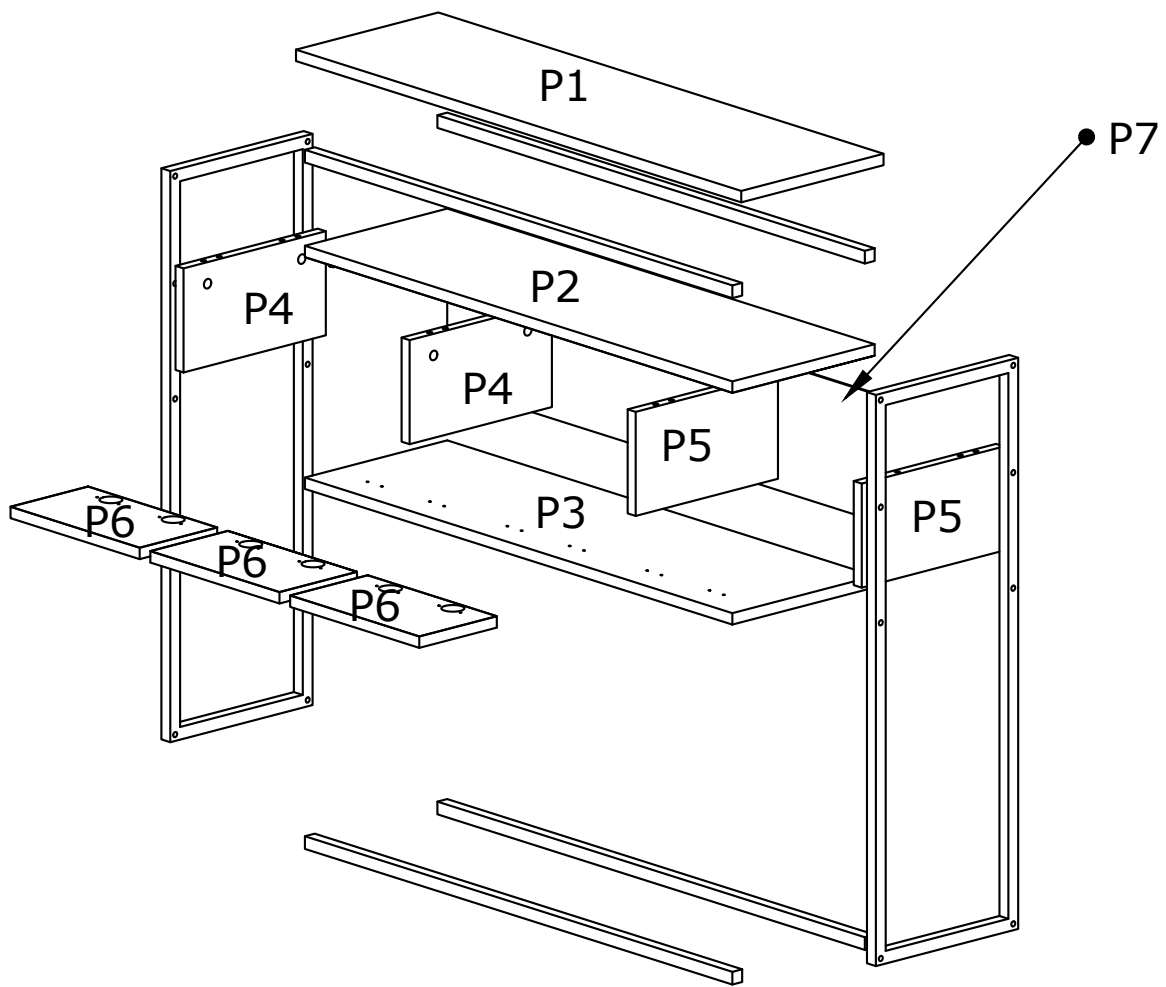


100 x 29 x 90cm





MINIFIX  8 PCS	DUFIX  8 PCS	ANCHOR  8 PCS	MINIFIX TAP  8 PCS	3,5*18 SCREW  36 PCS	4*50 SCREW  8 PCS
ALLEN KEY  1 PCS	M6*35 SCREW  8 PCS	4*35 SCREW  4 PCS	NAIL  24 PCS	BASS ON  3 PCS	WOOD SCREW  8 PCS
HINGE  6 PCS	HINGE  6 PCS				

STEP 1 :

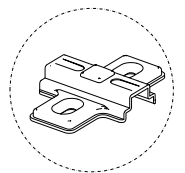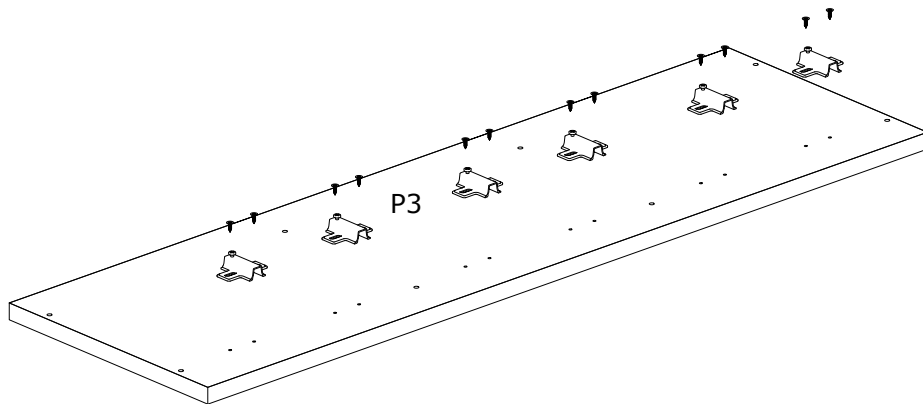


STEP 2 :

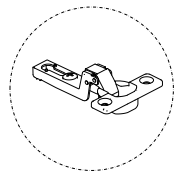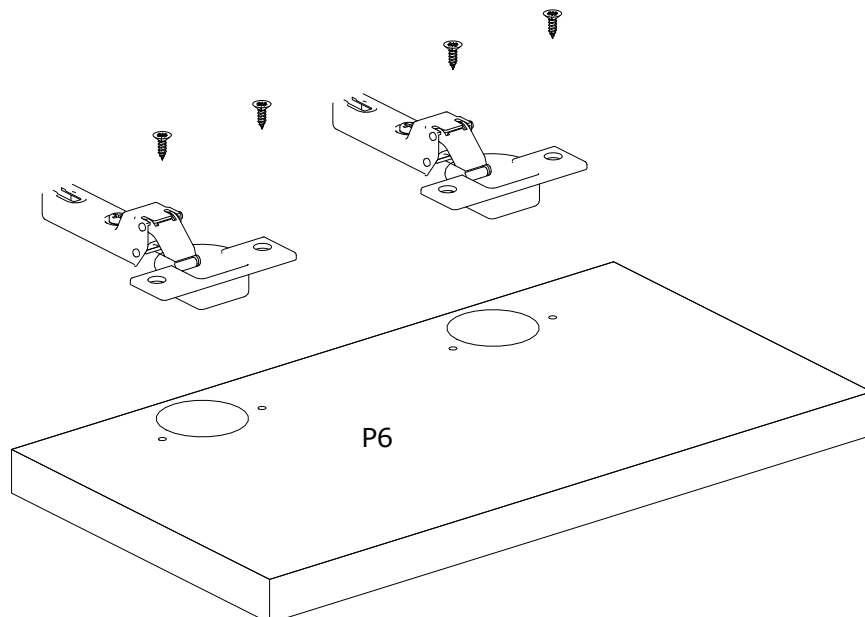


3 PCS


STEP 3 :

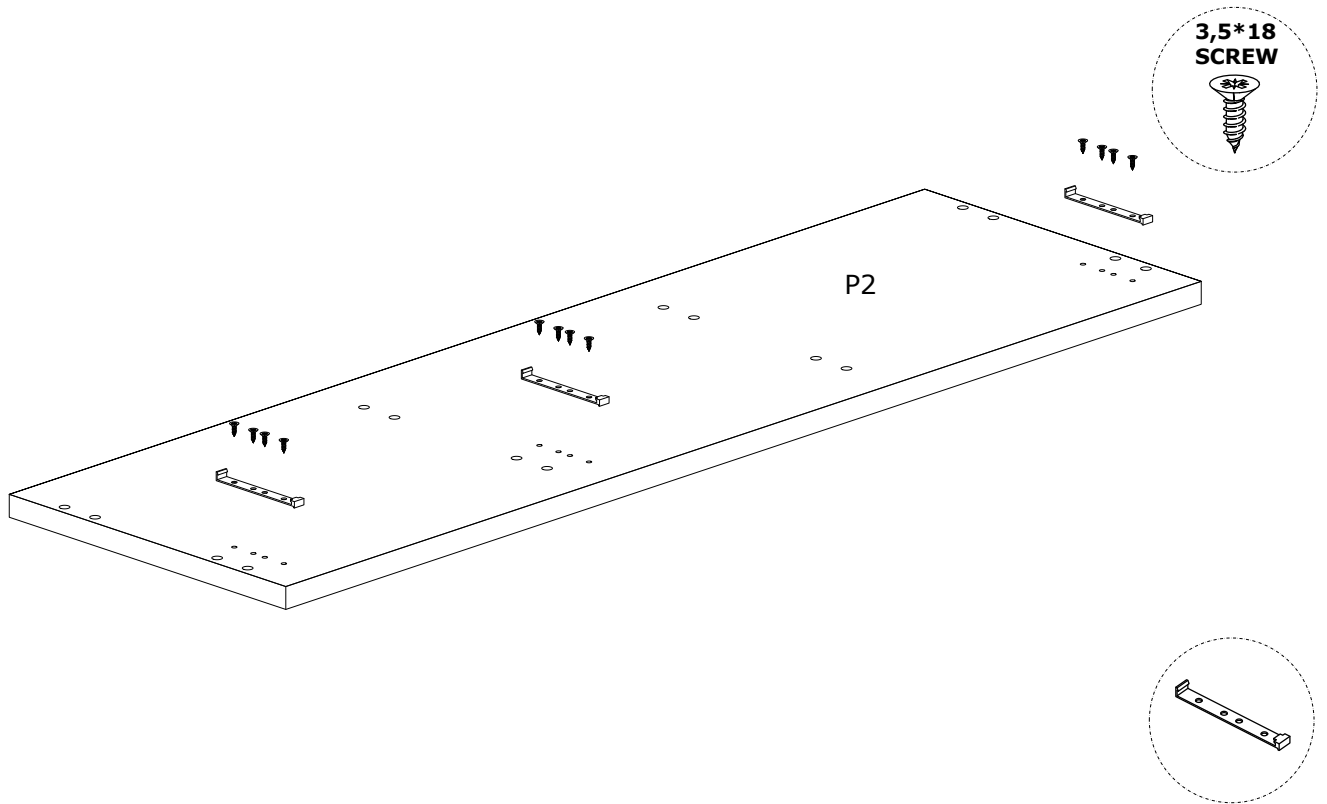


STEP 4 :

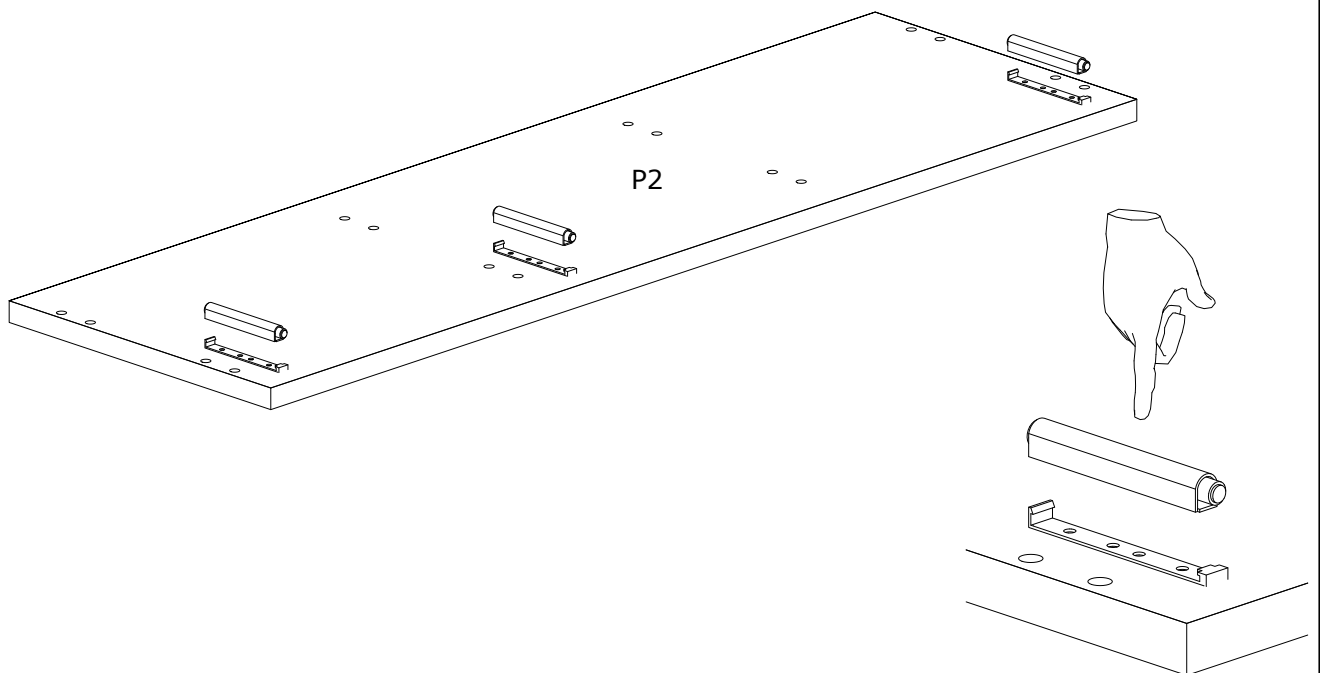

STEP 5 :


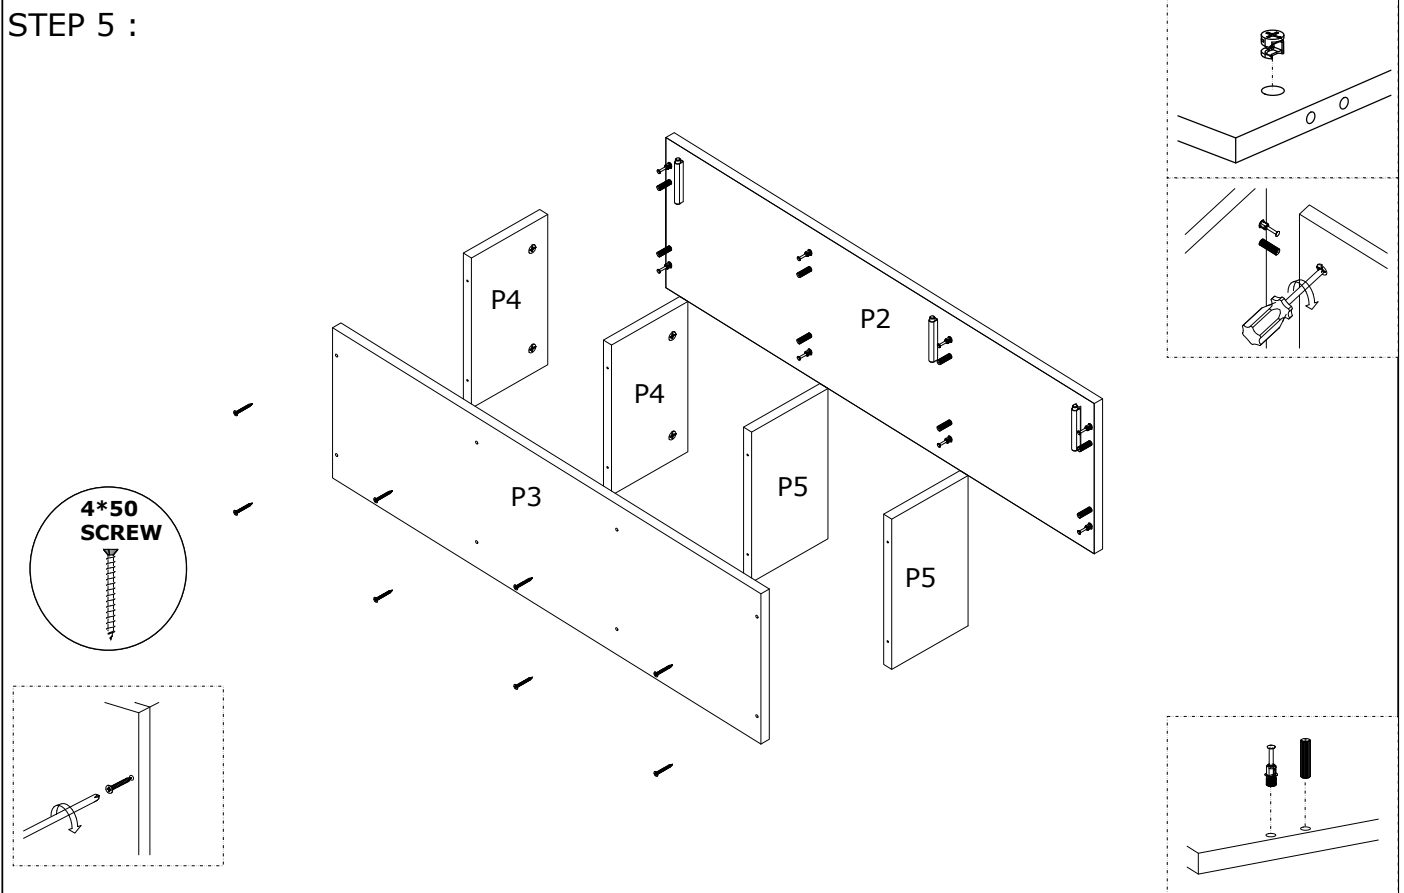


STEP 6 :

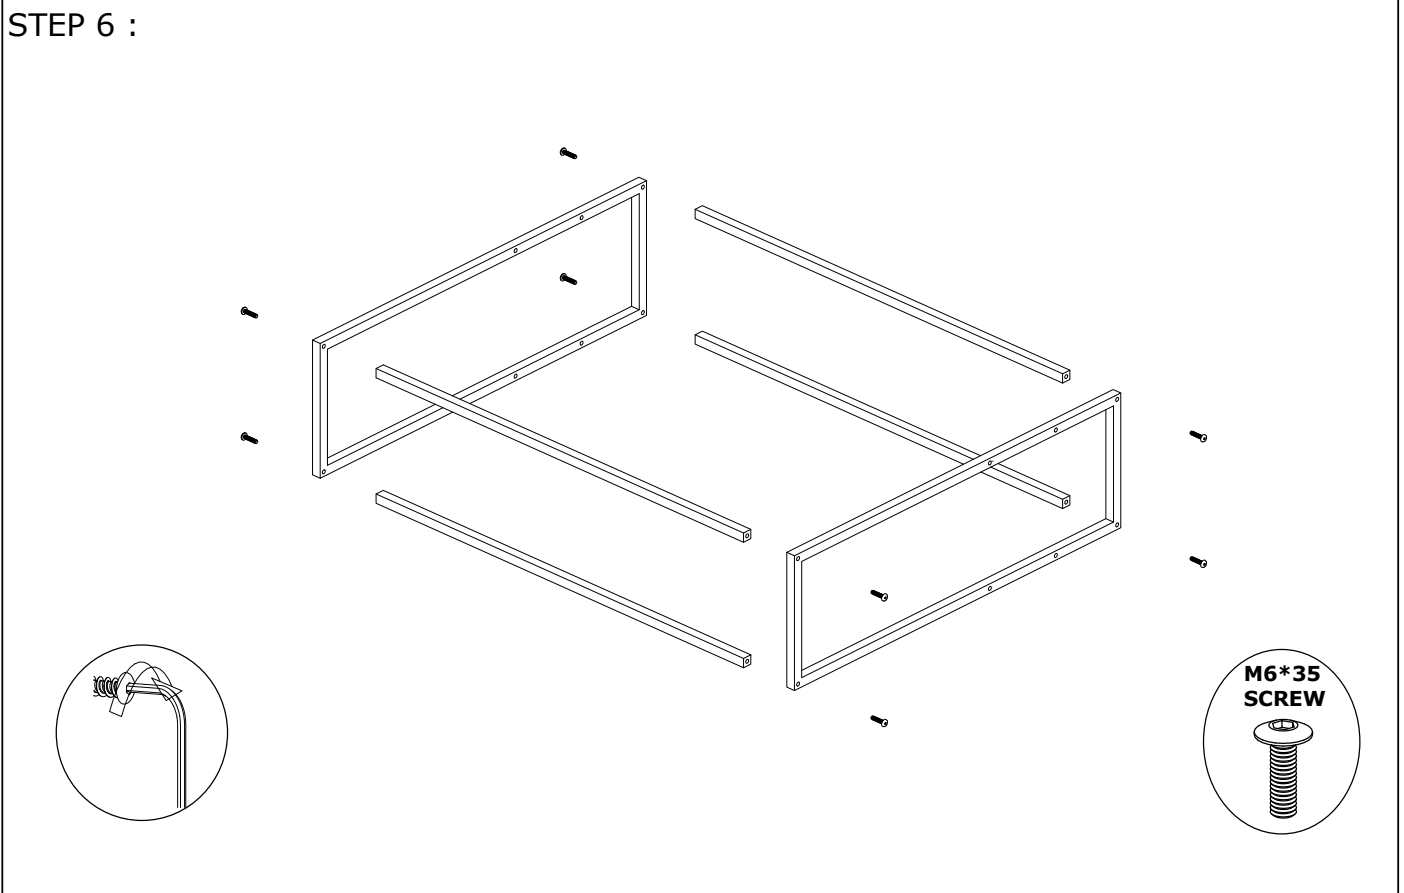


STEP 7 :

**WOOD
SCREW**

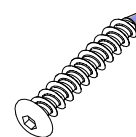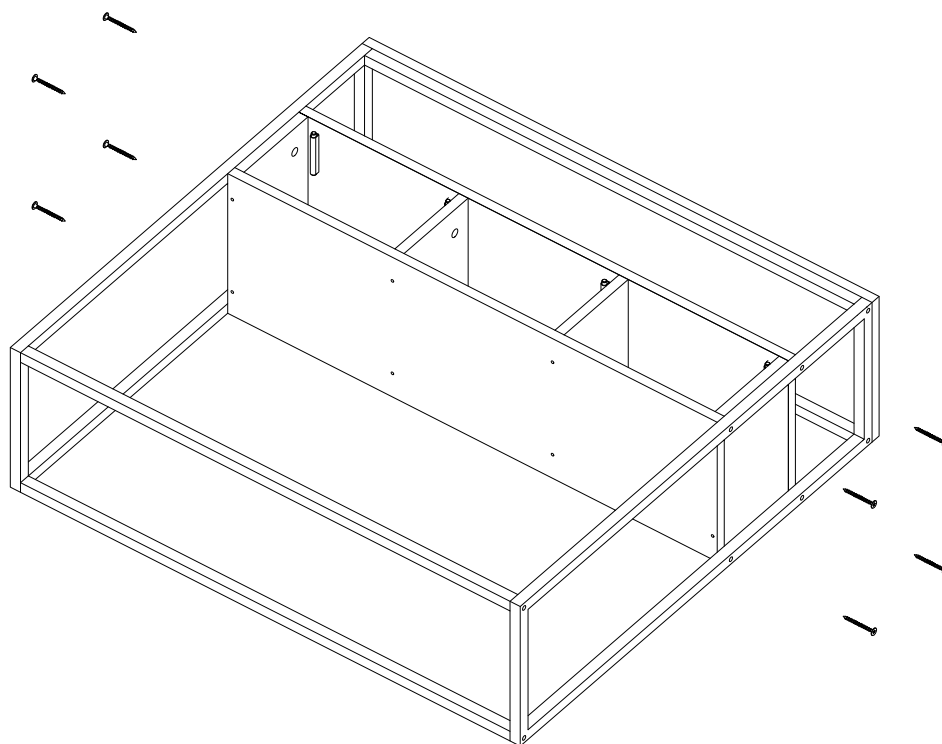


STEP 8 :

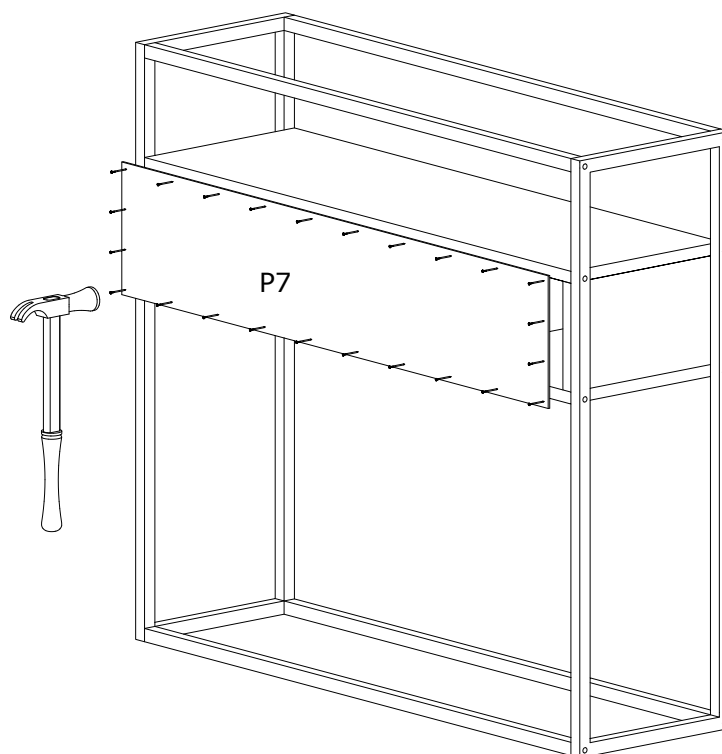

NAIL



STEP 9 :

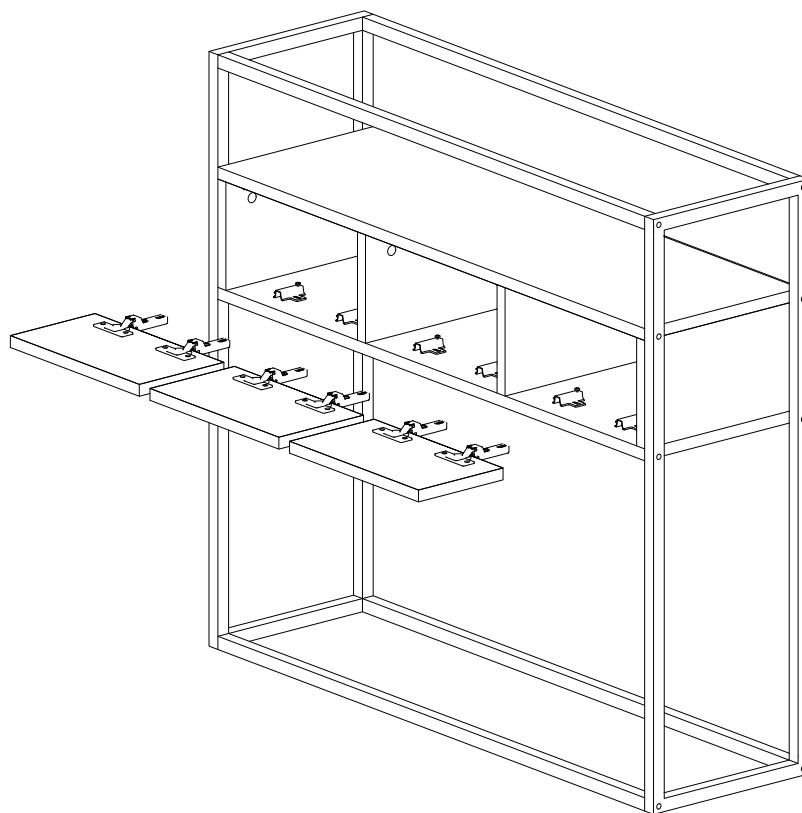

STEP 10 :

